



## Wiring Diagram for Strobe Power Supply (Model WRPS-66)

ROUTE 145, WINTHROP ROAD  
 CHESTER, CONNECTICUT 06412-0684  
 TELEPHONE: (860) 526-9504  
 FAX: (860) 526-4078

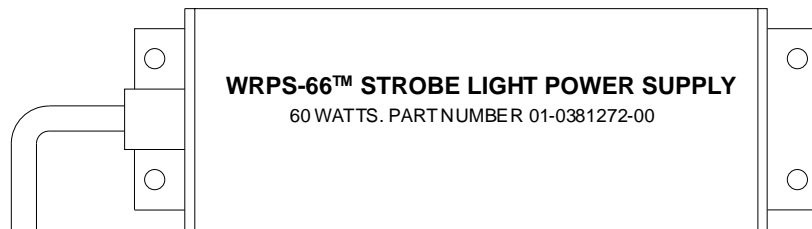


**WARNING:** The strobe light power supply is a high voltage device. Do not touch or move tube assembly while in operation. Wait at least 10 minutes after turning off power before beginning any work or troubleshooting.

**WARNING:** Reversed polarity during installation of the strobe light power supply will blow the fuse to prevent damage to the unit. When installing a strobe light system, make sure that this fuse is easily accessible

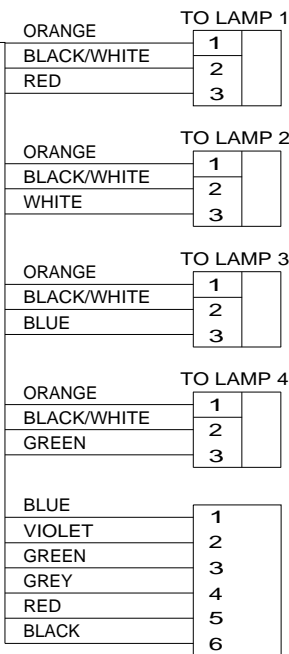

STROBE OUTLETS 1 & 3 FLASH SIMULTANEOUSLY.  
 RATE: 70 DOUBLE DOUBLE STROBE LIGHT FLASHES PER MINUTE/PER OUTLET

STROBE OUTLETS 2 & 4 FLASH SIMULTANEOUSLY.  
 RATE: 70 DOUBLE DOUBLE STROBE LIGHT FLASHES PER MINUTE/PER OUTLET

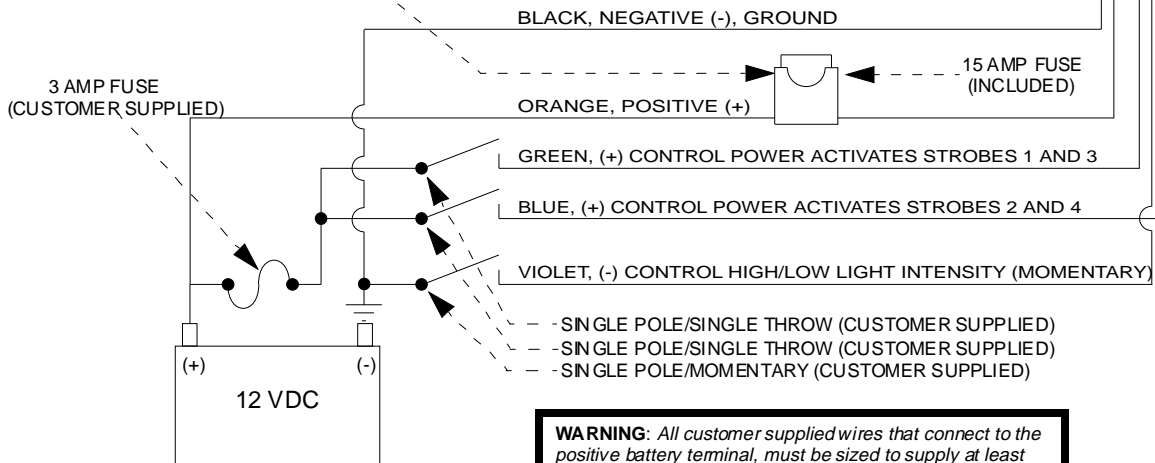

**WARNING:** All customer supplied wires that connect to the positive battery terminal, must be sized to supply at least 125% of the maximum operating current and must be fused "AT THE BATTERY" to carry that load!