


ROUTE 145, WINTHROP ROAD
 CHESTER, CONNECTICUT 06412-0684
 TELEPHONE: (860) 526-9504
 FAX: (860) 526-4078

CAUTION! Replacing any halogen bulb requires the use of safety glasses to prevent injury.

CAUTION! Do not handle the bulb with bare hands. Use gloves to prevent possible injury.

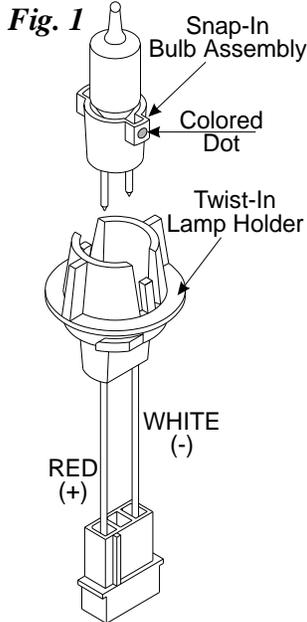


Your new Twist-In Lamp Holder....

The replacement lamp holder you have received allows for faster, easier lamp replacement, in the event of a failure. This new lamp holder is installed in the same manner as your previous lamp holder. The new lamp wires connect exactly as before. Bulb replacement, however, is performed differently and this procedure is explained below.

To replace a Snap-In bulb....

1. Be sure the power to the lamp is turned off.
2. Insert a small, flat-blade screwdriver into the space between the twist-in lamp holder and the snap-in bulb assembly.
3. Gently rotate the screwdriver as shown in Fig. 2. Repeat this action until the bulb is loose.
4. Pull the bulb in an upward direction until it is free.
5. Verify that the replacement bulb is the correct wattage by the colored dot on the bulb assembly (see "Part Numbers"). Insert the alignment tab of the new bulb into the lamp holder and press downwards to lock the new bulb into place.

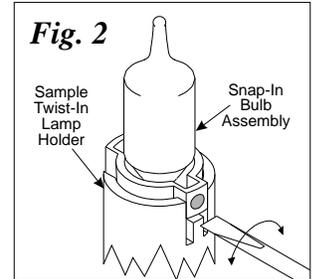

Part Numbers

Twist-In Lamp Holder (no bulb)
 Snap-In Bulb Assembly (50 Watt/Blue Dot)


SNADAPT
 H50SN 12

©1996 Whelen Engineering Company.
 Form No. 13129 (053196)

ROUTE 145, WINTHROP ROAD
 CHESTER, CONNECTICUT 06412-0684
 TELEPHONE: (860) 526-9504
 FAX: (860) 526-4078

CAUTION! Replacing any halogen bulb requires the use of safety glasses to prevent injury.

CAUTION! Do not handle the bulb with bare hands. Use gloves to prevent possible injury.

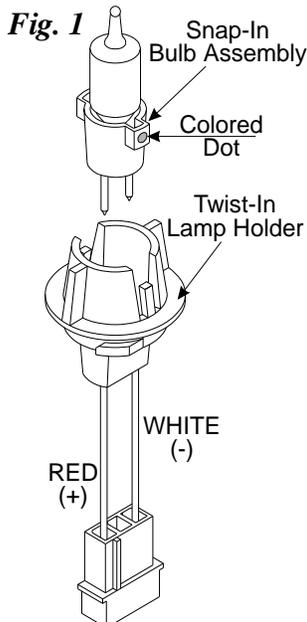


Your new Twist-In Lamp Holder....

The replacement lamp holder you have received allows for faster, easier lamp replacement, in the event of a failure. This new lamp holder is installed in the same manner as your previous lamp holder. The new lamp wires connect exactly as before. Bulb replacement, however, is performed differently and this procedure is explained below.

To replace a Snap-In bulb....

1. Be sure the power to the lamp is turned off.
2. Insert a small, flat-blade screwdriver into the space between the twist-in lamp holder and the snap-in bulb assembly.
3. Gently rotate the screwdriver as shown in Fig. 2. Repeat this action until the bulb is loose.
4. Pull the bulb in an upward direction until it is free.
5. Verify that the replacement bulb is the correct wattage by the colored dot on the bulb assembly (see "Part Numbers"). Insert the alignment tab of the new bulb into the lamp holder and press downwards to lock the new bulb into place.

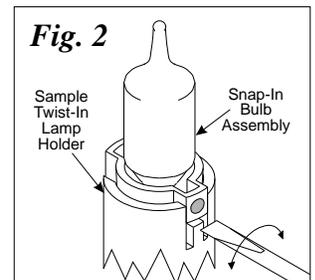

Part Numbers

Twist-In Lamp Holder (no bulb)
 Snap-In Bulb Assembly (50 Watt/Blue Dot)

SNADAPT
 H50SN 12

©1996 Whelen Engineering Company.
 Form No. 13129 (053196)