

# WHELEN<sup>®</sup>

ENGINEERING COMPANY INC.


Route 145, Winthrop Road,  
Chester, Connecticut 06412  
Phone: (860) 526-9504  
Fax: (860) 526-4078

Internet: [www.whelen.com](http://www.whelen.com)  
Sales e-mail: [autosale@whelen.com](mailto:autosale@whelen.com)  
Canadian Sales e-mail: [autocan@whelen.com](mailto:autocan@whelen.com)  
Customer Service e-mail: [custserv@whelen.com](mailto:custserv@whelen.com)

## Pattern Selection Procedure . . .

**IMPORTANT! Pattern selection requires the LED to be turned on. DO NOT LOOK DIRECTLY AT THE LEDs WHILE THE UNIT IS IN OPERATION!**

1. Remove Lens.
2. Locate the Pattern Activation Pins for your model LED. Turn the LED flasher on.

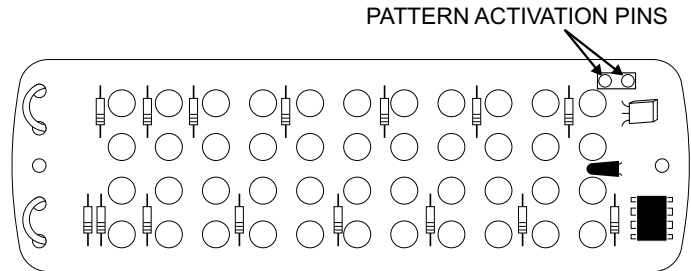

**Note: The above LED is shown for reference only. The procedure outlined herein is applicable to all LED flasher boards. Also the actual location of these pins will vary between models. The electrical components shown will not be visible on encapsulated LED boards.**

3. To cycle up through all of the available flash patterns, use a penny to contact both Pattern Activation Pins momentarily, (less than 1 second) and release. After 5 seconds of operation, the pattern selected is now the default pattern and will remain so until another pattern is selected. To cycle backwards through the available patterns, hold the penny against the Pattern Activation Pins for more than 1 second and release.
4. Re-mount the lens.

©1999 Whelen Engineering Company Inc.  
Form No.13425A (052002)

# WHELEN<sup>®</sup>

ENGINEERING COMPANY INC.


Route 145, Winthrop Road,  
Chester, Connecticut 06412  
Phone: (860) 526-9504  
Fax: (860) 526-4078

Internet: [www.whelen.com](http://www.whelen.com)  
Sales e-mail: [autosale@whelen.com](mailto:autosale@whelen.com)  
Canadian Sales e-mail: [autocan@whelen.com](mailto:autocan@whelen.com)  
Customer Service e-mail: [custserv@whelen.com](mailto:custserv@whelen.com)

## Pattern Selection Procedure . . .

**IMPORTANT! Pattern selection requires the LED to be turned on. DO NOT LOOK DIRECTLY AT THE LEDs WHILE THE UNIT IS IN OPERATION!**

1. Remove Lens.
2. Locate the Pattern Activation Pins for your model LED. Turn the LED flasher on.

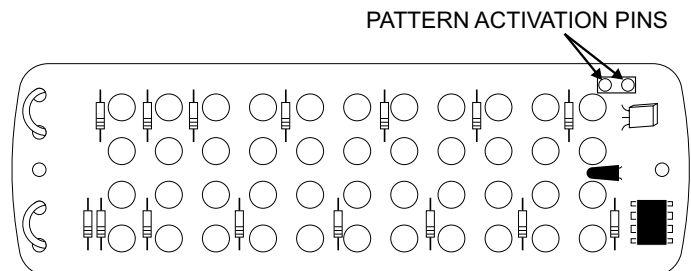

**Note: The above LED is shown for reference only. The procedure outlined herein is applicable to all LED flasher boards. Also the actual location of these pins will vary between models. The electrical components shown will not be visible on encapsulated LED boards.**

3. To cycle up through all of the available flash patterns, use a penny to contact both Pattern Activation Pins momentarily, (less than 1 second) and release. After 5 seconds of operation, the pattern selected is now the default pattern and will remain so until another pattern is selected. To cycle backwards through the available patterns, hold the penny against the Pattern Activation Pins for more than 1 second and release.
4. Re-mount the lens.

©1999 Whelen Engineering Company Inc.  
Form No.13425A (052002)