

WHELEN[®]

ENGINEERING COMPANY INC.

51 Winthrop Road
Chester, Connecticut 06412-0684
Phone: (860) 526-9504
Fax: (860) 526-4078
Internet: www.whelen.com
Sales e-mail: autosale@whelen.com
Canadian Sales e-mail: autocan@whelen.com
Customer Service e-mail: custserv@whelen.com


Installation Guide: 400 Series Linear-LED[®] Lighthouse

Safety First

This document provides all the necessary information to allow your Whelen product to be properly and safely installed. Before beginning the installation and/or operation of your new product, the installation technician and operator must read this manual completely. Important information is contained herein that could prevent serious injury or damage.

- **Proper installation of this product requires the installer to have a good understanding of automotive electronics, systems and procedures.**
- **If mounting this product requires drilling holes, the installer MUST be sure that no vehicle components or other vital parts could be damaged by the drilling process. Check both sides of the mounting surface before drilling begins. Also de-burr any holes and remove any metal shards or remnants. Install grommets into all wire passage holes.**
- **If this manual states that this product may be mounted with suction cups, magnets, tape or Velcro[®], clean the mounting surface with a 50/50 mix of isopropyl alcohol and water and dry thoroughly.**
- **Do not install this product or route any wires in the deployment area of your air bag. Equipment mounted or located in the air bag deployment area will damage or reduce the effectiveness of the air bag, or become a projectile that could cause serious personal injury or death. Refer to your vehicle owner's manual for the air bag deployment area. The User/Installer assumes full responsibility to determine proper mounting location, based on providing ultimate safety to all passengers inside the vehicle.**
- **For this product to operate at optimum efficiency, a good electrical connection to chassis ground must be made. The recommended procedure requires the product ground wire to be connected directly to the NEGATIVE (-) battery post.**
- **If this product uses a remote device to activate or control this product, make sure that this control is located in an area that allows both the vehicle and the control to be operated safely in any driving condition.**
- **Do not attempt to activate or control this device in a hazardous driving situation.**
- **This product contains either strobe light(s), halogen light(s), high-intensity LEDs or a combination of these lights. Do not stare directly into these lights. Momentary blindness and/or eye damage could result.**
- **Use only soap and water to clean the outer lens. Use of other chemicals could result in premature lens cracking (crazing) and discoloration. Lenses in this condition have significantly reduced effectiveness and should be replaced immediately. Inspect and operate this product regularly to confirm its proper operation and mounting condition. Do not use a pressure washer to clean this product.**
- **It is recommended that these instructions be stored in a safe place and referred to when performing maintenance and/or reinstallation of this product.**
- **FAILURE TO FOLLOW THESE SAFETY PRECAUTIONS AND INSTRUCTIONS COULD RESULT IN DAMAGE TO THE PRODUCT OR VEHICLE AND/OR SERIOUS INJURY TO YOU AND YOUR PASSENGERS!**

For warranty information regarding this product, visit www.whelen.com/warranty

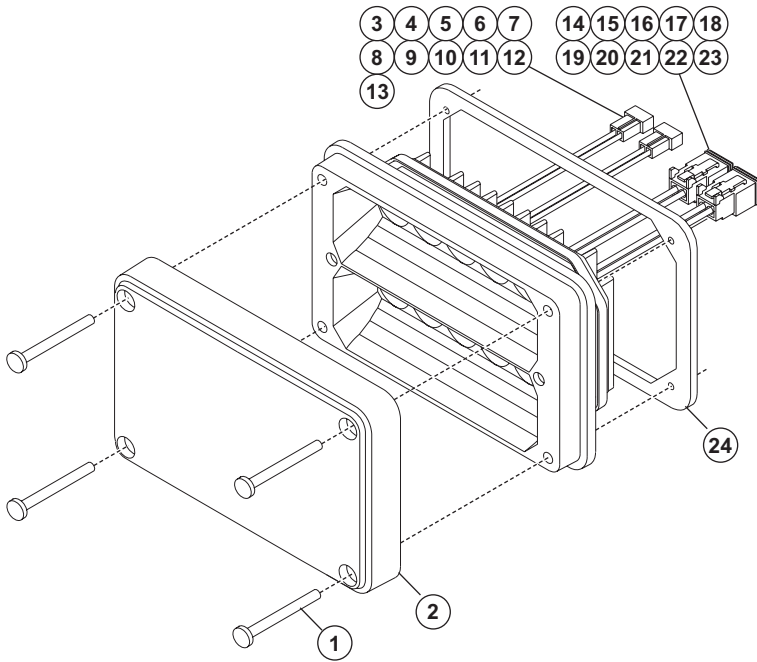


QTY	QTY	ITEM	PART NUMBER	DESCRIPTION
*	*		01-06637832__	LIGHTHEAD 400 Linear-LED® / AMP
*	*		01-06637834__	LIGHTHEAD 400 Linear-LED® DEUTSCH
4	4	1	15-061416-240	SCREW / #6 X 1-1/2" PPHSMS
1	1	2	68-3183725-3S	LENS / CLEAR NON OPTIC W/ SEAL
-	A/R	3	02-0364528211	SUB ASSY / 400 LED SPLIT AMB/AMB/AMP
-	A/R	4	02-0364528222	SUB ASSY / 400 LED SPLIT BLU/BLU/AMP
-	A/R	5	02-0364528233	SUB ASSY / 400 LED SPLIT WHT/WHT/AMP
-	A/R	6	02-0364528255	SUB ASSY / 400 LED SPLIT RED/RED/AMP
-	A/R	7	02-0364528244	SUB ASSY / 400 LED SPLIT GRN/GRN/AMP
-	A/R	8	02-0364528212	SUB ASSY / 400 LED SPLIT AMB/BLU/AMP
-	A/R	9	02-0364528213	SUB ASSY / 400 LED SPLIT AMB/WHT/AMP
-	A/R	10	02-0364528215	SUB ASSY / 400 LED SPLIT AMB/RED/AMP
-	A/R	11	02-0364528223	SUB ASSY / 400 LED SPLIT BLU/WHT/AMP
-	A/R	12	02-0364528225	SUB ASSY / 400 LED SPLIT BLU/RED/AMP
-	A/R	13	02-0364528235	SUB ASSY / 400 LED SPLIT WHT/RED/AMP
A/R	-	14	02-0364528811	SUB ASSY / 400 LED SPLIT AMB-AMB / DEUTSCH
A/R	-	15	02-0364528822	SUB ASSY / 400 LED SPLIT BLU-BLU / DEUTSCH
A/R	-	16	02-0364528833	SUB ASSY / 400 LED SPLIT WHT-WHT / DEUTSCH
A/R	-	17	02-0364528855	SUB ASSY / 400 LED SPLIT RED-RED / DEUTSCH
A/R	-	18	02-0364528812	SUB ASSY / 400 LED SPLIT AMB-BLU / DEUTSCH
A/R	-	19	02-0364528813	SUB ASSY / 400 LED SPLIT AMB-WHT / DEUTSCH
A/R	-	20	02-0364528815	SUB ASSY / 400 LED SPLIT AMB-RED / DEUTSCH
A/R	-	21	02-0364528823	SUB ASSY / 400 LED SPLIT BLU-WHT / DEUTSCH
A/R	-	22	02-0364528825	SUB ASSY / 400 LED SPLIT BLU-RED / DEUTSCH
A/R	-	23	02-0364528835	SUB ASSY / 400 LED SPLIT WHT-RED / DEUTSCH
1	1	24	38-0463924-00	GASKET / SURFACE MOUNTING

PART NUMBER KEY:				CONNECTOR:	LED COLOR 1 or 2:
BASIC P/N	CONNECTOR	LED COLOR 1	LED COLOR 2	2 = 2 POS AMP	1 = AMBER 4 = GREEN
01-0663783				4 = 2 POS DEUTSCH	2 = BLUE 5 = RED
					3 = WHITE

IMPORTANT NOTICE! This product has been designed for improved visibility. Prior to installing this product on any vehicle, check your state motor vehicle codes to confirm that this product complies with all state statutes.

WARNING! The LED must be connected to an electronic flasher. Allowing the LED to steady burn will damage the lighthouse and void the warranty.


WARNING! All customer supplied wires that connect to the positive terminal of the battery must be sized to supply at least 125% of the maximum operating current and **FUSED** at the battery to carry that load. **DO NOT USE CIRCUIT BREAKERS WITH THIS PRODUCT!**

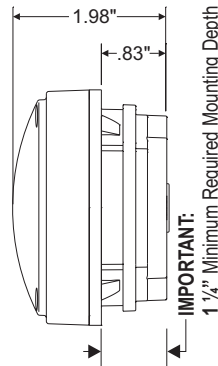

WIRING:

POSITIVE / +12 VDC: Wire color is whatever the color of the LED is when the lighthouse is switched on. (AMBER, BLUE, WHITE, GREEN or RED)

NEGATIVE / Ground: BLACK

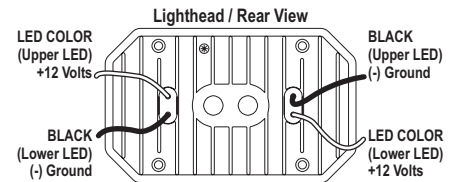

Installation:

1. Position the lighthouse in its approximate mounting location to make sure that the lighthouse will not interfere with any existing equipment. Also be aware of any and all items on the opposite side of the mounting surface to prevent any possible damage to existing components. A 1 1/4" minimum mounting depth is required.
2. Remove the lighthouse. Measure and mark the mounting holes off onto the mounting surface and cut-out as shown.
3. Using an appropriately sized drill bit for a #6 sheet metal screw, drill the 4 pilot holes.
4. Cut out and remove the area indicated in the mounting dimensions.
5. Route the wires to power (cables are customer supplied).
6. Plug the lighthouse in and test the operation before securing it to the vehicle.
7. Secure the assembly onto the mounting surface with the supplied sheet metal screws.

