

WHELEN[®]

ENGINEERING COMPANY INC.

51 Winthrop Road
Chester, Connecticut 06412-0684
Phone: (860) 526-9504
Fax: (860) 526-4078
Internet: www.whelen.com
Sales e-mail: autosale@whelen.com
Canadian Sales e-mail: canadiansales@whelen.com
Customer Service e-mail: custserv@whelen.com

Installation Guide:
Inner Edge[®] Split & Full Size
Interior Lightbar (Lo-Pro[™])
2006 Impala, Charger, Crown Vic, Expedition
2007 Crown Vic, Tahoe, Suburban, F-150
2007-present F-250, F-350, 2010 Ford Fusion
2011 Expedition, Tahoe, Taurus,
Charger, Explorer

Safety First

This document provides all the necessary information to allow your Whelen product to be properly and safely installed. Before beginning the installation and/or operation of your new product, the installation technician and operator must read this manual completely. Important information is contained herein that could prevent serious injury or damage.

- **Proper installation of this product requires the installer to have a good understanding of automotive electronics, systems and procedures.**
- **Failure to use specified installation parts and/or hardware will void the product warranty!**
- **If mounting this product requires drilling holes, the installer MUST be sure that no vehicle components or other vital parts could be damaged by the drilling process. Check both sides of the mounting surface before drilling begins. Also de-burr any holes and remove any metal shards or remnants. Install grommets into all wire passage holes.**
- **If this manual states that this product may be mounted with suction cups, magnets, tape or Velcro[®], clean the mounting surface with a 50/50 mix of isopropyl alcohol and water and dry thoroughly.**
- **Do not install this product or route any wires in the deployment area of your air bag. Equipment mounted or located in the air bag deployment area will damage or reduce the effectiveness of the air bag, or become a projectile that could cause serious personal injury or death. Refer to your vehicle owner's manual for the air bag deployment area. The User/Installer assumes full responsibility to determine proper mounting location, based on providing ultimate safety to all passengers inside the vehicle.**
- **For this product to operate at optimum efficiency, a good electrical connection to chassis ground must be made. The recommended procedure requires the product ground wire to be connected directly to the NEGATIVE (-) battery post.**
- **If this product uses a remote device to activate or control this product, make sure that this control is located in an area that allows both the vehicle and the control to be operated safely in any driving condition.**
- **Do not attempt to activate or control this device in a hazardous driving situation.**
- **This product contains either strobe light(s), halogen light(s), high-intensity LEDs or a combination of these lights. Do not stare directly into these lights. Momentary blindness and/or eye damage could result.**
- **Use only soap and water to clean the outer lens. Use of other chemicals could result in premature lens cracking (crazing) and discoloration. Lenses in this condition have significantly reduced effectiveness and should be replaced immediately. Inspect and operate this product regularly to confirm its proper operation and mounting condition. Do not use a pressure washer to clean this product.**
- **It is recommended that these instructions be stored in a safe place and referred to when performing maintenance and/or reinstallation of this product.**
- **FAILURE TO FOLLOW THESE SAFETY PRECAUTIONS AND INSTRUCTIONS COULD RESULT IN DAMAGE TO THE PRODUCT OR VEHICLE AND/OR SERIOUS INJURY TO YOU AND YOUR PASSENGERS!**

For warranty information regarding this product, visit www.whelen.com/warranty


IMPORTANT AIR BAG WARNING! Do not install this product or route any wires in the deployment area of your air bag. Equipment mounted or located in the air bag deployment area will damage or reduce the effectiveness of the air bag, or become a projectile that could cause serious personal injury or death. Refer to your vehicle owners manual for the air bag deployment area. The User/Installer assumes full responsibility to determine proper mounting location, based on providing ultimate safety to all passengers.

Installation / Split Bar:

IMPORTANT! The lightbar should be located a minimum of 16" from any radio antennas!

Note: When routing the wires, it is important to choose a path that will keep the wires away from excessive heat or any vehicle equipment that could compromise the integrity of the wires (ex. trunk lids, door jams, etc.)

1. Locate and install the rubber window seal (included) onto the lower, leading edge and side of the housing.
2. Using an appropriately sized Torx head screwdriver, loosen (do not remove) the three screws securing the passenger-side visor swivel bracket to the vehicle.
3. Remove the screws securing the visor clip to the vehicle. Remove and retain the clip and all hardware.

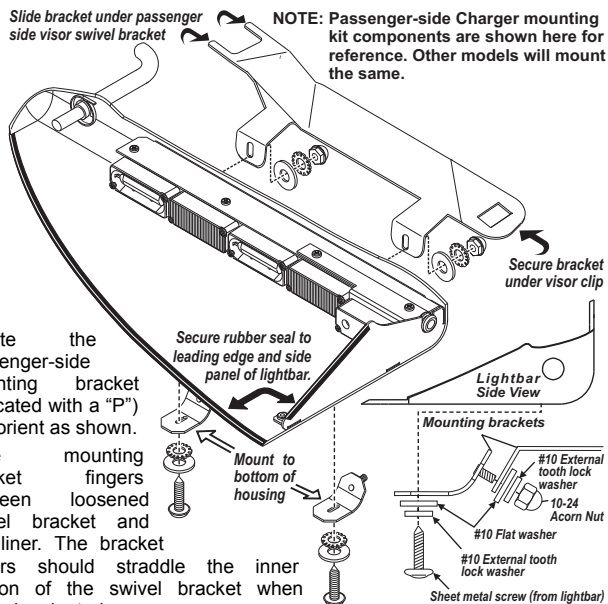

4. Locate the passenger-side mounting bracket (indicated with a "P") and orient as shown.
5. Slide mounting bracket fingers between loosened swivel bracket and headliner. The bracket fingers should straddle the inner section of the swivel bracket when properly oriented.
6. Position the keyed opening of the mounting bracket directly under the mounting location for the visor clip removed in step 2. With the bracket in this position, remount the visor clip in its original location using the original hardware.
7. Firmly tighten any hardware loosened in this procedure.
8. Repeat this procedure for the driver-side assembly and mounting bracket (indicated with a "D").
9. Position the lightbar as shown. Using the hardware provided, secure the lightbar to the mounting bracket.
10. When properly mounted, the rubber seal will be in full contact with the vehicle windshield and roof. This is to prevent light output from entering the passenger compartment. When this has been achieved, tighten mounting hardware firmly to maintain contact.
11. Route the lightbar cable down the vehicle A-pillar to your control head.
12. Make all wiring connections using the information in the wiring diagram.

Wiring:


WARNING! All customer supplied wires that connect to the positive terminal of the battery must be sized to supply at least 125% of the maximum operating current and FUSED at the battery to carry that load. DO NOT USE CIRCUIT BREAKERS WITH THIS PRODUCT!

Operation:

This lightbar is powered and controlled by an 8-conductor cable exiting the lightbar. All functions listed here are not present in all lightbars.

White/Green - Scan-Lock™

The WHITE/GREEN wire allows you to choose from the available flash patterns listed below. First you must activate the lighthouse(s) you wish to change:

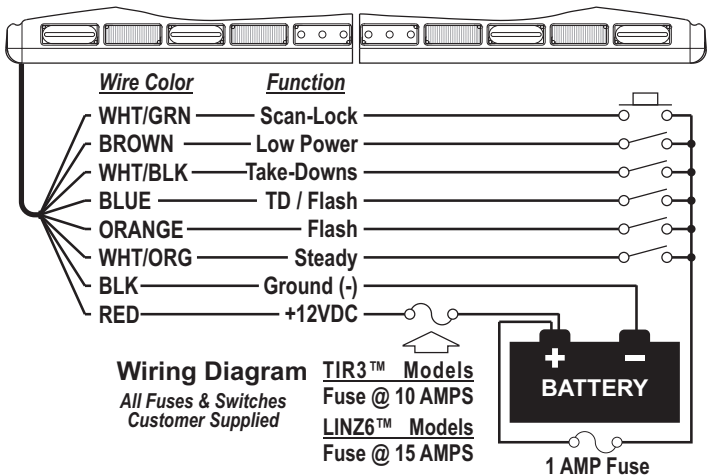

TO CYCLE THROUGH ALL PATTERNS: Apply +12 VDC to the WHITE/GREEN wire for less than 1 second and release to cycle forward. Apply +12 VDC to the WHITE/GREEN wire for more than 1 second and release to cycle backward.

TO SET A PATTERN AS DEFAULT: When the pattern is displayed, allow it to run for more than 5 seconds. The lighthouse will now display this pattern when active.

TO RESET TO THE FACTORY DEFAULT PATTERN: Turn off power and apply +12 VDC to the WHITE/GREEN wire while turning power on.

Use a normally open momentary switch to control Scan-Lock.

Available Flash Patterns:

- | | |
|--------------------------------|---------------------------------|
| 1. SignalAlert™ 75 Alternating | 13. SingleFlash 150 Alternating |
| 2. SignalAlert™ 75 In-Out | 14. SingleFlash 150 In-Out |
| 3. SignalAlert™ 75 Left-Right | 15. SingleFlash 150 Left-Right |
| 4. SingleFlash 90 Alternating | 16. DoubleFlash 75 Alternating |
| 5. SingleFlash 90 In-Out | 17. DoubleFlash 75 In-Out |
| 6. SingleFlash 90 Left-Right | 18. DoubleFlash 75 Left-Right |
| 7. CometFlash® 75 Alternating | 19. ActionFlash™ Alternating |
| 8. CometFlash® 75 In-Out | 20. ActionFlash™ In-Out |
| 9. CometFlash® 75 Left-Right | 21. ActionFlash™ Left-Right |
| 10. SingleFlash 75 Alternating | 22. ActionScan™ Alternating |
| 11. SingleFlash 75 In-Out | 23. ActionScan™ In-Out |
| 12. SingleFlash 75 Left-Right | 24. ActionScan™ Alternating |

Brown: Hi/Low Power

The low power feature allows you to step the lightbar down to run in low power for night time use. Fuse this wire @ 1AMP. A single pole / single throw switch can be used to control Hi/Low power.

To activate Low power operation: Apply +12 VDC to the BROWN wire.
To restore regular power: Remove the BROWN wire from +12 VDC.

White/Black: Take-Downs

Apply +12 VDC to the WHITE/BLACK wire to activate the take-downs. Fuse this wire @ 1AMP.

Blue: Take-Down Flasher

Apply +12 VDC to the BLUE wire to cause the take-downs to flash. Fuse this wire @ 1AMP.

White/Orange: Steady-burn option

Apply +12 VDC to the WHITE/ORANGE wire to activate the center steady-burn lighthouse(s). Fuse this wire @ 1AMP.

Orange: Flasher

Apply +12 VDC to the ORANGE wire and all of the lighthouses that are activated will flash. Fuse this wire @ 1AMP.

IMPORTANT! Before returning this vehicle to active service, visually confirm the proper operation of this product, as well as all vehicle components/equipment.

IMPORTANT! Do not install product or route any wires in the deployment area of your air bag. (See air bag warning Pg. 1).

IMPORTANT! The lightbar should be located a minimum of 16" from any radio antennas!


Important note for Chevrolet Impalas:

When mounting to a Chevrolet Impala, the optical gasket must be installed. Failure to do so could result in reflected light within the passenger compartment.

Installation / Full Bar:


When routing the wires, it is important to choose a path that will keep the wires away from excessive heat or any vehicle equipment that could compromise the integrity of the wires.

1. Locate and install the rubber window seal onto the lower, leading edge of the housing.
2. Using an appropriately sized Torx® head screwdriver, loosen the three screws securing the driver-side visor swivel bracket to the vehicle. Do not remove these screws.
3. Remove the screws securing the visor clip to the vehicle. Remove and retain the clip and all hardware.
4. Locate the driver-side mounting bracket (indicated with a "D" label). Orient bracket as shown.
5. Slide the mounting bracket fingers between the loosened swivel bracket and the headliner. The bracket fingers should straddle the inner section of the swivel bracket when properly oriented.
6. Position the keyed opening of the mounting bracket directly under the mounting location for the visor clip removed in step 2. With the bracket in this position, re-mount the visor clip in its original location using the original hardware. Firmly tighten any hardware loosened in this procedure.
7. Repeat this procedure for passenger-side (indicated with a "P" label).

06 Crown Vic Lo-Pro only	Position	Vehicle	Bracket Used
	Inboard -	All except Lo-Pro	Short Bracket
	Outboard -	Tahoe Crown Vic Impala	Short Bracket Long Bracket Long Bracket


NOTE: Depending on the vehicle's roofline, it may be necessary to bend the mounting brackets to position the housing against the windshield.

Adjust bracket angle if necessary

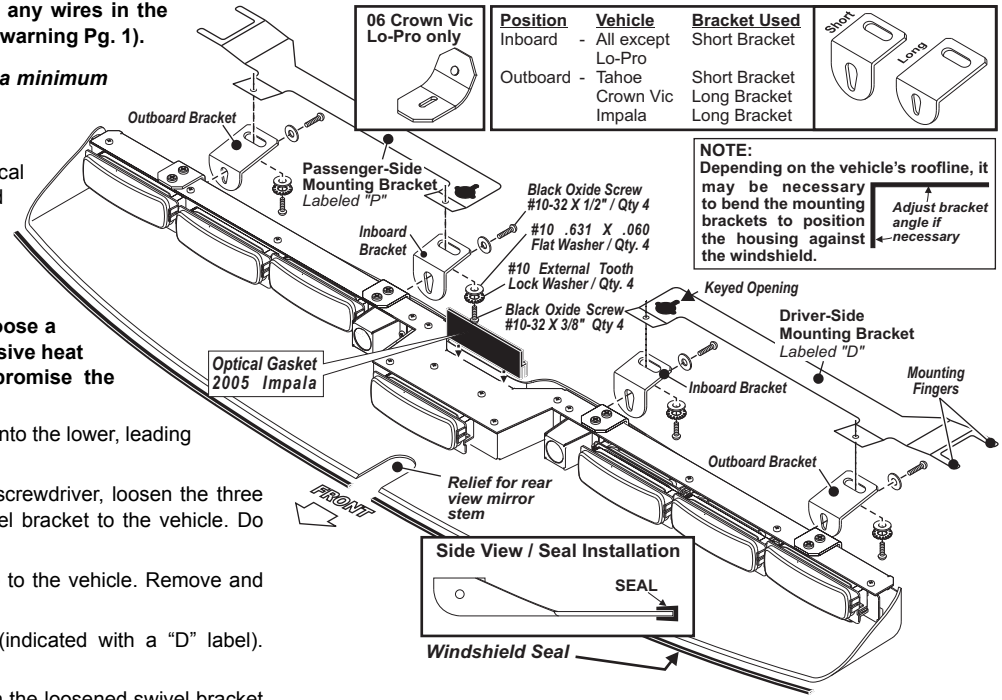

IMPORTANT WARNING!
CAUTION! DO NOT LOOK DIRECTLY AT THESE LED'S WHILE THEY ARE ON. MOMENTARY BLINDNESS AND/OR EYE DAMAGE COULD RESULT!

8. Using provided #10-32 x 3/8" black oxide screws, secure the lightbar to the mounting brackets. Tighten this hardware firmly. Route lightbar cable down vehicle A-pillar to control head. See previous page for wiring.

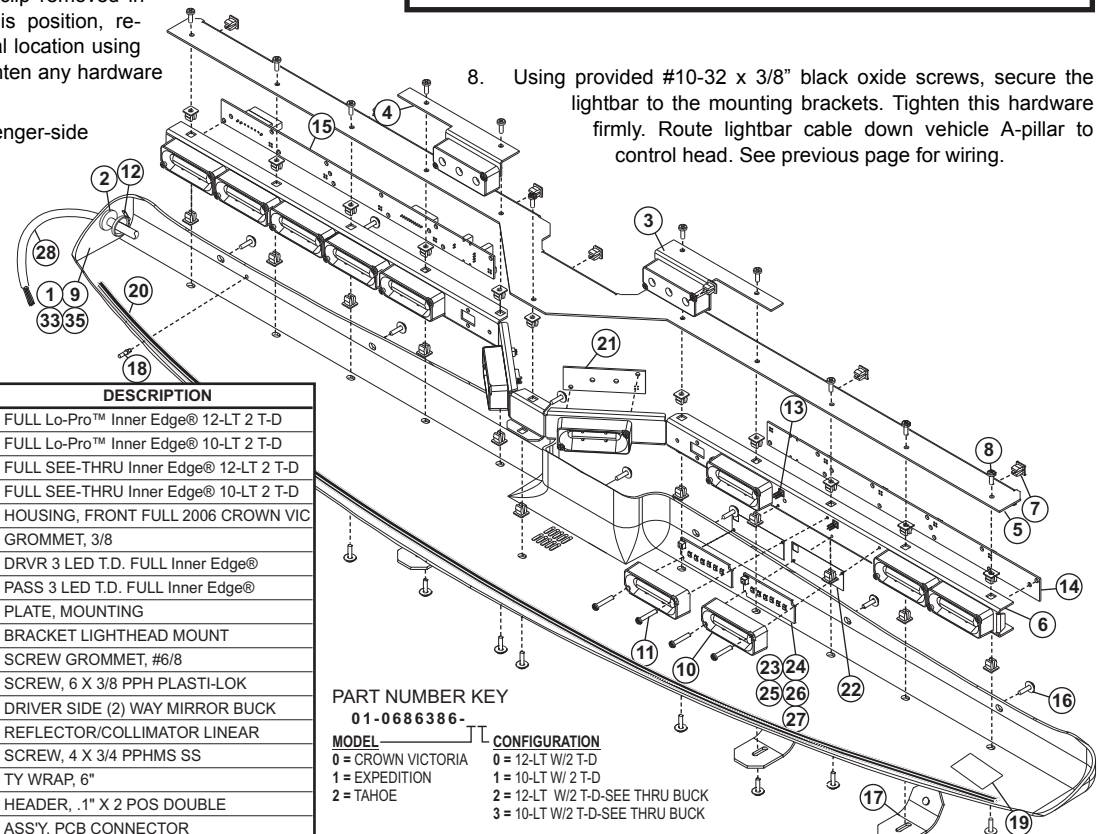

QTY	QTY	QTY	QTY	ITEM	PART NUMBER	DESCRIPTION
		*			01-0686386-0	FULL Lo-Pro™ Inner Edge® 12-LT 2 T-D
		*			01-0686386-1	FULL Lo-Pro™ Inner Edge® 10-LT 2 T-D
	*				01-0686386-02	FULL SEE-THRU Inner Edge® 12-LT 2 T-D
	*				01-0686386-03	FULL SEE-THRU Inner Edge® 10-LT 2 T-D
-	-	A/R	A/R	1	11-484501-000	HOUSING, FRONT FULL 2006 CROWN VIC
1	1	1	1	2	21-11091202-0	GROMMET, 3/8"
1	1	1	1	3	01-026B068-34	DRVR 3 LED T.D. FULL Inner Edge®
1	1	1	1	4	01-026B068-33	PASS 3 LED T.D. FULL Inner Edge®
1	1	1	1	5	07-784507-023	PLATE, MOUNTING
1	1	1	1	6	07-284506-023	BRACKET LIGHTHEAD MOUNT
29	29	29	29	7	13-062C40-16J	SCREW GROMMET, #6/8
11	11	11	11	8	15-06521B-060	SCREW, 6 X 3/8 PPH PLASTI-LOK
1	1	-	-	9	11-486072-000	DRIVER SIDE (2) WAY MIRROR BUCK
10	12	10	12	10	02-0323547-00	REFLECTOR/COLLIMATOR LINEAR
20	24	20	24	11	14-040216-120	SCREW, 4 X 3/4 PHMS SS
1	1	1	1	12	26-0215001-06	TY WRAP, 6"
10	12	10	12	13	40-0620400-03	HEADER, .1" X 2 POS DOUBLE
1	1	1	1	14	02-0186373-00	ASS'Y, PCB CONNECTOR
1	1	1	1	15	02-0186379-00	ASSY, PCB MOTHER/CONTROL BOARD
18	18	18	18	16	15-M23B1C-120	SCREW, M4.2 X 12mm PHIL WSHRHD BLK
4	4	4	4	17	07-243360-023	BRACKET, MOUNTING
1	1	1	1	18	68-1900375-30	LIGHT PIPE
1	1	1	1	19	10-0523554-00	LABEL
1	1	1	1	20	38-0543208-04	SEAL, EXTRUDED
2	2	2	2	21	02-0146615-00	1 LIGHT CONNECTOR BOARD, SMT
10	12	10	12	22	56-023577-000	CO-THERM INSULATOR
A/R	A/R	A/R	A/R	23	02-016B753-A-00	PCB 6 LED ARRAY - PCAMBER
A/R	A/R	A/R	A/R	24	02-016C296-20	PCB 6 LED ARRAY - BLUE
A/R	A/R	A/R	A/R	25	02-016C296-30	PCB 6 LED ARRAY - WHITE

PART NUMBER KEY
01-0686386-
MODEL
0 = CROWN VICTORIA
1 = EXPEDITION
2 = TAHOE
CONFIGURATION
0 = 12-LT W/2 T-D
1 = 10-LT W/ 2 T-D
2 = 12-LT W/2 T-D-SEE THRU BUCK
3 = 10-LT W/2 T-D-SEE THRU BUCK

A/R	A/R	A/R	A/R	26	02-016C296-40	PCB 6 LED ARRAY - GREEN
A/R	A/R	A/R	A/R	27	02-016C296-50	PCB 6 LED ARRAY - RED
1	1	1	1	28	46-0743403-00	ASSY, CABLE INPUT 18 GA 20'
1	1	1	1	29	39-1M17672-08	HOUSING, PLUG 8 POS
2	2	2	2	30	46-0746616-00	HARNESS, TAKE-DOWN
1	1	1	1	31	46-0768820-00	HARNESS, INTERCONNECT
1	1	A/R	A/R	32	01-0484643-00	KIT, MOUNTING 12 LT 2006 CROWN VIC
-	-	A/R	A/R	33	11-486709-000	HSNG, FRONT FULL 2011 EXPEDITION
-	-	A/R	A/R	34	01-0486386-10	KIT, MTG 12 LT 2011 EXPEDITION
-	-	A/R	A/R	35	11-486725-000	HOUSING, FRONT FULL 2011 TAHOE
-	-	A/R	A/R	36	01-0486386-20	KIT, MOUNTING 12 LT 2011 TAHOE

QTY	QTY	QTY	ITEM	PART NUMBER	DESCRIPTION	
	*			01-0684628-0	SPLIT Lo-Pro™ Inner Edge® 8LT 2 TD	
		*		01-0684628-1	SPLIT Lo-Pro™ Inner Edge® 4LT 1 TD	
	*			01-0684628-2	SPLIT Lo-Pro™ Inner Edge® 10LT no TD	
	*			01-0684628-3	SPLIT Lo-Pro™ Inner Edge® 5LT no TD	
A/R	A/R	A/R	1	11-484479-R00	HOUSING, FRNT PASS 2006 CHARGER	
1	1	1	2	21-11091202-0	GROMMET, 38	
-	A/R	A/R	4	11-484479-L00	HOUSING, FRNT DRV, 2006 CHARGER	
-	1	-	1	07-764741-123	PLATE, MOUNTING DRIVER	
1	1	1	7	07-264742-023	BRACKET, LIGHTING PASSENGER	
11	22	11	22	13-062C40-16J	SCREW, 6 X 3/8 PPH PLAST-FLOK	
4	8	4	8	15-06621B-060	SCREW, 6 X 3/8 PPH PLAST-FLOK	
1	1	1	13	02-0186959-000	ASSY, PCB MOTHER CONTROL BOARD	
A/R	A/R	A/R	15	07-264740-023	ENDCAP, PASSENGER 2006 CHARGER	
1	1	1	16	68-19000375-30	LIGHT PIPE * *	
2	4	2	4	17	68-5964727-000	REFLECTOR, TIR
10	20	8	16	14-040216-120	SCREW, 4 X 3/4 PPHMS SS	
5	10	4	8	19	56-023279-000	CO-THERM INSULATOR
5	10	4	8	20	40-0620400-03	HEADER, 1" X 2 POS DOUBLE
3	6	2	4	21	02-0323306-000	REFLECTOR/COLLIMATOR LINEAR
-	A/R	A/R	24	02-0164765-000	ASSY, PCB CONNECTOR	
-	A/R	A/R	24	07-264740-123	ENDCAP DRIVER 2006 CHARGER	
7	14	7	14	15-M23B1C-120	SCREW, M4.2 X 12mm PHIL. WSHR, BLK	
2	4	2	4	29	07-243360-023	BRACKET, MOUNTING
A/R	A/R	A/R	30	02-016D192-A0	ASSY, PCB 3 LED ARRAY - AMBER	
A/R	A/R	A/R	31	02-016D190-20	ASSY, PCB 3 LED ARRAY - BLUE	
A/R	A/R	A/R	32	02-016D190-30	ASSY, PCB 3 LED ARRAY - WHITE	
A/R	A/R	A/R	33	02-016D190-40	ASSY, PCB 3 LED ARRAY - GREEN	
A/R	A/R	A/R	34	02-016D190-50	ASSY, PCB 3 LED ARRAY - RED	
1	1	1	35	46-0743403-000	CABLE 90C-18 GA TPR 20 SOCKTS	
1	2	1	2	38-0543284-18	SEAL, EXTRUDED 18"	
1	2	1	2	37	38-0543208-02	SEAL, EXTRUDED 3.75"
1	1	1	38	10-0523205***	LABEL	
1	2	1	1	40	26-0215001-06	TY WRAP, 6"
A/R	-	A/R	-	41	01-0484628-01	KIT, MTG 45 LT 2006 CHARGER*
-	A/R	-	42	01-0484628-00	KIT, MTG 8/10 LT 2006 CHARGER*	
-	A/R	-	43	46-0743402-01	HARNESS, INTERCONNECT	
-	1	1	44	46-0743401-00	HARNESS, TAKE-DOWN	
1	1	1	45	39-1M17672-08	HOUSING, PLUG 8 POS	
A/R	A/R	A/R	46	11-484614-R00	HOUSING, FRNT PASS 2006 IMPALA	
-	A/R	-	47	11-484614-L00	HSNG, FRNT DRIVER 2006 IMPALA	
A/R	A/R	A/R	48	07-264811-023	ENDCAP PASSENGER 2006 IMPALA	
-	A/R	-	49	07-264811-123	ENDCAP DRIVER 2006 IMPALA	
-	A/R	-	50	01-0484628-10	KIT, MTG 8/10 LT 2006 IMPALA *	
-	A/R	-	51	01-0484628-11	KIT, MTG 45 LT 2006 IMPALA *	
A/R	A/R	A/R	52	11-484594-R00	HOUSING, FRNT PASS 2006 EXPEDITION	
-	A/R	-	53	11-484594-L00	HOUSING, FRNT DRV 2006 EXPEDITION	
A/R	A/R	A/R	54	07-264791-023	ENDCAP PASS 2006 EXPEDITION	
-	A/R	-	55	07-264791-123	ENDCAP DRIVER 2006 EXPEDITION	
-	A/R	-	56	01-0484628-20	KIT, MTG 8/10 LT 2006 EXPEDITION *	
A/R	-	A/R	-	57	01-0484628-21	KIT, MTG 45 LT 2006 EXPEDITION *
3	6	3	6	14-062216-041	SCREW, 6-32 X 1/4 PPHMS SEMS	
A/R	A/R	A/R	59	11-484549-R00	HOUSING, FR. PASS. '06/07 CROWN VIC.	
-	A/R	-	60	11-484549-L00	HOUSING, FR. DRV '06/07 CROWN VIC.	
A/R	A/R	A/R	61	07-264752-023	ENDCAP PASS '06/07 CROWN VIC	
-	A/R	-	62	07-264752-123	ENDCAP DRIVER '06/07 CROWN VIC	
-	A/R	-	63	01-0484628-30	KIT, MTG 8/10 LT '06/07 CROWN VIC.*	
A/R	-	A/R	-	64	01-0484628-31	KIT, MTG 45 LT '06/07 CROWN VIC.*

A/R	A/R	A/R	66	11-484602-R00	HSNG, FRNT PASS. '06-'09 SILVERADO	
-	A/R	-	67	11-484602-L00	HSNG, FRNT DRV '06-'09 SILVERADO	
A/R	A/R	A/R	78	07-26A078-023	ENDCAP, PASS '07 TAHOE/SUBURBAN	
-	A/R	-	79	07-26A078-123	ENDCAP, DRV '07 TAHOE/SUBURBAN	
-	A/R	-	80	01-0484628-60	KIT, MTG 8/10 LT '07 TAHOE/SUBURB.*	
A/R	-	A/R	-	81	01-0484628-61	KIT, MTG 45 LT '07 TAHOE/SUBURB.*
-	A/R	-	86	01-0484628-70	KIT, MTG 8/10 LT 2007 F250/F350 *	
A/R	-	A/R	-	87	01-0484628-71	KIT, MTG 45 LT 2007 F250/F350 *
A/R	A/R	A/R	88	11-484662-R00	HSNG, FRNT PASS. 2007 EXPLORER	
-	A/R	-	89	11-484662-L00	HSNG, FRNT DRIVER '07 EXPLORER	
A/R	A/R	A/R	90	07-264927-023	ENDCAP, PASSENGER '07 EXPLORER	
-	A/R	-	91	07-264927-123	ENDCAP, DRIVER 2007 EXPLORER	
-	A/R	-	92	01-0484628-80	KIT, MTG 8/10 LT '07 EXPLORER *	
A/R	-	A/R	-	93	01-0484613-R00	HOUSING, FRNT PASS. '06/07 F150
A/R	A/R	A/R	94	11-484613-L00	HOUSING, FRNT DRIVER '06/07 F150	
-	A/R	-	95	11-484613-R00	HOUSING, FRNT DRIVER '06/07 F150	
A/R	A/R	A/R	96	07-264810-023	ENDCAP, PASSENGER 2006/2007 F150	
-	A/R	-	97	07-264810-123	ENDCAP, DRIVER 2006/2007 F150	
-	A/R	-	98	01-0484628-90	KIT, MTG 8/10 LT 2006/2007 F150 *	
A/R	-	A/R	-	99	01-0484628-91	KIT, MTG 45 LT 2006/2007 F150 *
A/R	A/R	A/R	100	11-484790-R00	HSNG, FRNT PASS. 2008 F250/F350	
-	A/R	-	101	11-484790-L00	HSNG, FRNT DRIVER 2008 F250/F350	
A/R	A/R	A/R	102	07-26A366-023	ENDCAP, PASSENGER 2008 F250/F350	
-	A/R	-	103	07-26A366-123	ENDCAP, DRIVER 2008 F250/F350	
-	1	1	104	01-026B068-31	3 LED TAKE-DOWN ASSY-PASSENGER	
-	1	1	105	01-026B068-32	3 LED TAKE-DOWN ASSY-DRIVER SIDE	

-	A/R	-	106	46-0743402-02	HARNESS, INTERCONNECT 25"	
3	6	3	6	14-082215-050	8-32 X 5/16 PPHMS BLK OXIDE	
-	A/R	-	108	01-0486366-F0	KIT, MTG 8/10 LT '11 FORD EXPLOR. *	
A/R	-	A/R	-	109	01-0486366-F1	KIT, MTG 45 LT '11 FORD EXPLORER *
A/R	A/R	A/R	110	07-26D0292-023	ENDCAP PASS BLK IN-EDG '11 EXPLOR.	
-	A/R	-	111	07-26D0292-123	ENDCAP DRV BLK IN-EDG '11 EXPLOR.	
-	A/R	-	112	01-0486366-G0	KIT, MTG 8/10 LT 2011 CHARGER *	
A/R	-	A/R	-	113	01-0486366-G1	KIT, MTG 45 LT 2011 CHARGER *
A/R	A/R	A/R	114	11-486990-R00	HOUSING, FRNT PASS 2011 CHARGER	
-	A/R	-	115	11-486990-L00	HOUSING, FRNT DRV 2011 CHARGER	
A/R	A/R	A/R	116	07-26D305-023	BRKT, ENDCAP PASS BLK '11 CHARGER	
-	A/R	-	117	07-26D305-123	BRKT, ENDCAP DRV BLK '11 CHARGER	
-	A/R	-	118	01-0486366-J0	KIT, MTG 8/10 LT 2011 CAPRICE *	
A/R	-	A/R	-	119	01-0486366-J1	KIT, MOUNTING 45 LT 2011 CAPRICE *
A/R	A/R	A/R	120	11-487068-R00	HSNG, FRNT PASS. 2011 CAPRICE	
-	A/R	-	121	11-487068-L00	HSNG, FRNT DRIVER 2011 CAPRICE	
A/R	A/R	A/R	122	07-26D520-023	ENDCAP, PASSENGER 2011 CAPRICE	
-	A/R	-	123	07-26D520-123	ENDCAP, DRIVER 2011 CAPRICE	
-	A/R	-	124	01-0486366-D0	KIT, MTG 8/10 LT 2010 TAURUS *	
A/R	-	A/R	-	125	01-0486366-D1	KIT, MOUNTING 45 LT 2010 TAURUS *
A/R	A/R	A/R	126	11-4866726-R00	HSNG, FRNT PASS. 2010 TAURUS	
-	A/R	-	127	11-4866726-L00	HOUSING, FRNT DRIVER 2010 TAURUS	
A/R	A/R	A/R	128	07-26C819-023	ENDCAP, PASSENGER 2010 TAURUS	
-	A/R	-	129	07-26C819-123	ENDCAP, DRIVER 2010 TAURUS	
-	A/R	-	130	01-0486366-K0	KIT, MOUNTING 8/10 LT 2011 TAURUS *	
A/R	-	A/R	-	131	01-0486366-K1	KIT, MOUNTING 45 LT 2011 TAURUS *

* = NOT SHOWN

