

51 Winthrop Road

Chester, Connecticut 06412-0684

Phone: (860) 526-9504

Sales Email:autosale@whelen.com

Canadian Sales:canadiansales@whelen.com Customer Service:custserv@whelen.com

Safety First: This document provides all the necessary information to allow your Whelen product to be properly and safely installed. Before beginning the installation and/or operation of your new product, the installation technician and operator must read this manual completely. Important information is contained herein that could prevent serious injury or damage.

- Proper installation of this product requires the installer to have a good understanding of automotive electronics, systems and procedures.
- Whelen Engineering requires the use of waterproof butt splices and/or connectors if that connector could be exposed to moisture.
- Any holes, either created or utilized by this product, should be made both air- and watertight using a sealant recommended by your vehicle manufacturer.
- Failure to use specified installation parts and/or hardware will void the product warranty!
- If mounting this product requires drilling holes, the installer MUST be sure that no vehicle
 components or other vital parts could be damaged by the drilling process. Check both
 sides of the mounting surface before drilling begins. Also de-burr any holes and remove
 any metal shards or remnants. Install grommets into all wire passage holes.
- Do not install this product or route any wires in the deployment area of your air bag.
 Equipment mounted or located in the air bag deployment area will damage or reduce the
 effectiveness of the air bag, or become a projectile that could cause serious personal
 injury or death. Refer to your vehicle owner's manual for the air bag deployment area. The
 User/Installer assumes full responsibility to determine proper mounting location, based
 on providing ultimate safety to all passengers inside the vehicle.
- For this product to operate at optimum efficiency, a good electrical connection to chassis
 ground must be made. The recommended procedure requires the product ground wire to
 be connected directly to the NEGATIVE (-) battery post.

- If this product uses a remote device to activate or control this product, make sure that this
 control is located in an area that allows both the vehicle and the control to be operated
 safely in any driving condition.
- Do not attempt to activate or control this device in a hazardous driving situation
- This product contains either strobe light(s), halogen light(s), high-intensity LEDs or a combination of these lights. Do not stare directly into these lights. Momentary blindness and/or eye damage could result.
- Use only soap and water to clean the outer lens. Use of other chemicals could result in premature lens cracking (crazing) and discoloration. Lenses in this condition have significantly reduced effectiveness and should be replaced immediately. Inspect and operate this product regularly to confirm its proper operation and mounting condition. Do not use a pressure washer to clean this product.
- WARNING! All customer supplied wires that connect to the positive (+) terminal of the battery must be sized to supply at least 125% of the maximum operating current and <u>FUSED</u> "at the battery" to carry that load. DO NOT USE CIRCUIT BREAKERS WITH THIS PRODUCT!
- FAILURE TO FOLLOW THESE PRECAUTIONS AND INSTRUCTIONS COULD RESULT IN DAMAGE TO THE PRODUCT OR VEHICLE AND/OR SERIOUS INJURY TO YOU AND YOUR PASSENGERS!

Operation:

This product essentially functions as two independent lights; A warning light (colored LEDs) and a spot light (white LEDs). When the light is first turned on (by applying +12VDC to the Red wire), the warning light will be displayed. Turning the light off and then immediately back on will activate the spot light. Toggling the power off and on will switch between the two displays.

The warning light must be configured to display the desired flash pattern prior to installation.

The warning light can display a wide variety of flash patterns (see pattern list). As shown, each warning light flash pattern has two modes. Even numbered patterns will flash the colored LEDs only. Odd numbered patterns will alternate the colored LEDs with white LEDs.

To advance thru the patterns, activate the warning light and apply +12VDC to the WHT/VIO wire for less than 1 second. To cycle backwards, apply +12VDC to the WHT/VIO wire for more than 1 second.

Flash Patterns:


#	Pattern Pattern		
1	Steady	14/15	PingPong 120
2/3	SingleFlash 60	16/17	TrippleFlash™ 75
4/5	SingleFlash 90	18/19	TrippleFlash 120
6/7	SingleFlash 120	20/21	Sig-Alert Cal
8/9	DoubleFlash 75	22/23	Action/SingleFlash I
10/11	PingPong 75	24/25	Action/SignalFlash II
12/13	DoubleFlash 120	26/27	CalScan™

Installation:

- With the spotlight turned off, position the housing so that the light is facing upward.
- Locate and remove the Allen Head screw that secures the trim ring to the housing.
- 3. Rotate the trim ring counter-clockwise and remove from the housing.
- 4. Note the polarity of the existing wires. Disconnect the wires from the existing lamp.
- 5. Connect the spotlight wires to the replacement lamp as shown below. NOTE: Once the desired pattern has been configured, the Scan-Lock wire (WHT/VIO) is not needed for operation. Be sure to insulate this wire.
- Direct the light away from the face and eyes and confirm proper operation of the spotlight. If the lamp does not operate, check the polarity of the wiring connections and correct if necessary.
- 7. With all of the original Lamp Stabilizers in their proper position, tuck the wires into the housing cavity and place the PAR-46 LED lamp into the housing. The lamp is properly oriented when the lamp alignment tab is fully seated into the housing.
- 8. Return the trim ring to its original position on the housing and secure it in place using the Allen head screw removed in step #2.

IMPORTANT! Before returning the vehicle to active service, visually confirm the proper operation of this product, as well as all vehicle components/equipment.

All customer supplied wires that connect to the positive terminal of the battery must be sized to supply at least 125% of the maximum operating current and FUSED at the battery to carry that load. DO NOT USE CIRCUIT BREAKERS WITH THIS PRODUCT!

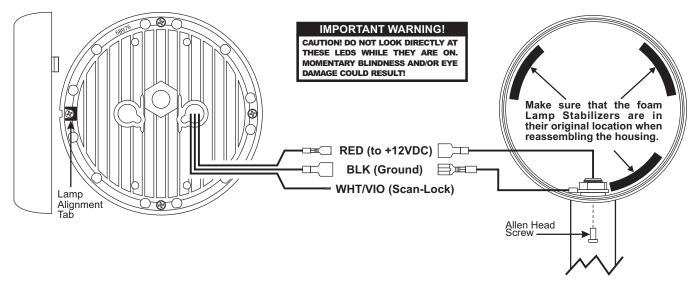

Warnings to Installers

Whelen's emergency vehicle warning devices must be properly mounted and wired in order to be effective and safe. Read and follow all of Whelen's written instructions when installing or using this device. Emergency vehicles are often operated under high speed stressful conditions which must be accounted for when installing all emergency warning devices. Controls should be placed within convenient reach of the operator so that he can operate the system without taking his eyes off the roadway. Emergency warning devices can require high electrical voltages and/or currents. Properly protect and use caution around live electrical connections. Grounding or shorting of electrical connections can cause high current arcing, which can cause personal injury and/or vehicle damage, including fire. Many electronic devices used in emergency vehicles can create or be affected by electromagnetic interference. Therefore, after installation of any electronic device it is necessary to test all electronic equipment simultaneously to insure that they operate free of interference from other components within the vehicle. Never power emergency warning equipment from the same circuit or share the same grounding circuit with radio communication equipment. All devices should be mounted in accordance with the manufacturer's instructions and securely fastened to vehicle elements of sufficient strength to withstand the forces applied to the device. Driver and/or passenger air bags (SRS) will affect the way equipment should be mounted. This device should be mounted by permanent installation and within the zones specified by the vehicle manufacturer, if any. Any device mounted in the deployment area of an air bag will damage or reduce the effectiveness of the air bag and may damage or dislodge the device. Installer must be sure that this device, its mounting hardware and electrical supply wiring does not interfere with the air bag or the SRS wiring or sensors. Mounting the unit inside the vehicle by a method other than permanent installation is not recommended as unit may become dislodged during swerving; sudden braking or collision. Failure to follow instructions can result in personal injury. Whelen assumes no liability for any loss resulting from the use of this warning device. PROPER INSTALLATION COMBINED WITH OPERATOR TRAINING IN THE PROPER USE OF EMERGENCY WARNING DEVICES IS ESSENTIAL TO INSURE THE SAFETY OF EMERGENCY PERSONNEL AND THE PUBLIC.

Warnings to Users

Whelen's emergency vehicle warning devices are intended to alert other operators and pedestrians to the presence and operation of emergency vehicles and personnel. However, the use of this or any other Whelen emergency warning device does not guarantee that you will have the right-of-way or that other drivers and pedestrians will properly heed an emergency warning signal. Never assume you have the right-of-way. It is your responsibility to proceed safely before entering an intersection, driving against traffic, responding at a high rate of speed, or walking on or around traffic lanes. Emergency vehicle warning devices should be tested on a daily basis to ensure that they operate properly. When in actual use, the operator must ensure that both visual and audible warnings are not blocked by vehicle components (i.e.: open trunks or compartment doors), people, vehicles, or other obstructions. It is the user's responsibility to understand and obey all laws regarding emergency warning devices. The user should be familiar with all applicable laws and regulations prior to the use of any emergency vehicle warning device. Whelen's audible warning devices are designed to project sound in a forward direction away from the vehicle occupants. However, because sustained periodic exposure to loud sounds can cause hearing loss, all audible warning devices should be installed and operated in accordance with the standards established by the National Fire Protection Association.