

51 Winthrop Road  
Chester, Connecticut 06412-0684  
Phone: (860) 526-9504  
Sales Email: autosale@whelen.com  
Canadian Sales: canadiansales@whelen.com  
Customer Service: custserv@whelen.com

**Safety First:** This document provides all the necessary information to allow your Whelen product to be properly and safely installed. Before beginning the installation and/or operation of your new product, the installation technician and operator must read this manual completely. Important information is contained herein that could prevent serious injury or damage.

- Proper installation of this product requires the installer to have a good understanding of automotive electronics, systems and procedures.
- Whelen Engineering requires the use of waterproof butt splices and/or connectors if that connector could be exposed to moisture.
- Failure to use specified installation parts and/or hardware will void the product warranty!
- If mounting this product requires drilling holes, the installer **MUST** be sure that no vehicle components or other vital parts could be damaged by the drilling process. Check both sides of the mounting surface before drilling begins. Also de-burr any holes and remove any metal shards or remnants. Install grommets into all wire passage holes.
- Do not install this product or route any wires in the deployment area of your air bag. Equipment mounted or located in the air bag deployment area will damage or reduce the effectiveness of the air bag, or become a projectile that could cause serious personal injury or death. Refer to your vehicle owner's manual for the air bag deployment area. The User/Installer assumes full responsibility to determine proper mounting location, based on providing ultimate safety to all passengers inside the vehicle.
- For this product to operate at optimum efficiency, a good electrical connection to chassis ground must be made. The recommended procedure requires the product ground wire to be connected directly to the **NEGATIVE (-)** battery post.
- If this product uses a remote device to activate or control this product, make sure that this control is located in an area that allows both the vehicle and the control to be operated safely in any driving condition.
- Do not attempt to activate or control this device in a hazardous driving situation.
- This product contains either strobe light(s), halogen light(s), high-intensity LEDs or a combination of these lights. Do not stare directly into these lights. Momentary blindness and/or eye damage could result.
- Use only soap and water to clean the outer lens. Use of other chemicals could result in premature lens cracking (crazing) and discoloration. Lenses in this condition have significantly reduced effectiveness and should be replaced immediately. Inspect and operate this product regularly to confirm its proper operation and mounting condition. Do not use a pressure washer to clean this product.
- **WARNING!** All customer supplied wires that connect to the positive (+) terminal of the battery must be sized to supply at least 125% of the maximum operating current and **FUSED "at the battery"** to carry that load. **DO NOT USE CIRCUIT BREAKERS WITH THIS PRODUCT!**
- **FAILURE TO FOLLOW THESE PRECAUTIONS AND INSTRUCTIONS COULD RESULT IN DAMAGE TO THE PRODUCT OR VEHICLE AND/OR SERIOUS INJURY TO YOU AND YOUR PASSENGERS!**

**Wiring:**

**Ground (BLK or BLK/WHT):** Extend this wire to chassis ground.

**Warning Light (RED/WHT, WHT/RED, ORG, BLU, WHT, GRN, YEL or RED):** Extend this wire to +VBAT via a customer supplied SP/ST switch. Fuse this wire @ 3 Amps.

**SYNC (GREY):** To SYNC two lighthead, configure both lighthead to display the same Phase 1 pattern. Turn power off and connect the GRY wire from each lighthead together. Activate the lighthead and their patterns will be synchronized. To configure the lighthead to alternate their patterns, advance either lighthead to Phase 2 of the current pattern.  
If the SYNC feature is not used, the GREY wire should be capped and insulated.

**Scan-Lock™ (WHT/VIO):** Extend this wire to +VBAT via a customer supplied Normally Open momentary switch. Fuse this wire @ 1 Amps.

**To Change Patterns:** To advance to the next pattern, apply +VBAT to the WHT/VIO wire for less than 1 second and release. To cycle back to the previous pattern, apply +VBAT to the WHT/VIO wire for more than 1 second and release.

**To Change The Default Pattern:** When the desired pattern is displayed, allow it to run for more than 5 seconds. The warning lights will now display this pattern when initially activated.

**To Restore The Factory Default Pattern:** With the power to the warning lights off, apply +VBAT to the WHT/VIO wire. With the WHT/VIO wire still activated, turn power to the warning lights on.

**SYNC Operation:** Some of the patterns available for the standard SYNC lighthead are described as being either Phase 1 (PH.1) or Phase 2 (PH.2), Phase 3 (PH.3) or Phase 4 (PH.4). These terms define how patterns on lighthead with their SYNC wires connected relate to each other. Lighthead configured to display the same Phase of a given pattern will flash simultaneously. Lighthead configured to Phase 1 of a given pattern will alternate with Phase 2 lighthead.

If the SYNC feature is not used, the GREY wire should be capped and insulated.

**BOLD = California Title XIII Compliant Pattern**      *Italic = SYNC Patterns*  
PHASE 1 alternates with PHASE 2  
PHASE 3 alternates with PHASE 4

**Split LED Patterns**


1. <b>SignalAlert™ 75</b> <i>PH.1</i>	24. <b>LongBurst 75</b> <i>PH.4</i>	47. <b>ModuFlash™</b> ALT
2. <b>SignalAlert 75</b> <i>PH.2</i>	25. <b>PingPong™ 75</b> <i>PH.1</i>	48. <b>ModuFlash</b> SIM
3. <b>SignalAlert 75</b> <i>PH.3</i>	26. <b>PingPong 75</b> <i>PH.2</i>	49. <b>DoubleFlash 120</b> ALT
4. <b>SignalAlert 75</b> <i>PH.4</i>	27. <b>PingPong 75</b> <i>PH.3</i>	50. <b>DoubleFlash 120</b> SIM
5. <b>CometFlash® 75</b> <i>PH.1</i>	28. <b>PingPong 75</b> <i>PH.4</i>	51. <b>PingPong™ 120</b> ALT
6. <b>CometFlash 75</b> <i>PH.2</i>	29. <b>SSNF 75</b> <i>PH.1</i>	52. <b>PingPong 120</b> SIM
7. <b>CometFlash 75</b> <i>PH.3</i>	30. <b>SSNF 75</b> <i>PH.2</i>	53. <b>TripleFlash™ 75</b> ALT
8. <b>CometFlash 75</b> <i>PH.4</i>	31. <b>SingleFlash 60</b> ALT	54. <b>TripleFlash 75</b> SIM
9. <b>DoubleFlash 75</b> <i>PH.1</i>	32. <b>SingleFlash 60</b> SIM	55. <b>TripleFlash 120</b> ALT
10. <b>DoubleFlash 75</b> <i>PH.2</i>	33. <b>SingleFlash 90</b> ALT	56. <b>TripleFlash 120</b> SIM
11. <b>DoubleFlash 75</b> <i>PH.3</i>	34. <b>SingleFlash 90</b> SIM	57. <b>SigAlert Cal.™</b> ALT
12. <b>DoubleFlash 75</b> <i>PH.4</i>	35. <b>SingleFlash 120</b> ALT	58. <b>SigAlert Cal.</b> SIM
13. <b>SingleFlash 75</b> <i>PH.1</i>	36. <b>SingleFlash 120</b> SIM	59. <b>Action 1</b> ALT
14. <b>SingleFlash 75</b> <i>PH.2</i>	37. <b>SingleFlash 300</b> ALT	60. <b>Action 1</b> SIM
15. <b>SingleFlash 75</b> <i>PH.3</i>	38. <b>SingleFlash 300</b> SIM	61. <b>Action 2</b> ALT
16. <b>SingleFlash 75</b> <i>PH.4</i>	39. <b>DoubleFlash 150</b> ALT	62. <b>Action 2</b> SIM
17. <b>ComAlert™ 75</b> <i>PH.1</i>	40. <b>DoubleFlash 150</b> SIM	63. <b>CalScan™</b> ALT/SIM
18. <b>ComAlert 75</b> <i>PH.2</i>	41. <b>ComAlert150</b> ALT	64. <b>ActionScan™</b> ALT/SIM
19. <b>ComAlert 75</b> <i>PH.3</i>	42. <b>ComAlert150</b> SIM	65. <b>SteadyFlash 60</b>
20. <b>ComAlert 75</b> <i>PH.4</i>	43. <b>ActionFlash™50</b> ALT	66. <b>SteadyFlash 75</b>
21. <b>LongBurst™ 75</b> <i>PH.1</i>	44. <b>ActionFlash50</b> SIM	67. <b>SteadyFlash 120</b>
22. <b>LongBurst 75</b> <i>PH.2</i>	45. <b>ActionFlash150</b> ALT	68. <b>SteadyFlash 120</b>
23. <b>LongBurst 75</b> <i>PH.3</i>	46. <b>ActionFlash150</b> SIM	69. <b>Steady &amp; Steady</b>

**Solid LED Patterns:**

SYNC	Non-SYNC
1. <b>SignalAlert™ 75</b> <i>PH.1</i>	15. <b>SingleFlash 60</b>
2. <b>SignalAlert 75</b> <i>PH.2</i>	16. <b>SingleFlash 90</b>
3. <b>CometFlash® 75</b> <i>PH.1</i>	17. <b>SingleFlash 120</b>
4. <b>CometFlash 75</b> <i>PH.2</i>	18. <b>SingleFlash 300</b>
5. <b>DoubleFlash 75</b> <i>PH.1</i>	19. <b>DoubleFlash 150</b>
6. <b>DoubleFlash 75</b> <i>PH.2</i>	20. <b>ComAlert 150</b>
7. <b>SingleFlash 75</b> <i>PH.1</i>	21. <b>ActionFlash 1</b>
8. <b>SingleFlash 75</b> <i>PH.2</i>	22. <b>ActionFlash 2</b>
9. <b>ComAlert™ 75</b> <i>PH.1</i>	23. <b>ModuFlash</b>
10. <b>ComAlert 75</b> <i>PH.2</i>	24. <b>ActionScan</b>
11. <b>LongBurst™ 75</b> <i>PH.1</i>	25. <b>Steady</b>
12. <b>LongBurst 75</b> <i>PH.2</i>	
13. <b>PingPong™ 75</b> <i>PH.1</i>	
14. <b>PingPong 75</b> <i>PH.2</i>	

It is the responsibility of the installation technician to make sure that the installation and operation of this product will not interfere with or compromise the operation or efficiency of any vehicle equipment!

Before returning the vehicle to active service, visually confirm the proper operation of this product, as well as all vehicle components/equipment.

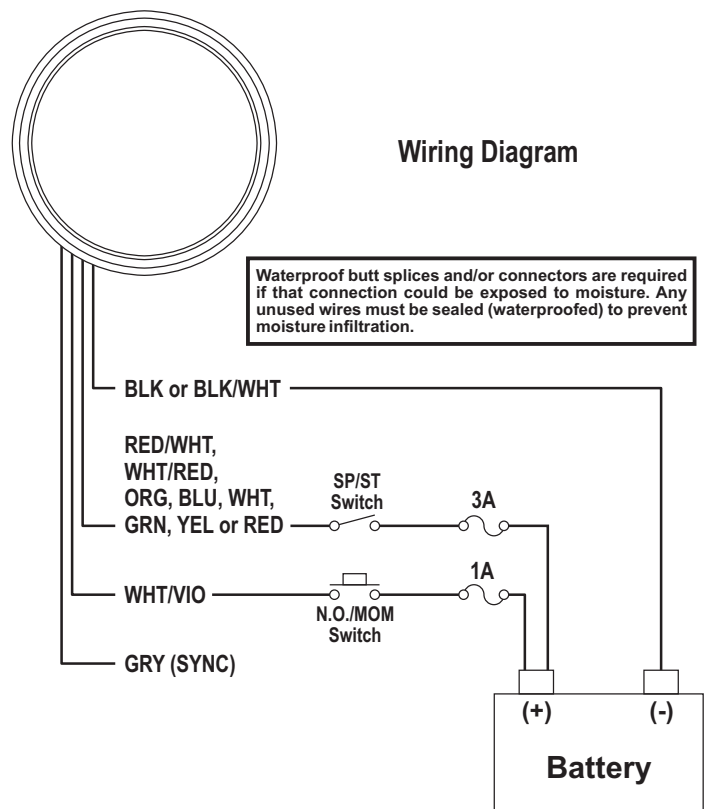

## **Warnings to Installers**

Whelen's emergency vehicle warning devices must be properly mounted and wired in order to be effective and safe. Read and follow all of Whelen's written instructions when installing or using this device. Emergency vehicles are often operated under high speed stressful conditions which must be accounted for when installing all emergency warning devices. Controls should be placed within convenient reach of the operator so that he can operate the system without taking his eyes off the roadway. Emergency warning devices can require high electrical voltages and/or currents. Properly protect and use caution around live electrical connections. Grounding or shorting of electrical connections can cause high current arcing, which can cause personal injury and/or vehicle damage, including fire. Many electronic devices used in emergency vehicles can create or be affected by electromagnetic interference. Therefore, after installation of any electronic device it is necessary to test all electronic equipment simultaneously to insure that they operate free of interference from other components within the vehicle. Never power emergency warning equipment from the same circuit or share the same grounding circuit with radio communication equipment. All devices should be mounted in accordance with the manufacturer's instructions and securely fastened to vehicle elements of sufficient strength to withstand the forces applied to the device. Driver and/or passenger air bags (SRS) will affect the way equipment should be mounted. This device should be mounted by permanent installation and within the zones specified by the vehicle manufacturer, if any. Any device mounted in the deployment area of an air bag will damage or reduce the effectiveness of the air bag and may damage or dislodge the device. Installer must be sure that this device, its mounting hardware and electrical supply wiring does not interfere with the air bag or the SRS wiring or sensors. Mounting the unit inside the vehicle by a method other than permanent installation is not recommended as unit may become dislodged during swerving; sudden braking or collision. Failure to follow instructions can result in personal injury. Whelen assumes no liability for any loss resulting from the use of this warning device. **PROPER INSTALLATION COMBINED WITH OPERATOR TRAINING IN THE PROPER USE OF EMERGENCY WARNING DEVICES IS ESSENTIAL TO INSURE THE SAFETY OF EMERGENCY PERSONNEL AND THE PUBLIC.**

## **Warnings to Users**

Whelen's emergency vehicle warning devices are intended to alert other operators and pedestrians to the presence and operation of emergency vehicles and personnel. However, the use of this or any other Whelen emergency warning device does not guarantee that you will have the right-of-way or that other drivers and pedestrians will properly heed an emergency warning signal. Never assume you have the right-of-way. It is your responsibility to proceed safely before entering an intersection, driving against traffic, responding at a high rate of speed, or walking on or around traffic lanes. Emergency vehicle warning devices should be tested on a daily basis to ensure that they operate properly. When in actual use, the operator must ensure that both visual and audible warnings are not blocked by vehicle components (i.e.: open trunks or compartment doors), people, vehicles, or other obstructions. It is the user's responsibility to understand and obey all laws regarding emergency warning devices. The user should be familiar with all applicable laws and regulations prior to the use of any emergency vehicle warning device. Whelen's audible warning devices are designed to project sound in a forward direction away from the vehicle occupants. However, because sustained periodic exposure to loud sounds can cause hearing loss, all audible warning devices should be installed and operated in accordance with the standards established by the National Fire Protection Association.