


ROUTE 145, WINTHROP ROAD
CHESTER, CONNECTICUT 06412-0684
TELEPHONE: (860) 526-9504
FAX: (860) 526-4078

Waterproof Gasket Retro-Fit...

1. Remove the endcaps and gaskets from both ends of the lightbar.
2. Slide all lens' and dividers out of the lightbar's extrusion.
3. Position the new extrusion gasket along the bottom of the extrusion so it is flush with the leading edge of the extrusion. **Do not stretch or cut this gasket!**
4. Once the precise mounting location has been determined, the adhesive backing can be removed.
5. Re-position the gasket in it's mounting location and press firmly. Repeat for the upper part of the extrusion.
6. Apply silicone to the carriage bolt opening in the extrusion. Insert the Extrusion Plug into the extrusion as shown. Repeat for the opposite end of the extrusion.
7. Replace existing lens dividers with ones provided with this kit. Return all lens' and endcaps to their original locations. Be extremely careful not to tear the new extrusion gasket when replacing the lens'. If necessary, spread the extrusion apart to prevent tearing the gasket.

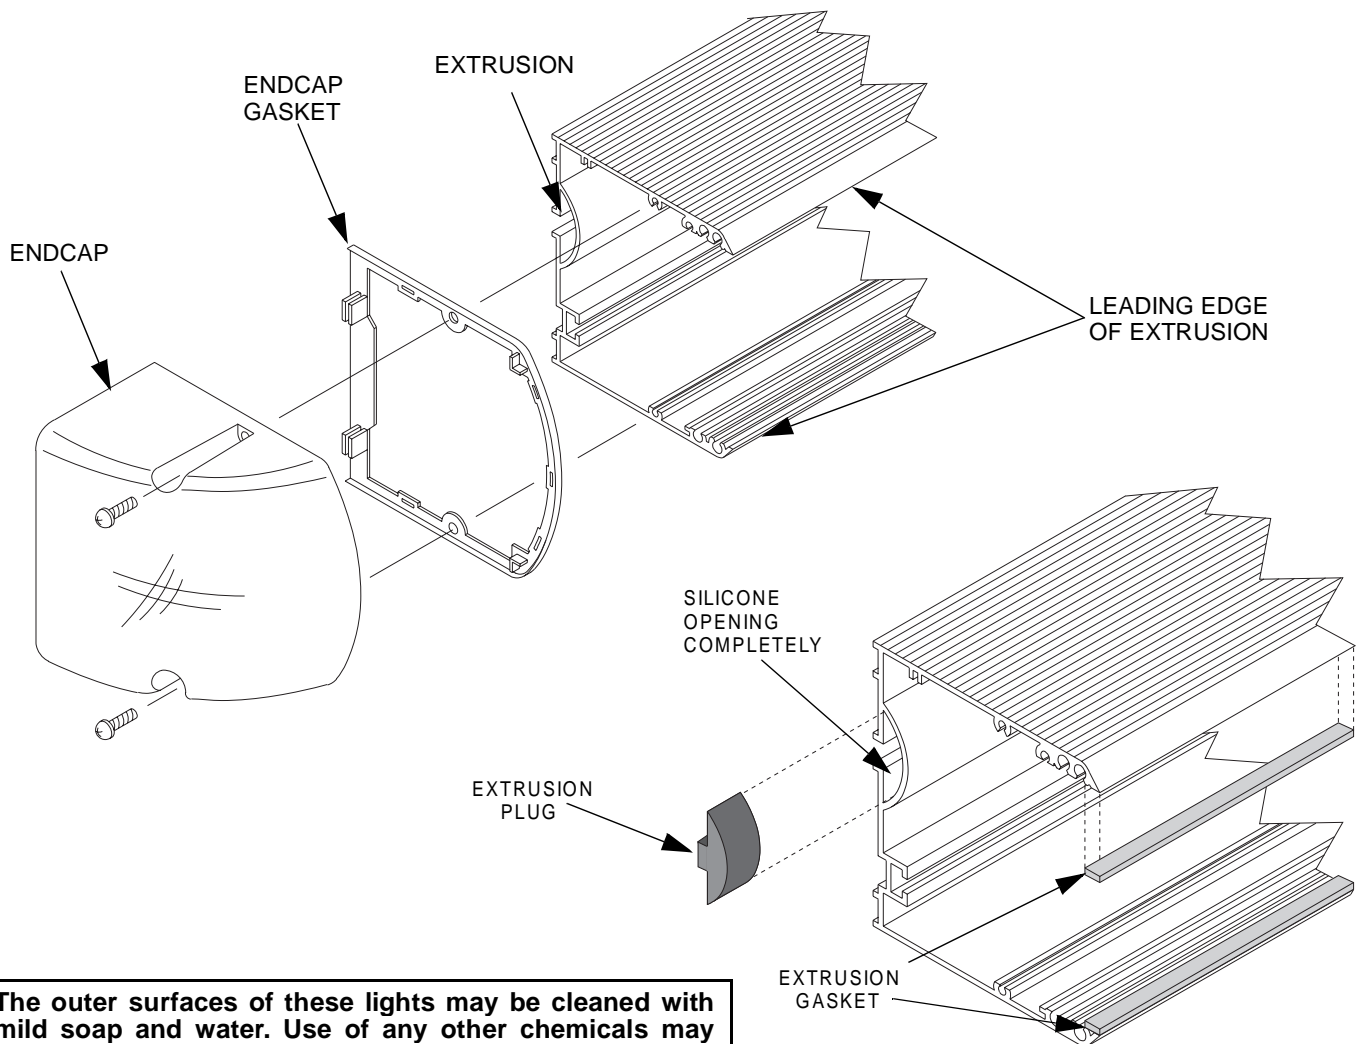

The outer surfaces of these lights may be cleaned with mild soap and water. Use of any other chemicals may void product warranty. Do not use a pressure washer.