

WHELEN[®]

ENGINEERING COMPANY INC.

Route 145, Winthrop Road,
Chester, Connecticut 06412

Phone: (860) 526-9504

Fax: (860) 526-4078

Internet: www.whelen.com





Sales e-mail: autosale@whelen.com

Canadian Sales e-mail: autocan@whelen.com

Customer Service e-mail: custserv@whelen.com

Power Cable Attachment for VP26HD & VP27HD Beacons

1. First remove the base from the light. This is held on by two base screws on either side of the base. (Fig.1)
2. Next remove the strobe tube holder assembly from the base by loosening or removing the tube holder assembly mounting screws securing it to the base.
3. Now feed your power cord up through the grommated hole in the center of the base. (Fig. 1)
4. Next insert the three pins into the pin housing as shown in fig. 2 Be careful to put the wire colors in the right place, so they match up properly with the socket housing.
5. Now snap the pin housing and socket housing together, being careful to match the ridge on the socket housing up to the ridge on the pin housing. (See Fig. 2)
6. Next wrap the ty wrap (supplied) around the cord on the inside of the light and secure it where shown in fig 3. This will keep the cord from pulling out after the unit is reassembled.
7. Reattach the base and test the light before installing.

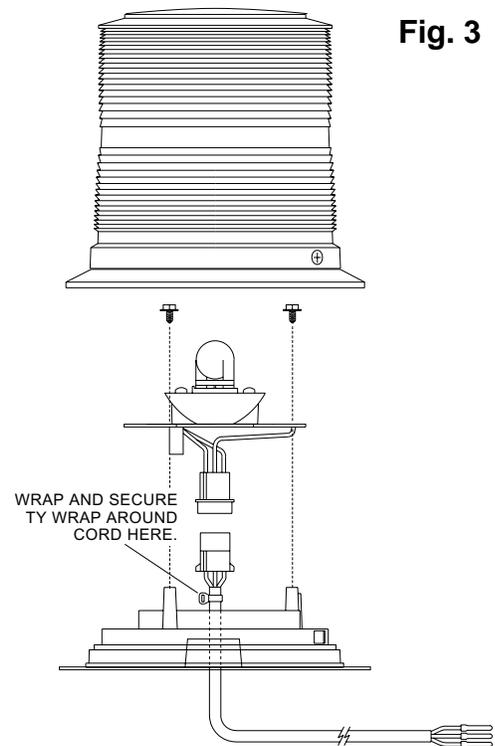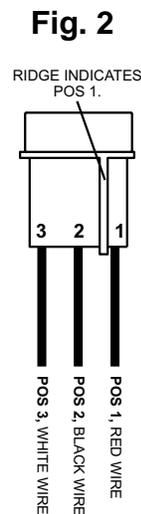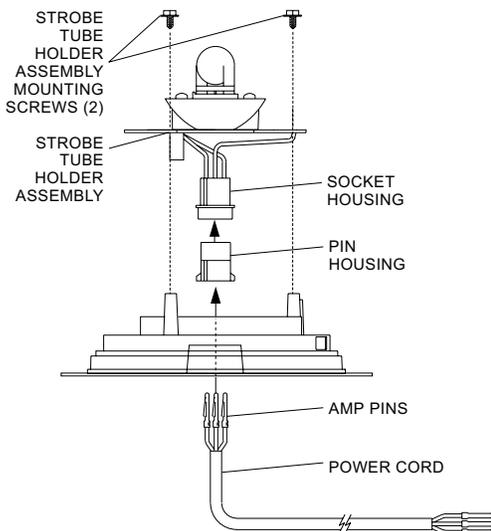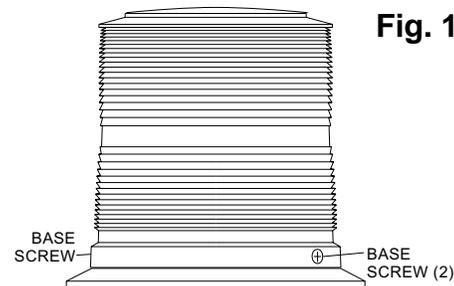

The outer surfaces of this product may be cleaned with mild soap and water. Use of any other chemicals may void product warranty. Do not use a pressure washer.

Automotive: Beacons