


WHELEN[®]

ENGINEERING COMPANY INC.

51 Winthrop Road,
Chester, Connecticut 06412-0684
Phone: (860) 526-9504
Fax: (860) 526-4078

Installation Guide: TA1664, TA8864 Series Traffic Advisor™

Internet: www.whelen.com
Sales e-mail: autosale@whelen.com
Canadian Sales e-mail: autocan@whelen.com
Customer Service e-mail: custserv@whelen.com

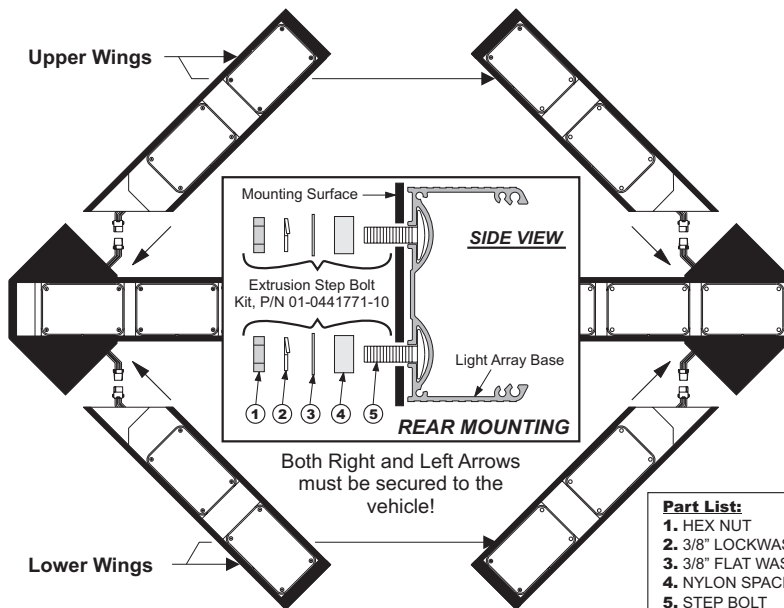

WARNING!

The installation of this light array is not complete until the upper and lower wings on both ends of the array are secured to the vehicle using the supplied extrusion step bolts (see illustration at left).

Failure to properly secure the light array could cause possible damage to the array and the vehicle.

- Part List:**
1. HEX NUT
 2. 3/8" LOCKWASHER
 3. 3/8" FLAT WASHER
 4. NYLON SPACER
 5. STEP BOLT

©1998 Whelen Engineering Company Inc.
Form No.13368A (073107)

For warranty information regarding this product, visit www.whelen.com/warranty


WHELEN[®]

ENGINEERING COMPANY INC.

51 Winthrop Road,
Chester, Connecticut 06412-0684
Phone: (860) 526-9504
Fax: (860) 526-4078

Installation Guide: TA1664, TA8864 Series Traffic Advisor™

Internet: www.whelen.com
Sales e-mail: autosale@whelen.com
Canadian Sales e-mail: autocan@whelen.com
Customer Service e-mail: custserv@whelen.com

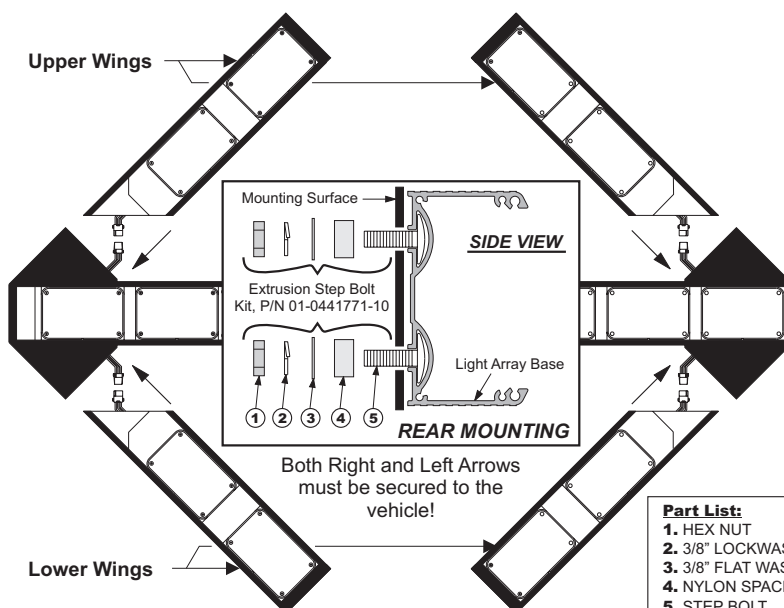

WARNING!

The installation of this light array is not complete until the upper and lower wings on both ends of the array are secured to the vehicle using the supplied extrusion step bolts (see illustration at left).

Failure to properly secure the light array could cause possible damage to the array and the vehicle.

- Part List:**
1. HEX NUT
 2. 3/8" LOCKWASHER
 3. 3/8" FLAT WASHER
 4. NYLON SPACER
 5. STEP BOLT

©1998 Whelen Engineering Company Inc.
Form No.13368A (073107)

For warranty information regarding this product, visit www.whelen.com/warranty