


ROUTE 145, WINTHROP ROAD
CHESTER, CONNECTICUT 06412-0684
TELEPHONE: (860) 526-9504
FAX: (860) 526-4078

Note: The Micro-R / Corner Strobe modules are a replacement for the discontinued Edge Multi-Reflector assembly.

Installation:

IMPORTANT! DO NOT BEGIN ANY DISASSEMBLY UNTIL THE LIGHTBAR HAS BEEN TURNED OFF FOR A MINIMUM OF 15 MINUTES!

1. Remove the endcap and lenses to gain access to the existing multi-reflector assembly.
2. Remove the 4 (four) screws that secure the multi-reflector to the lightbar.
3. Pull the multi-reflector away from the lightbar. Do not disconnect any wires!
4. Note the location of the twist-in lamp assemblies present in the multi-reflector and which assemblies are connected to which harness plugs. It is critical that the position and connections of these lamp assemblies are maintained with the new reflectors.
5. Disconnect the connectors and remove the multi-reflector from the lightbar. Remove the twist-in lamp assemblies from the multi-reflector. Make sure to record where each lamp assembly was positioned.
6. Remove any and all twist-in lamp assemblies (strobe and/or halogen) from the multi-reflector.
7. Secure the light head bracket to the corner strobe assembly as shown.

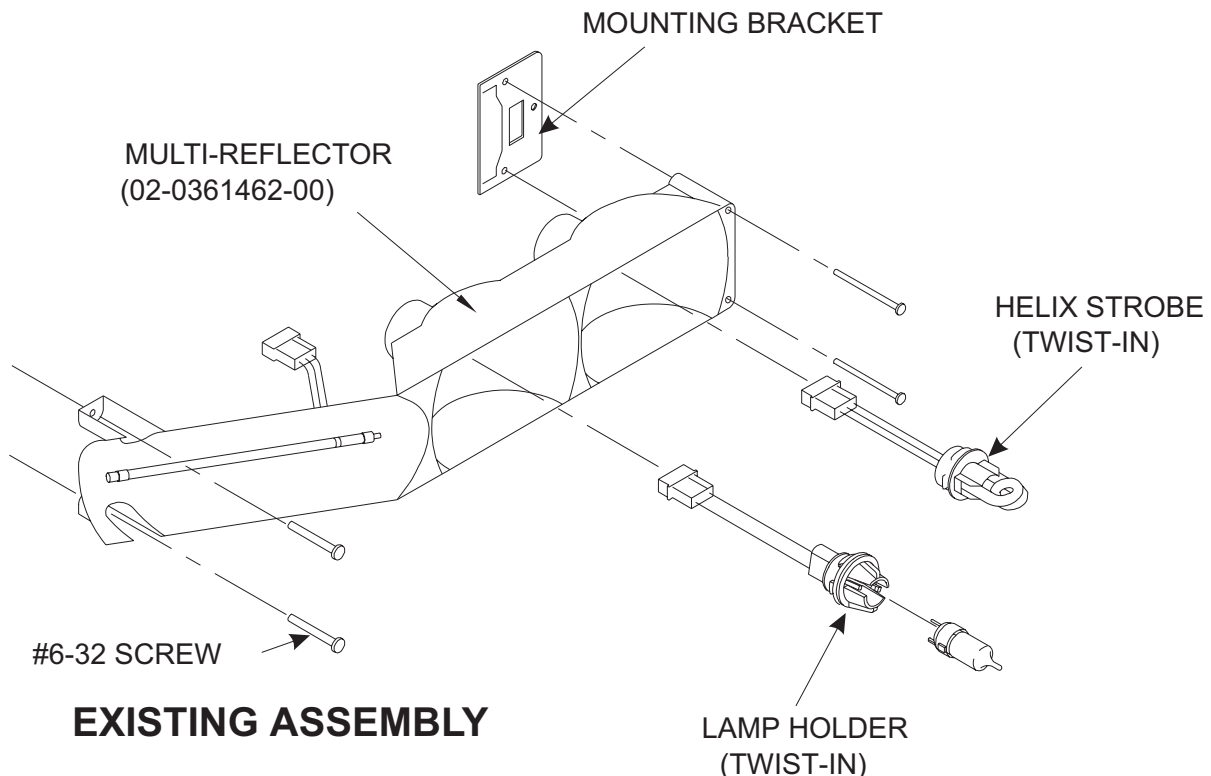

8. Slide both of the new Micro-R reflectors into the lightbar, making sure to separate them with the .375" spacer (#6) as shown.
9. Slide the corner strobe assembly into the lightbar until its mounting holes line up with the holes in the extrusion.
10. Secure the corner strobe assembly to the lightbar using the same screws that secured the previous multi-reflector.
11. Position the Micro-R reflectors and spacer so that all three of the new reflectors are snug.
12. Measure the gap (if any) between the edge of the inboard Micro-R reflector and the power supply, center option or reflector on the opposite end of the lightbar.
13. Trim the filler panel (included) to a length that will span this distance.

WARNING: If both multi-reflectors on the same side (front or rear) are being replaced, AND there is no power supply or center option between the multi-reflectors, DO NOT measure the distance for the filler panel until both existing multi-reflectors have been removed and the new Micro-R & corner strobe reflectors have been positioned in their new mounting location!

14. Remove all 3 of the new reflectors and slide the trimmed filler panel into position.
15. Slide the inboard Micro-R reflector into position and install the lamp assembly taken from the inboard reflector of the multi-reflector. Make sure to plug this lamp assembly into the correct wiring harness socket!
16. Repeat the previous step using the remaining Micro-R reflector and the appropriate lamp assembly.
17. Connect the corner strobe assembly plug to the appropriate wiring harness socket, position the assembly into the lightbar and secure the assembly using the #6 - 32 screws used to hold the multi-reflector in position.

ITEM	PART NUMBER	DESCRIPTION
1	15-041816-160	#4 X 1" PPHSMS (WASHER HEAD)
2	02-0362733-00	STROBE ASSEMBLY, CORNER
3	07-241014-000	BRACKET, LIGHTHEAD MOUNTING
4	68-5981731-01	MICRO-R REFLECTOR (TWIST-IN)
5	09-1341933-25	FILLER PANEL 17.00"
6	09-1341933-09	FILLER PANEL .375"

The outer surfaces of this product may be cleaned with mild soap and water. Use of any other chemicals may void product warranty. Do not use a pressure washer.

