


WHELEN[®]

ENGINEERING COMPANY INC.

Route 145, Winthrop Road,
Chester, Connecticut 06412
Phone: (860) 526-9504
Fax: (860) 526-4078

Internet: www.whelen.com
Sales e-mail: autosale@whelen.com
Canadian Sales e-mail: autocan@whelen.com
Customer Service e-mail: custserv@whelen.com

TA852 Rear Deck Mounting Kit

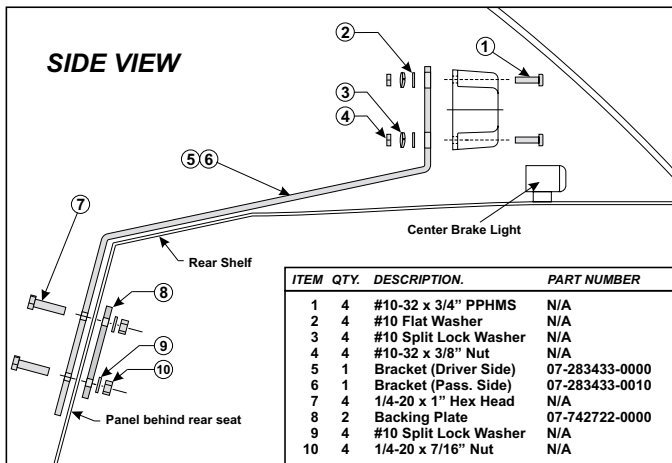

©2000 Whelen Engineering Company Inc.
Form No.13503 (011300)

Mounting the TA852....

- Using the provided hardware, mount the TA852 to the mounting brackets as shown.
- Remove the rear seat back from the vehicle.
- Position the TA852 assembly so that the brackets follow the overall contour of the rear panels as shown. When properly positioned, the TA852 should be centered from side to side within the vehicle with the brackets passing over the rear speakers.
- With the unit in position, scribe the areas (using an awl or similar tool) where the mounting holes are to be drilled.
- Remove the TA852 from the mounting area. Using a drill bit sized for a 1/4-20 bolt, drill the necessary mounting holes into the rear panel.
- Return the TA852 to its mounting location and using the provided hardware, secure the assembly to the rear panel.
- After all the necessary TA852 wiring connections are completed, return the rear seat back to its original location.


WHELEN[®]

ENGINEERING COMPANY INC.

Route 145, Winthrop Road,
Chester, Connecticut 06412
Phone: (860) 526-9504
Fax: (860) 526-4078

Internet: www.whelen.com
Sales e-mail: autosale@whelen.com
Canadian Sales e-mail: autocan@whelen.com
Customer Service e-mail: custserv@whelen.com

TA852 Rear Deck Mounting Kit

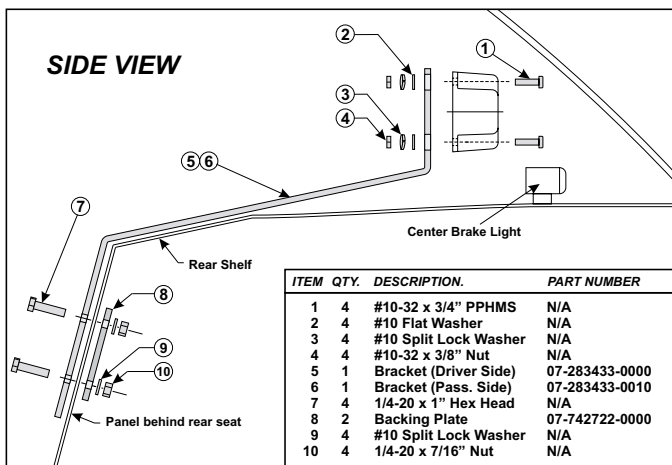

©2000 Whelen Engineering Company Inc.
Form No.13503 (011300)

Mounting the TA852....

- Using the provided hardware, mount the TA852 to the mounting brackets as shown.
- Remove the rear seat back from the vehicle.
- Position the TA852 assembly so that the brackets follow the overall contour of the rear panels as shown. When properly positioned, the TA852 should be centered from side to side within the vehicle with the brackets passing over the rear speakers.
- With the unit in position, scribe the areas (using an awl or similar tool) where the mounting holes are to be drilled.
- Remove the TA852 from the mounting area. Using a drill bit sized for a 1/4-20 bolt, drill the necessary mounting holes into the rear panel.
- Return the TA852 to its mounting location and using the provided hardware, secure the assembly to the rear panel.
- After all the necessary TA852 wiring connections are completed, return the rear seat back to its original location.