


Installation Guide: LED Lighthead Load Module

51 Winthrop Road, Chester, Connecticut 06412-0684 Phone: (860) 526-9504 Fax: (860) 526-4078

Internet: www.whelen.com
Sales e-mail: autosale@whelen.com

Canadian Sales e-mail: autocan@whelen.com
Customer Service e-mail: custserv@whelen.com

The LED load module should be mounted on a metal surface to aid heat dissipation. Be sure that this surface is not one that either generates or is exposed to excessive heat during normal operation of the vehicle. Do not select a location where the module will be exposed to potential damage from any unsecured equipment in the vehicle. When routing the wires, keep them away from excessive heat and any equipment, such as trunk lids, door jams etc.

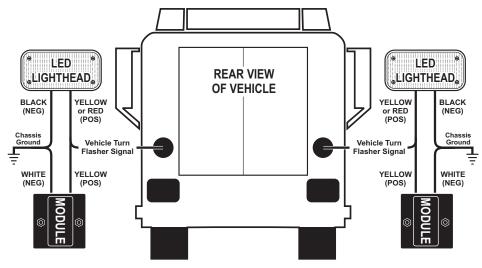

©2001 Whelen Engineering Company Inc. Form No.13574A (071607)

For warranty information regarding this product, visit www.whelen.com/warranty


WHELEN ENGINEERING COMPANY INC.

Installation Guide: LED Lighthead Load Module

51 Winthrop Road, Chester, Connecticut 06412-0684 Phone: (860) 526-9504 Fax: (860) 526-4078 Internet: www.whelen.com
Sales e-mail: autosale@whelen.com

Canadian Sales e-mail: autocan@whelen.com
Customer Service e-mail: custserv@whelen.com

The LED load module should be mounted on a metal surface to aid heat dissipation. Be sure that this surface is not one that either generates or is exposed to excessive heat during normal operation of the vehicle. Do not select a location where the module will be exposed to potential damage from any unsecured equipment in the vehicle. When routing the wires, keep them away from excessive heat and any equipment, such as trunk lids, door jams etc.

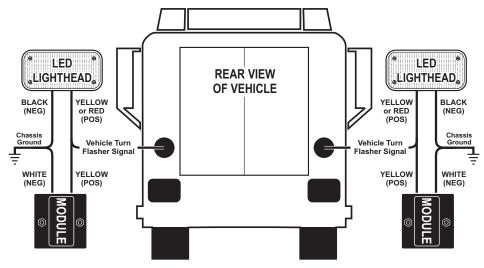

©2001 Whelen Engineering Company Inc. Form No.13574A (071607)

For warranty information regarding this product, visit www.whelen.com/warranty