

## WHELEN<sup>®</sup> ENGINEERING COMPANY INC.

51 Winthrop Road  
 Chester, Connecticut 06412-0684  
 Phone: (860) 526-9504  
 Fax: (860) 526-4078  
 Internet: [www.whelen.com](http://www.whelen.com)  
 Sales e-mail: [autosale@whelen.com](mailto:autosale@whelen.com)  
 Canadian Sales e-mail: [autocan@whelen.com](mailto:autocan@whelen.com)  
 Customer Service e-mail: [custserv@whelen.com](mailto:custserv@whelen.com)

### Installation Guide: Dual Underpro Speaker 2002 Chevy/GMC 3500-series

**DANGER!** Sirens produces extremely loud emergency warning tones! Exposure to these tones without proper and adequate hearing protection, could cause ear damage and/or hearing loss! The Occupational Safety & Health Administration ([www.osha.gov](http://www.osha.gov)) provides information necessary to determine safe exposure times in Occupational Noise Exposure Section 1910.95. Until you have determined the safe exposure times for your specific application, operators and anyone else in the immediate vicinity should be required to wear an approved hearing protection device. **FAILURE TO FOLLOW THIS RECOMMENDATION COULD CAUSE HEARING LOSS!**

#### Safety First

This document provides all the necessary information to allow your Whelen product to be properly and safely installed. Before beginning the installation and/or operation of your new product, the installation technician and operator must read this manual completely. Important information is contained herein that could prevent serious injury or damage.

- Proper installation of this product requires the installer to have a good understanding of automotive electronics, systems and procedures.
- If mounting this product requires drilling holes, the installer **MUST** be sure that no vehicle components or other vital parts could be damaged by the drilling process. Check both sides of the mounting surface before drilling begins. Also de-burr any holes and remove any metal shards or remnants. Install grommets into all wire passage holes.
- If this manual states that this product may be mounted with suction cups, magnets, tape or Velcro™, clean the mounting surface with a 50/50 mix of isopropyl alcohol and water and dry thoroughly.
- Do not install this product or route any wires in the deployment area of your air bag. Equipment mounted or located in the air bag deployment area will damage or reduce the effectiveness of the air bag, or become a projectile that could cause serious personal injury or death. Refer to your vehicle owners manual for the air bag deployment area. The User/Installer assumes full responsibility to determine proper mounting location, based on providing ultimate safety to all passengers inside the vehicle.
- For this product to operate at optimum efficiency, a good electrical connection to chassis ground must be made. The recommended procedure requires the product ground wire to be connected directly to the **NEGATIVE (-)** battery post.
- If this product uses a remote device to activate or control this product, make sure this control is located in an area that allows both the vehicle and the control to be operated safely in any driving condition. **DO NOT ATTEMPT TO ACTIVATE OR CONTROL THIS DEVICE IN A HAZARDOUS DRIVING SITUATION.**
- It is recommended that these instructions be stored in a safe place and referred to when performing maintenance and/or reinstallation of this product.
- **FAILURE TO FOLLOW THESE SAFETY PRECAUTIONS AND INSTRUCTIONS COULD RESULT IN DAMAGE TO THE PRODUCT OR VEHICLE AND/OR SERIOUS INJURY TO YOU AND YOUR PASSENGERS!**


**ACTIVATION OF THIS SIREN MAY DAMAGE UNPROTECTED EARS!**



#### CAUTION



Loud siren noise can cause hearing damage and/or loss. Refer to OSHA Section 1910.95 prior to putting ANY siren into service!

**For warranty information regarding this product, visit [www.whelen.com/warranty](http://www.whelen.com/warranty)**

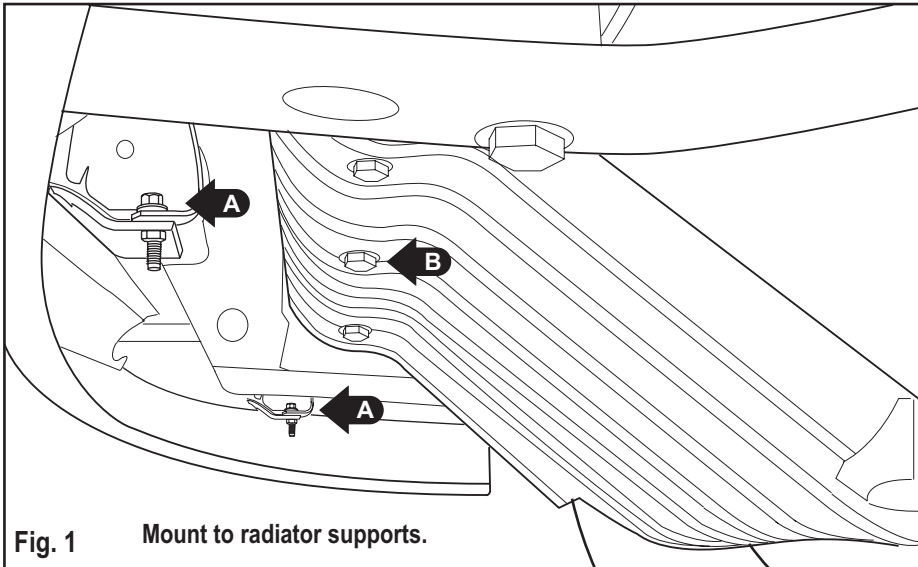

## Installation:

1. Locate the two radiator supports shown in figure 1 (A). The siren bracket will share the radiator support bolts and the middle bolt (B) that holds the gravel shield on.
2. Remove the 2 bolts from the radiator supports and the middle bolt that holds the gravel shield on. You should be able to access the radiator support through the vehicle's front vent holes.
3. Slide the bracket into the space between the radiator and the radiator supports as shown in figure 3.
4. Replace the radiator support's mounting hardware to secure the front of the bracket to the vehicle (Fig. 2).
5. Using the appropriate brace (see note), secure the rear of the bracket with the bolt you removed from the gravel shield (Fig. 2).
6. Extend the siren wires to your siren amplifier and follow the amplifiers instructions for the hook-up.

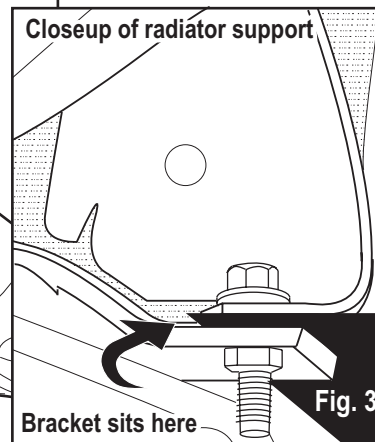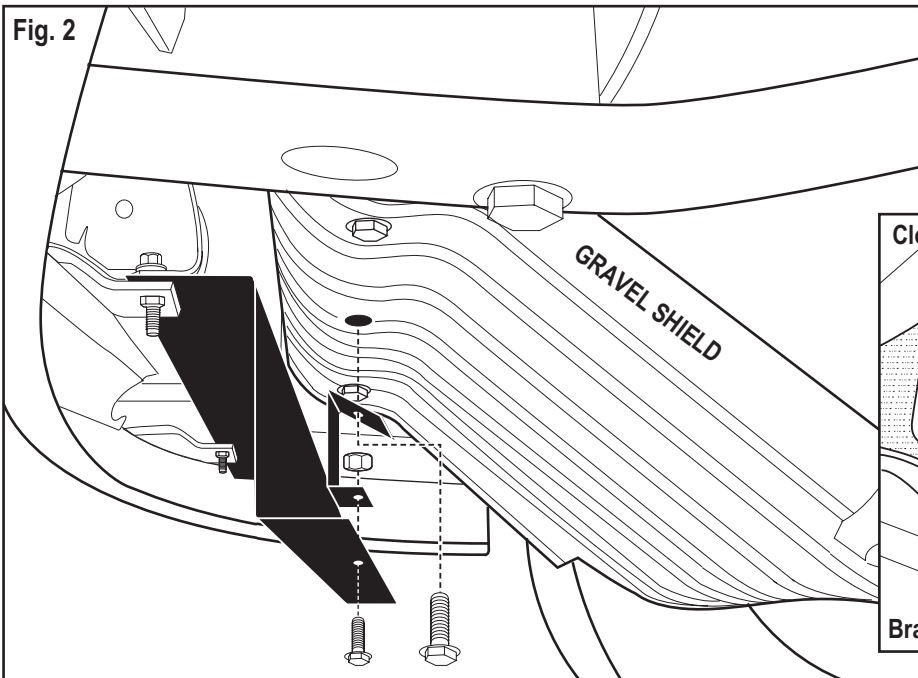

**Note:** This installation kit includes two different braces. The short brace (P/N 07-542840-023) is for use with the following vehicles:

- 2002 Silverado 2500HD
- 2002 GMC 3500-series

The long brace (P/N 07-563480-023) is for use with the following vehicles:

- 2002 Chevy Suburban 1500
- 2002 Chevy Tahoe
- 2002 Chevy Z-71 Suburban 1500
- 2002 Chevy Silverado 1500
- 2002 GMC Yukon

<b>ACTIVATION OF THIS SIREN MAY DAMAGE UNPROTECTED EARS!</b>	
 <b>Wear Protection!</b>	 <b>CAUTION</b> <b>Loud siren noise can cause hearing damage and/or loss.</b> Refer to OSHA Section 1910.95 prior to putting ANY siren into service!