


WHELEN[®]
ENGINEERING COMPANY INC.

51 Winthrop Road,
Chester, Connecticut 06412-0684
Phone: (860) 526-9504
Fax: (860) 526-4078

Installation Guide:
TIR3™ Super LED® Lighthead Bracket Model RBKTHD1
Side Cowl Mount, Harley-Davidson® w/State Police Package

Internet: www.whelen.com
Sales e-mail: autosale@whelen.com
Canadian Sales e-mail: autocan@whelen.com
Customer Service e-mail: custserv@whelen.com

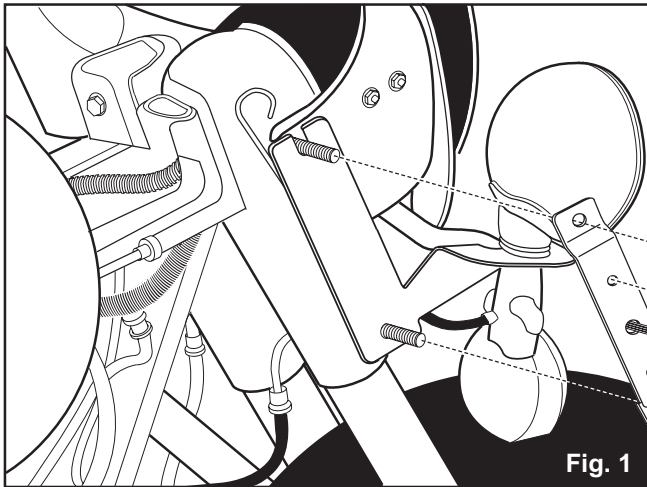

Installation:

This bracket will install on either side of the front fork of the motorcycle. You will use the bolts that hold the windshield bracket on. This manual shows the Road King. If you have the Electra-Glide, installation is the same, except you will have Torx head bolts instead of acorn nuts.

1. Install the lighthead onto the bracket as shown.
2. Remove the 2 acorn nuts that secure the front spot bracket to the motorcycle (do not remove the bracket).
3. Mount the bracket (with lighthead and flange) onto the motorcycle and then reinstall the acorn nuts to secure the bracket in place.
4. Extend the lighthead wires to your power source and refer to the lighthead manual for hookup and operation.

©2004 Whelen Engineering Company Inc.
Form No. 13932B (060707)


For warranty information regarding this product, visit www.whelen.com/warranty

WHELEN[®]
ENGINEERING COMPANY INC.

51 Winthrop Road,
Chester, Connecticut 06412-0684
Phone: (860) 526-9504
Fax: (860) 526-4078

Installation Guide:
TIR3™ Super LED® Lighthead Bracket Model RBKTHD1
Side Cowl Mount, Harley-Davidson® w/State Police Package

Internet: www.whelen.com
Sales e-mail: autosale@whelen.com
Canadian Sales e-mail: autocan@whelen.com
Customer Service e-mail: custserv@whelen.com

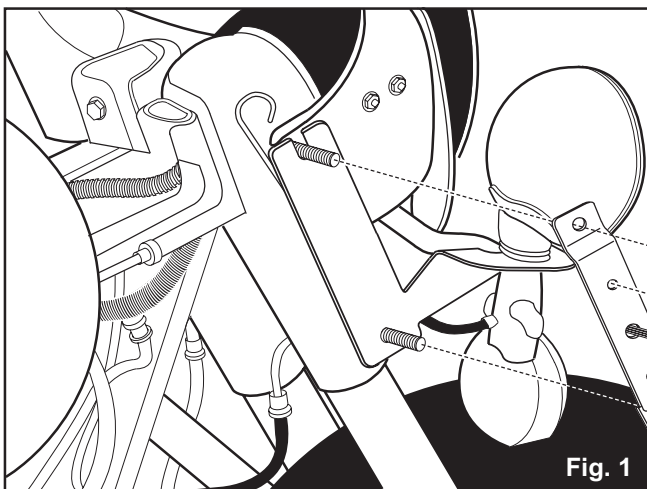

Installation:

This bracket will install on either side of the front fork of the motorcycle. You will use the bolts that hold the windshield bracket on. This manual shows the Road King. If you have the Electra-Glide, installation is the same, except you will have Torx head bolts instead of acorn nuts.

1. Install the lighthead onto the bracket as shown.
2. Remove the 2 acorn nuts that secure the front spot bracket to the motorcycle (do not remove the bracket).
3. Mount the bracket (with lighthead and flange) onto the motorcycle and then reinstall the acorn nuts to secure the bracket in place.
4. Extend the lighthead wires to your power source and refer to the lighthead manual for hookup and operation.

©2004 Whelen Engineering Company Inc.
Form No. 13932B (060707)

For warranty information regarding this product, visit www.whelen.com/warranty