

WHELEN[®]

ENGINEERING COMPANY INC.

51 Winthrop Road,
Chester, Connecticut 06412-0684
Phone: (860) 526-9504
Fax: (860) 526-4078

Mounting Guide: TAM83CV Mounting Bracket


Internet: www.whelen.com
Sales e-mail: autosale@whelen.com
Canadian Sales e-mail: autocan@whelen.com
Customer Service e-mail: custserv@whelen.com

Installation:

NOTE: This document is for mounting the TAM83 using special mounting brackets. Refer to the installation guide included with your lightbar for all other information.

1. Locate and remove the plastic covers over the tether strap holders on the rear deck, exposing the necessary brackets.
2. Place the lightbar onto the rear deck. **The lightbar mounting bolts should already be installed as outlined in the TAM83 Installation Guide.** Center the lightbar directly behind the third brake light.
3. Position the TAM83CV mounting bracket as shown and mount it to the vehicle bracket using the hardware provided. Do not tighten this hardware yet.
4. Lift the lightbar into position with the lightbar mounting bolts inserted through the bracket. Secure the lightbar to the mounting bracket. Do not tighten this hardware yet.

5. Straighten the mounting brackets and tighten the appropriate hardware. Now tighten the hardware securing the lightbar to the mounting bracket.

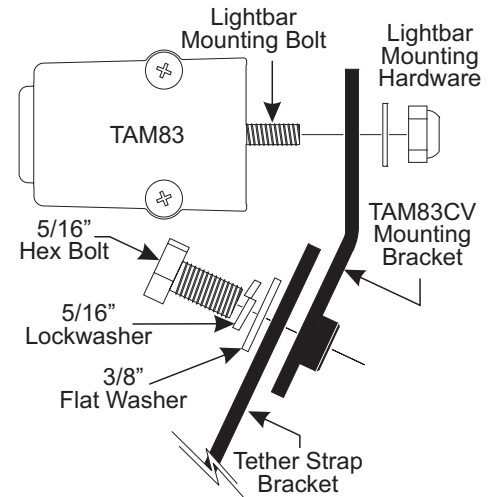

©2004 Whelen Engineering Company Inc.
Form No.13938A (080107)

For warranty information regarding this product, visit www.whelen.com/warranty

WHELEN[®]

ENGINEERING COMPANY INC.

51 Winthrop Road,
Chester, Connecticut 06412-0684
Phone: (860) 526-9504
Fax: (860) 526-4078

Mounting Guide: TAM83CV Mounting Bracket


Internet: www.whelen.com
Sales e-mail: autosale@whelen.com
Canadian Sales e-mail: autocan@whelen.com
Customer Service e-mail: custserv@whelen.com

Installation:

NOTE: This document is for mounting the TAM83 using special mounting brackets. Refer to the installation guide included with your lightbar for all other information.

1. Locate and remove the plastic covers over the tether strap holders on the rear deck, exposing the necessary brackets.
2. Place the lightbar onto the rear deck. **The lightbar mounting bolts should already be installed as outlined in the TAM83 Installation Guide.** Center the lightbar directly behind the third brake light.
3. Position the TAM83CV mounting bracket as shown and mount it to the vehicle bracket using the hardware provided. Do not tighten this hardware yet.
4. Lift the lightbar into position with the lightbar mounting bolts inserted through the bracket. Secure the lightbar to the mounting bracket. Do not tighten this hardware yet.

5. Straighten the mounting brackets and tighten the appropriate hardware. Now tighten the hardware securing the lightbar to the mounting bracket.

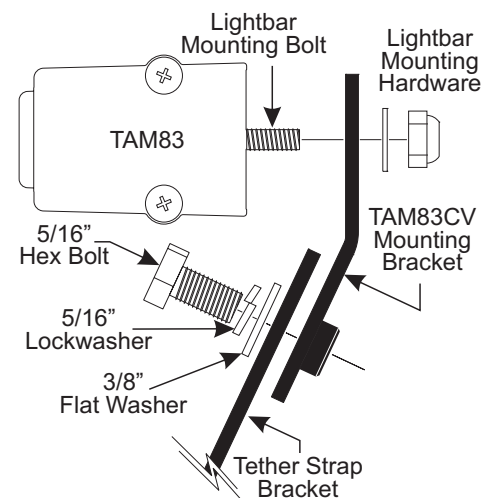

©2004 Whelen Engineering Company Inc.
Form No.13938A (080107)

For warranty information regarding this product, visit www.whelen.com/warranty