


# WHELEN<sup>®</sup>

ENGINEERING COMPANY INC.

## Installation Guide: TIR3™ Super-LED®/M4 Lighthead Mounting Bracket Trunk Mount - Ford Crown Victoria

51 Winthrop Road,  
Chester, Connecticut 06412-0684  
Phone: (860) 526-9504  
Fax: (860) 526-4078

Internet: [www.whelen.com](http://www.whelen.com)  
Sales e-mail: [autosale@whelen.com](mailto:autosale@whelen.com)  
Canadian Sales e-mail: [autocan@whelen.com](mailto:autocan@whelen.com)  
Customer Service e-mail: [custserv@whelen.com](mailto:custserv@whelen.com)

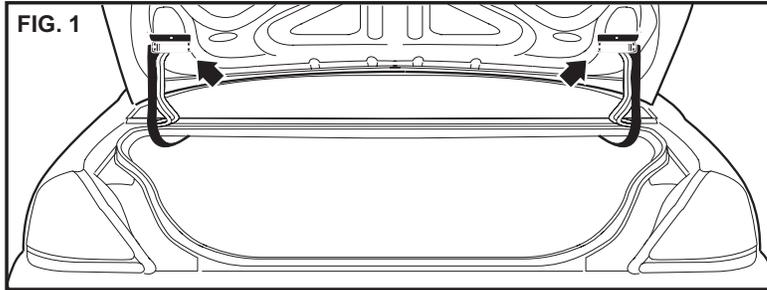


This bracket will mount to the inside of the trunk using one of the two bolts that hold the trunk hinges on.

**WARNING:** Install the brackets on one side of the vehicle at a time. If you loosen both trunk hinge bolts at the same time the trunk will shift and will not line up properly.

**Installation:**

1. Loosen (*do not remove*) the upper trunk hinge bolt on one side of the vehicle enough to slide the bracket into place as shown.
2. Slide the bracket under the bolt and tighten the bolt firmly.
3. Ty-wrap the wires to the trunk hinge as you extend them to your power source, being very careful that the wires won't be pinched when you open and close the trunk.
4. Repeat this procedure for the other side of the vehicle. Refer to the instructions included with your lighthead for wiring information.

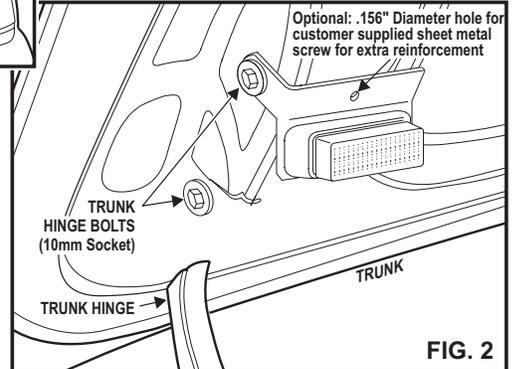

©2004 Whelen Engineering Company Inc.  
Form No. 13955B (022410)

**For warranty information regarding this product, visit [www.whelen.com/warranty](http://www.whelen.com/warranty)**


# WHELEN<sup>®</sup>

ENGINEERING COMPANY INC.

## Installation Guide: TIR3™ Super-LED®/M4 Lighthead Mounting Bracket Trunk Mount - Ford Crown Victoria

51 Winthrop Road,  
Chester, Connecticut 06412-0684  
Phone: (860) 526-9504  
Fax: (860) 526-4078

Internet: [www.whelen.com](http://www.whelen.com)  
Sales e-mail: [autosale@whelen.com](mailto:autosale@whelen.com)  
Canadian Sales e-mail: [autocan@whelen.com](mailto:autocan@whelen.com)  
Customer Service e-mail: [custserv@whelen.com](mailto:custserv@whelen.com)

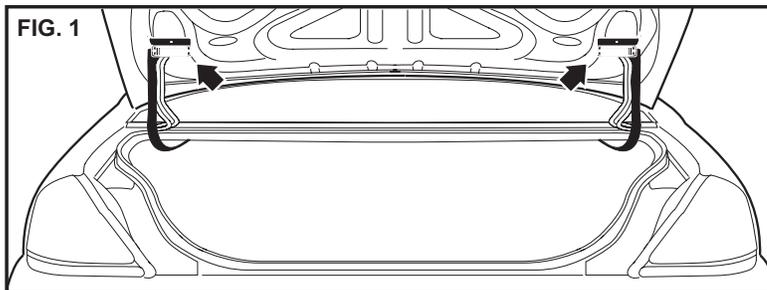


This bracket will mount to the inside of the trunk using one of the two bolts that hold the trunk hinges on.

**WARNING:** Install the brackets on one side of the vehicle at a time. If you loosen both trunk hinge bolts at the same time the trunk will shift and will not line up properly.

**Installation:**

1. Loosen (*do not remove*) the upper trunk hinge bolt on one side of the vehicle enough to slide the bracket into place as shown.
2. Slide the bracket under the bolt and tighten the bolt firmly.
3. Ty-wrap the wires to the trunk hinge as you extend them to your power source, being very careful that the wires won't be pinched when you open and close the trunk.
4. Repeat this procedure for the other side of the vehicle. Refer to the instructions included with your lighthead for wiring information.

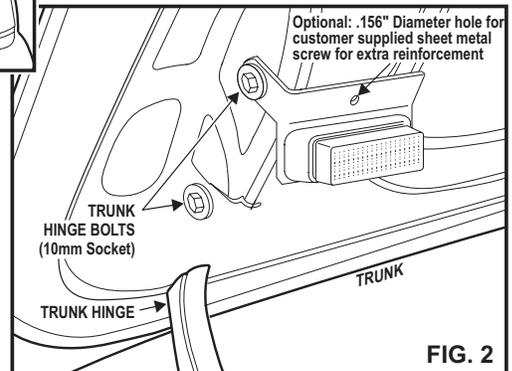

©2004 Whelen Engineering Company Inc.  
Form No. 13955B (022410)

**For warranty information regarding this product, visit [www.whelen.com/warranty](http://www.whelen.com/warranty)**

