


WHELEN[®]

ENGINEERING COMPANY INC.

51 Winthrop Road,
Chester, Connecticut 06412-0684
Phone: (860) 526-9504
Fax: (860) 526-4078

Installation Guide: TIR3™ Super-LED® Trunk Mount Ford Crown Victoria Part# 01-0417508-0_

Internet: www.whelen.com
Sales e-mail: autosale@whelen.com
Canadian Sales e-mail: autocan@whelen.com
Customer Service e-mail: custserv@whelen.com

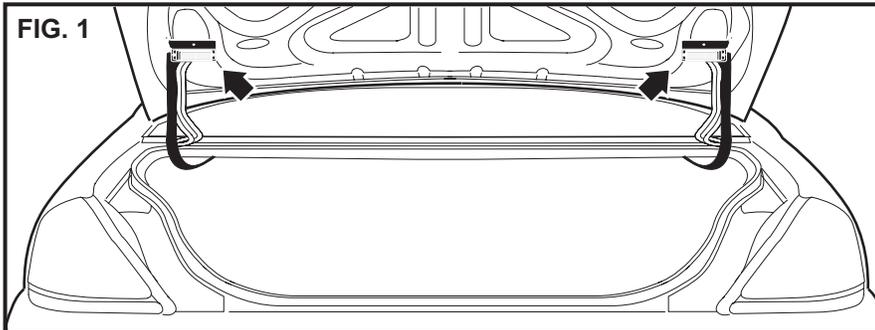


This bracket will mount to the inside of the trunk using one of the two bolts that hold the trunk hinges on.

WARNING: Install the brackets on one side of the vehicle at a time. If you loosen both trunk hinge bolts at the same time the trunk will shift and will not line up properly.

Installation:

1. Loosen (*do not remove*) the upper trunk hinge bolt on one side of the vehicle, just enough to slide the bracket into place as shown.
2. Slide the bracket under the bolt and tighten the bolt firmly.
3. Ty-wrap the wires to the trunk hinge as you extend them to your power source, being very careful that the wires won't be pinched when you open and close the trunk.
4. Repeat this procedure for the other side of the vehicle then wire as shown on next page.

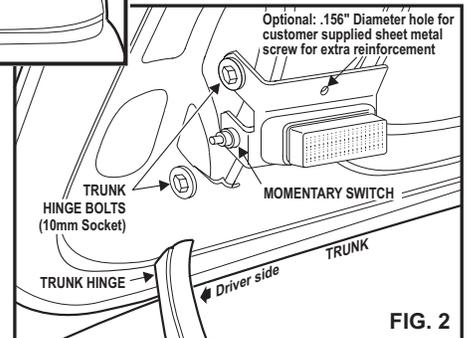

©2005 Whelen Engineering Company Inc.
Form No. 13971A (120106)

For warranty information regarding this product, visit www.whelen.com/warranty


WHELEN[®]

ENGINEERING COMPANY INC.

51 Winthrop Road,
Chester, Connecticut 06412-0684
Phone: (860) 526-9504
Fax: (860) 526-4078

Installation Guide: TIR3™ Super-LED® Trunk Mount Ford Crown Victoria Part# 01-0417508-0_

Internet: www.whelen.com
Sales e-mail: autosale@whelen.com
Canadian Sales e-mail: autocan@whelen.com
Customer Service e-mail: custserv@whelen.com

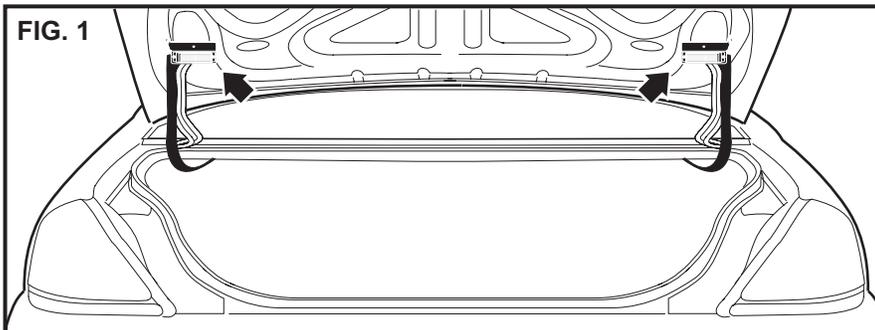


This bracket will mount to the inside of the trunk using one of the two bolts that hold the trunk hinges on.

WARNING: Install the brackets on one side of the vehicle at a time. If you loosen both trunk hinge bolts at the same time the trunk will shift and will not line up properly.


Installation:

1. Loosen (*do not remove*) the upper trunk hinge bolt on one side of the vehicle, just enough to slide the bracket into place as shown.
2. Slide the bracket under the bolt and tighten the bolt firmly.
3. Ty-wrap the wires to the trunk hinge as you extend them to your power source, being very careful that the wires won't be pinched when you open and close the trunk.
4. Repeat this procedure for the other side of the vehicle then wire as shown on next page.

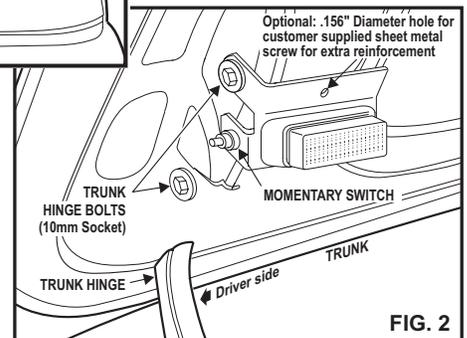



©2005 Whelen Engineering Company Inc.
Form No. 13971A (120106)

For warranty information regarding this product, visit www.whelen.com/warranty

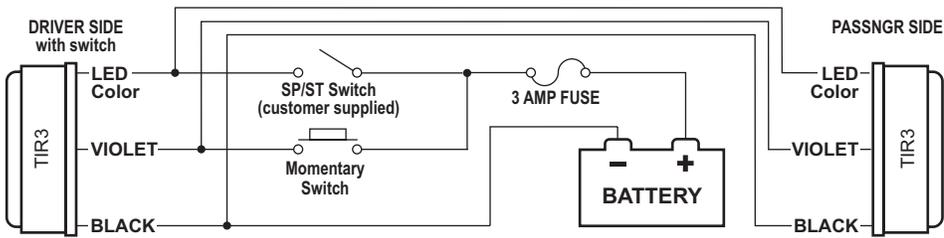

Low Power: To activate low power, press the momentary switch for less than 1 second. This will set the lighthead into low power. To switch the lighthead back to high power*, turn the unit off and then back on.

* When the unit is in low power, activating the momentary switch for more than 1 second, will also reset the unit to high power.

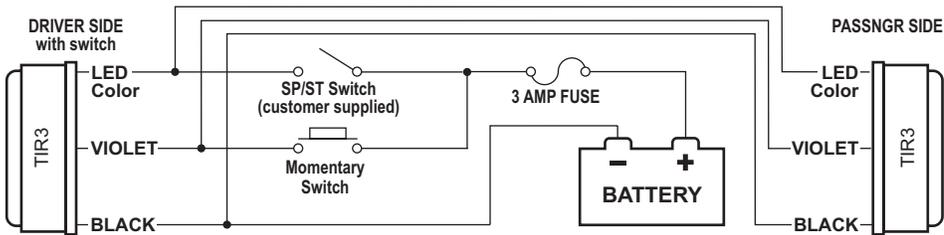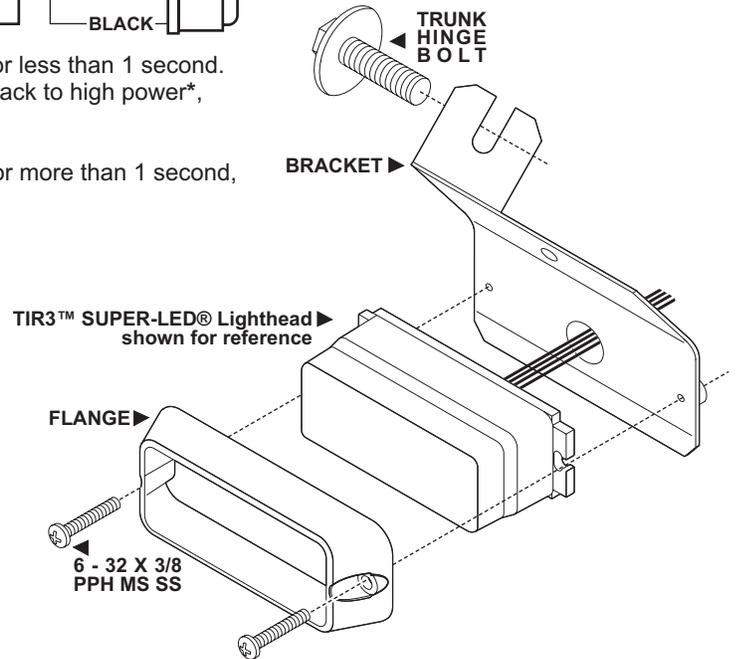

Low Power: To activate low power, press the momentary switch for less than 1 second. This will set the lighthead into low power. To switch the lighthead back to high power*, turn the unit off and then back on.

* When the unit is in low power, activating the momentary switch for more than 1 second, will also reset the unit to high power.

