

WHELEN[®]

ENGINEERING COMPANY INC.


51 Winthrop Road
 Chester, Connecticut 06412-0684
 Phone: (860) 526-9504
 Fax: (860) 526-4078
 Internet: www.whelen.com
 Sales e-mail: autosale@whelen.com

Installation Guide: Police Equipment Upfitter Interface Module (2006-07 Dodge Charger/Magnum)


This module provides conditioned signals to and from the Police Equipment Interface Module (PEIM) found on all Dodge Charger/Magnum police vehicles. The 24-position PEIM connector is located under the Instrument Panel Center Console. To access this connector, it is necessary to remove the plastic cover located just ahead of the police

equipment mounting bracket on the center console. For further information, refer to the Police Package Owner's Manual supplied with the vehicle.

WARNING! Do not alter the vehicle harness circuits in any manner (including splicing or cutting).

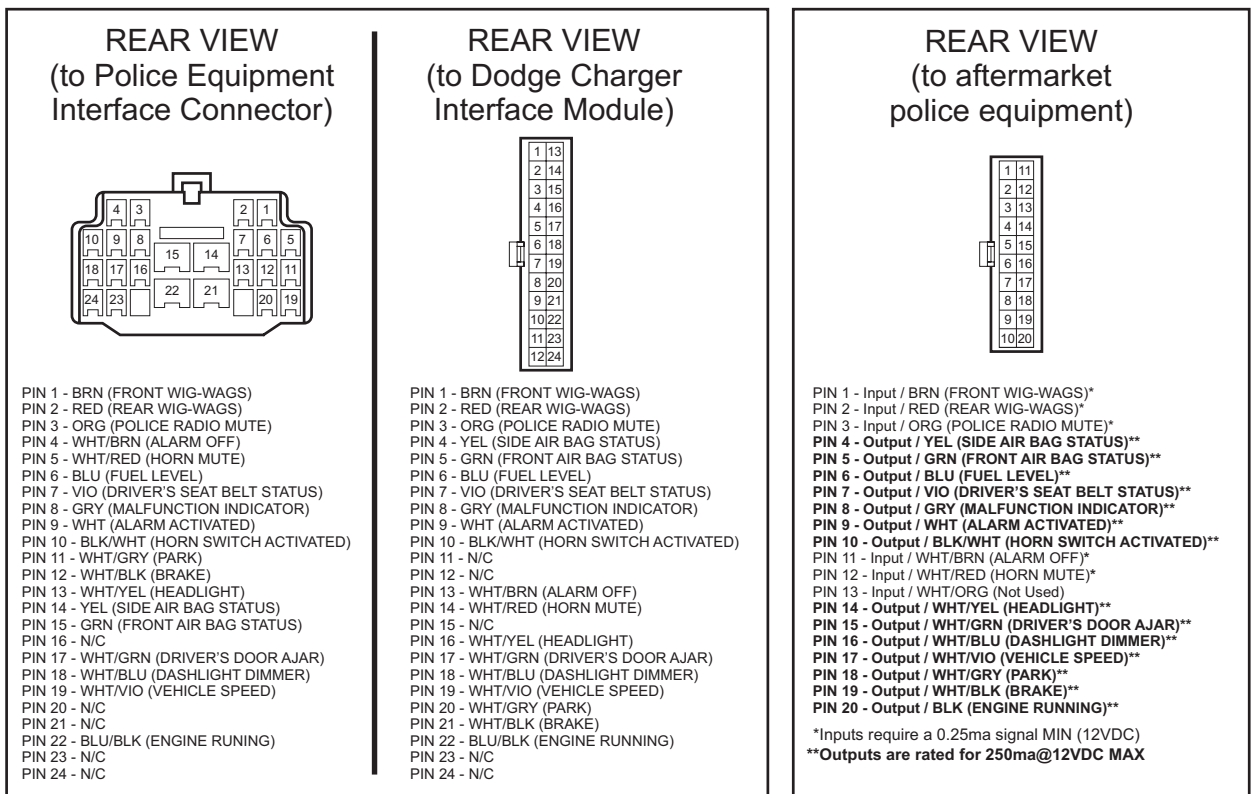

Miscellaneous

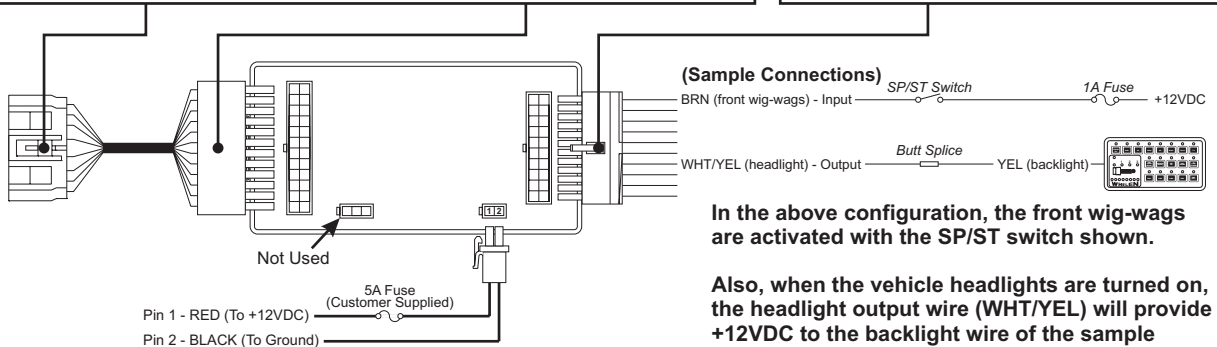

WARNING! All customer supplied wires that connect to the positive terminal of the battery must be sized to supply at least 125% of the maximum operating current and FUSED at the battery to carry that load. DO NOT USE CIRCUIT BREAKERS WITH THIS PRODUCT!

In the above configuration, the front wig-wags are activated with the SP/ST switch shown.

Also, when the vehicle headlights are turned on, the headlight output wire (WHT/YEL) will provide +12VDC to the backlight wire of the sample control head.

Remember:
 Inputs **REQUIRE** +12VDC
 Outputs **PROVIDE** +12VDC