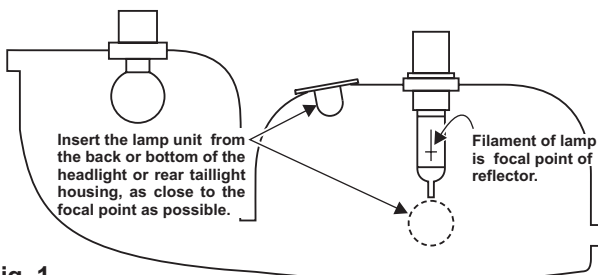


51 Winthrop Road,  
Chester, Connecticut 06412-0684  
Phone: (860) 526-9504  
Fax: (860) 526-4078  
Sales Email: autosale@whelen.com  
Canadian Sales: autocan@whelen.com  
Customer Service: custserv@whelen.com

**Safety First:** This document provides all the necessary information to allow your Whelen product to be properly and safely installed. Before beginning the installation and/or operation of your new product, the installation technician and operator must read this manual completely. Important information is contained herein that could prevent serious injury or damage.


- Proper installation of this product requires the installer to have a good understanding of automotive electronics, systems and procedures.
- If mounting this product requires drilling holes, the installer MUST be sure that no vehicle components or other vital parts could be damaged by the drilling process. Check both sides of the mounting surface before drilling begins. Also de-burr any holes and remove any metal shards or remnants. Install grommets into all wire passage holes.
- Do not install this product or route any wires in the deployment area of your air bag. Equipment mounted or located in the air bag deployment area will damage or reduce the effectiveness of the air bag, or become a projectile that could cause serious personal injury or death. Refer to your vehicle owners manual for the air bag deployment area. The User/Installer assumes full responsibility to determine proper mounting location, based on providing ultimate safety to all passengers inside the vehicle.
- For this product to operate at optimum efficiency, a good electrical connection to chassis ground must be made. The recommended procedure requires the product ground wire to be connected directly to the NEGATIVE (-) battery post.
- If this product uses a remote device to activate or control this product, make sure that this control is located in an area that allows both the vehicle and the control to be operated safely in any driving condition.
- Do not attempt to activate or control this device in a hazardous driving situation.
- This product contains either strobe light(s), halogen light(s), high-intensity LEDs or a combination of these lights. Do not stare directly into these lights. Momentary blindness and/or eye damage could result.
- Use only soap and water to clean the outer lens. Use of other chemicals could result in premature lens cracking (crazing) and discoloration. Lenses in this condition have significantly reduced effectiveness and should be replaced immediately. Inspect and operate this product regularly to confirm its proper operation and mounting condition. Do not use a pressure washer to clean this product.
- **WARNING!** All customer supplied wires that connect to the positive (+) terminal of the battery must be sized to supply at least 125% of the maximum operating current and **FUSED** "at the battery" to carry that load. **DO NOT USE CIRCUIT BREAKERS WITH THIS PRODUCT!**
- **FAILURE TO FOLLOW THESE PRECAUTIONS AND INSTRUCTIONS COULD RESULT IN DAMAGE TO THE PRODUCT OR VEHICLE AND/OR SERIOUS INJURY TO YOU AND YOUR PASSENGERS!**

**Installation:**  
Installation of the 6 LED Hide-A-Way into a composite automotive headlight or taillight assembly:



**Fig. 1**  
Top view of automotive composite headlight or taillight housing assembly.

1. Follow manufacturers instructions to remove the headlight (or taillight) reflector assembly from the vehicle.
2. Select the mounting location for the LED Hide-A-Way, keeping in mind the following:
  - The LED Hide-A-Way will share the same reflector as the headlight, brake light, or signal light. Make sure the Hide-A-Way does not interfere with the operation of these lights.
  - There must be a minimum of one inch of space between the LED Hide-A-Way and the lens.
  - The LED Hide-A-Way must not be installed above the horizontal centerline of the reflector.
  - The LED Hide-A-Way must not be installed above any OEM supplied light.
3. Choose a surface in the rear or bottom of the housing which is as flat as possible. Using a hole saw, cut a 1" hole in the housing as shown (Fig. 1 & 2) and de-burr the hole.
4. Insert the LED lamp assembly into the reflector housing. Mark the location for the two mounting holes (3/32" DIA.). Remove the lamp assembly and drill the holes.
5. Install the lamp assembly and gasket using the two provided #4 sheet metal screws and secure the lamp to the reflector assembly.
6. Repeat steps 1 thru 5 for the remaining light.
7. Remount both headlight assemblies to the vehicle and route the connector cables to their designated control switches (power and Scan-Lock™).

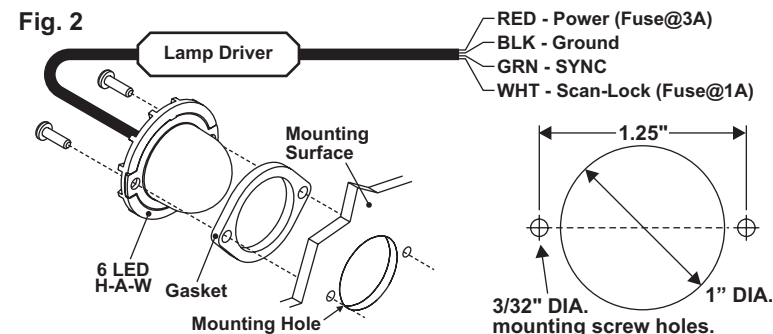

©2008 Whelen Engineering Company Inc.  
Form No. 14208 (062708)

8. The lamp driver should now be secured to the vehicle using the double-sided adhesive tape provided.

**IMPORTANT NOTE:** If the LED Hide-A-Way is being used in an area previously occupied by an S30HA light assembly, it is important to seal the mounting holes used by the previous assembly with RTV or other suitable material.

All customer supplied wires that connect to the positive terminal of the battery must be sized to supply at least 125% of the maximum operating current and **FUSED** at the battery to carry that load. **DO NOT USE CIRCUIT BREAKERS WITH THIS PRODUCT!**

**Wiring & Operation:**

The LED Hide-A-Way is powered & controlled by the 4-wire cable coming from the light assembly. Their functions are as follows:

**RED: Positive** - Extend the RED wire to a +12VDC power source (Fuse @ 3 amps).

**BLACK: Ground** - Extend the BLK wire to the negative terminal of the battery.

**GREEN: SYNC** - Connect the GRN wire to other SYNC capable devices to synchronize their output. Cap off this wire if it is not used.

**WHITE: Scan-Lock™** - Extend the WHT wire to a customer supplied momentary switch (Fuse @ 1 amp). See Scan-Lock™ section for operation.

**IMPORTANT WARNING: DO NOT ATTEMPT TO USE THE LED LIGHTHEAD(S) WITHOUT THE LED DRIVER MODULE CONNECTED.**

**Scan-Lock™**

In order to program flash patterns, the lighthouse must be on. With the appropriate lighthouse(s) activated:

**TO CHANGE PATTERNS:** To advance to the next available pattern apply +12VDC to the WHT wire for less than 1 second and release. To cycle back to the previous pattern apply +12VDC to the WHT wire for more than 1 second and release.

**TO CHANGE THE DEFAULT PATTERN:** When the desired pattern is displayed, allow it to run for more than 5 seconds. The lighthouse will now display this pattern when initially activated.

**TO RESTORE THE FACTORY DEFAULT PATTERN:** This will reset all patterns back to their default settings. With the light turned off, apply power to the WHT wire. With power applied to the WHT wire, turn light on. Allow the unit to run for 3 seconds before removing power from the WHT wire.

A Normally Open momentary switch should be used to control Scan-Lock operation.

**Flash Patterns -**

The following is a list of all the available flash patterns:

**SYNC Patterns**

- |                         |                        |
|-------------------------|------------------------|
| 1. SignalAlert™ 75 PH.1 | 8. SingleFlash 75 PH.2 |
| 2. SignalAlert™ 75 PH.2 | 9. ComAlert™ PH.1      |
| 3. CometFlash@75 PH.1   | 10. ComAlert™ PH.2     |
| 4. CometFlash@75 PH.2   | 11. LongBurst™ PH.1    |
| 5. DoubleFlash 75 PH.1  | 12. LongBurst™ PH.2    |
| 6. DoubleFlash 75 PH.2  | 13. PingPong™ PH.1     |
| 7. SingleFlash 75 PH.1  | 14. PingPong™ PH.2     |

**Non-SYNC Patterns**

- |                     |
|---------------------|
| 15. SingleFlash 60  |
| 16. SingleFlash 90  |
| 17. SingleFlash 120 |
| 18. SingleFlash 300 |
| 19. DoubleFlash 150 |
| 20. ComAlert™ 150   |
| 21. ActionFlash™ 1  |
| 22. ActionFlash™ 2  |
| 23. ModuFlash™      |
| 24. ActionScan™     |
| 25. Steady          |

**Phase Operation**

Phase 1 (PH.1) flashes **simultaneously** with PH.1  
Phase 2 (PH.2) flashes **simultaneously** with PH.2  
PH.1 **alternates** with PH.2

**For warranty information regarding this product, visit [www.whelen.com/warranty](http://www.whelen.com/warranty)**