

WHELEN[®]

ENGINEERING COMPANY INC.

51 Winthrop Road,
Chester, Connecticut 06412-0684
Phone: (860) 526-9504
Fax: (860) 526-4078

Installation Guide: Harley-Davidson[®] Crash Bar Mounting Bracket for the Model WS321 Siren Amplifier

Internet: www.whelen.com
Sales e-mail: autosale@whelen.com
Canadian Sales e-mail: autocan@whelen.com
Customer Service e-mail: custserv@whelen.com

Installation:

1. Hook the top of the bracket over the top of the crash bar as shown in figure 1.
2. Secure the top of the bracket with the supplied bolt, flat washer and spacer in the order shown (Fig. 2).
3. Slip the loop clamp around the bottom of the crash bar and secure the bottom of the bracket to the loop clamp with the supplied wing screw and flat washer (Fig. 2).
4. Secure the siren to the bracket with the 4 bolts included with the siren (Fig. 2).
5. Make sure all hardware is tightened firmly and extend the siren wires to their power source (Refer to the sirens instructions for hookup and voltage).

IMPORTANT! It is the responsibility of the installation technician to make sure that the installation and operation of this product will not interfere with or compromise the operation or efficiency of any vehicle equipment!

IMPORTANT! Before returning the vehicle to active service, visually confirm the proper operation of this product, as well as all vehicle components/equipment.

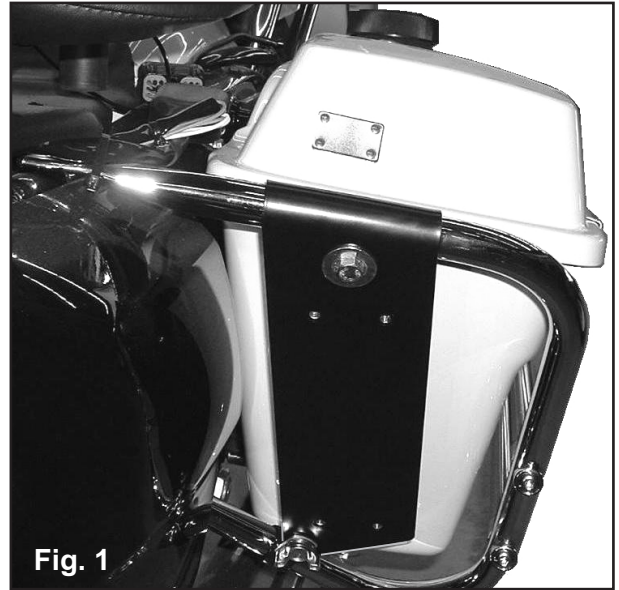


Fig. 1

©2009 Whelen Engineering Company Inc.
Form No.14276 (031909)

For warranty information regarding this product, visit www.whelen.com/warranty

WHELEN[®]

ENGINEERING COMPANY INC.

51 Winthrop Road,
Chester, Connecticut 06412-0684
Phone: (860) 526-9504
Fax: (860) 526-4078

Installation Guide: Harley-Davidson[®] Crash Bar Mounting Bracket for the Model WS321 Siren Amplifier

Internet: www.whelen.com
Sales e-mail: autosale@whelen.com
Canadian Sales e-mail: autocan@whelen.com
Customer Service e-mail: custserv@whelen.com

Installation:

1. Hook the top of the bracket over the top of the crash bar as shown in figure 1.
2. Secure the top of the bracket with the supplied bolt, flat washer and spacer in the order shown (Fig. 2).
3. Slip the loop clamp around the bottom of the crash bar and secure the bottom of the bracket to the loop clamp with the supplied wing screw and flat washer (Fig. 2).
4. Secure the siren to the bracket with the 4 bolts included with the siren (Fig. 2).
5. Make sure all hardware is tightened firmly and extend the siren wires to their power source (Refer to the sirens instructions for hookup and voltage).

IMPORTANT! It is the responsibility of the installation technician to make sure that the installation and operation of this product will not interfere with or compromise the operation or efficiency of any vehicle equipment!

IMPORTANT! Before returning the vehicle to active service, visually confirm the proper operation of this product, as well as all vehicle components/equipment.

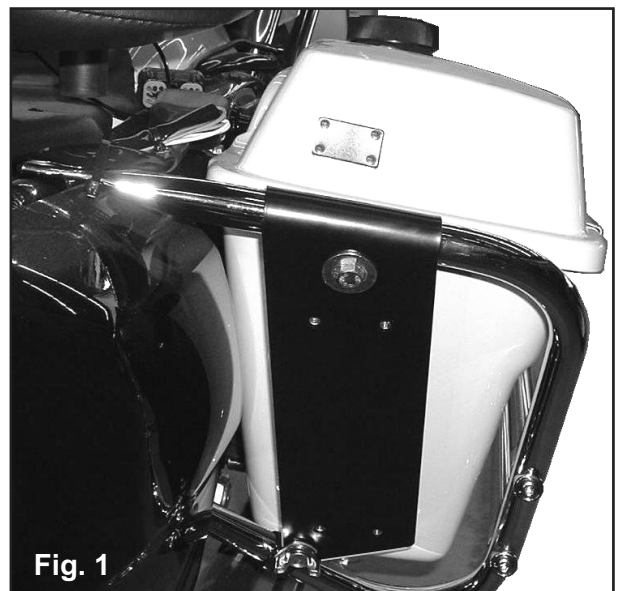


Fig. 1

©2009 Whelen Engineering Company Inc.
Form No.14276 (031909)

For warranty information regarding this product, visit www.whelen.com/warranty

Fig. 2

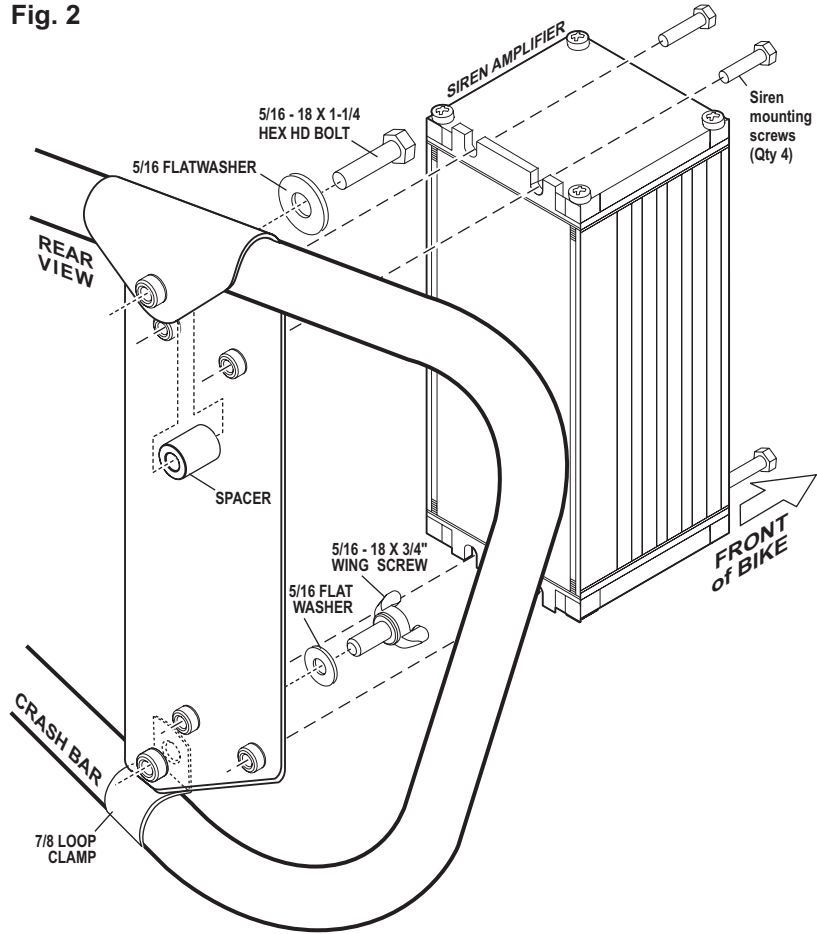


Fig. 2

