

WHELEN[®]

ENGINEERING COMPANY INC.

51 Winthrop Road
Chester, Connecticut 06412-0684
Phone: (860) 526-9504
Fax: (860) 526-4078
Internet: www.whelen.com
Sales e-mail: autosale@whelen.com
Canadian Sales e-mail: autocan@whelen.com
Customer Service e-mail: custserv@whelen.com

Installation Guide: Dominator™ Traffic Advisor™ Series 2011 Ford Taurus & Police Interceptor

Safety First

This document provides all the necessary information to allow your Whelen product to be properly and safely installed. Before beginning the installation and/or operation of your new product, the installation technician and operator must read this manual completely. Important information is contained herein that could prevent serious injury or damage.


- **Proper installation of this product requires the installer to have a good understanding of automotive electronics, systems and procedures.**
- **If mounting this product requires drilling holes, the installer MUST be sure that no vehicle components or other vital parts could be damaged by the drilling process. Check both sides of the mounting surface before drilling begins. Also de-burr any holes and remove any metal shards or remnants. Install grommets into all wire passage holes.**
- **If this manual states that this product may be mounted with suction cups, magnets, tape or Velcro®, clean the mounting surface with a 50/50 mix of isopropyl alcohol and water and dry thoroughly.**
- **Do not install this product or route any wires in the deployment area of your air bag. Equipment mounted or located in the air bag deployment area will damage or reduce the effectiveness of the air bag, or become a projectile that could cause serious personal injury or death. Refer to your vehicle owner's manual for the air bag deployment area. The User/Installer assumes full responsibility to determine proper mounting location, based on providing ultimate safety to all passengers inside the vehicle.**
- **For this product to operate at optimum efficiency, a good electrical connection to chassis ground must be made. The recommended procedure requires the product ground wire to be connected directly to the NEGATIVE (-) battery post.**
- **If this product uses a remote device to activate or control this product, make sure that this control is located in an area that allows both the vehicle and the control to be operated safely in any driving condition.**
- **Do not attempt to activate or control this device in a hazardous driving situation.**
- **This product contains either strobe light(s), halogen light(s), high-intensity LEDs or a combination of these lights. Do not stare directly into these lights. Momentary blindness and/or eye damage could result.**
- **Use only soap and water to clean the outer lens. Use of other chemicals could result in premature lens cracking (crazing) and discoloration. Lens in this condition have significantly reduced effectiveness and should be replaced immediately. Inspect and operate this product regularly to confirm its proper operation and mounting condition. Do not use a pressure washer to clean this product.**
- **It is recommended that these instructions be stored in a safe place and referred to when performing maintenance and/or reinstallation of this product.**
- **FAILURE TO FOLLOW THESE SAFETY PRECAUTIONS AND INSTRUCTIONS COULD RESULT IN DAMAGE TO THE PRODUCT OR VEHICLE AND/OR SERIOUS INJURY TO YOU AND YOUR PASSENGERS!**

For warranty information regarding this product, visit www.whelen.com/warranty

Installation: Standard Mounting Kit

WARNING! When the Traffic Advisor™ is mounted to the rear of the vehicle, the cable exit must be on the passenger side. If not, the flash sequence you choose on the control head will be incorrect. For example, a left flashing pattern will flash right.


- Position the unit in its proposed mounting location to ensure that it fits properly. Draw a pencil line on the mounting surface using the top and bottom of the extrusion as a guide.
- Two 1/4" holes are required to mount this unit. These holes may be located anywhere along the horizontal centerline of the unit, but must be centered between the upper and lower lines made in step 1. It's best to locate the mounting holes as far apart as possible.
- Drill a hole in each of the areas scribed in the last step (1/4" drill bit).
- Slide the 2 carriage bolts (installed in the rear of the bar) over to the 2 mounting holes, install the rubber gaskets onto the bolts as shown then insert them into the mounting holes
- Secure the unit by threading the flat washer and elastic stop nut onto each bolt and tightening them firmly.

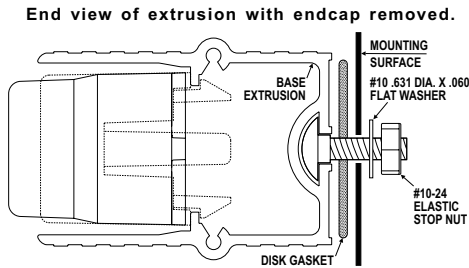

WARNING! All customer supplied wires that connect to the positive terminal of the battery must be sized to supply at least 125% of the maximum operating current and FUSED at the battery to carry the load. **DO NOT USE CIRCUIT BREAKERS WITH THIS PRODUCT!**

WIRING DIAGRAM

IMPORTANT: Switches must be sized to accommodate a minimum of 5 Amps.

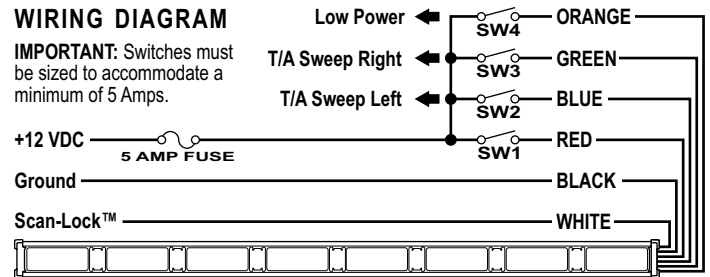

Scan-Lock™ can select a different pattern for Traffic Advisor or FLASHERS.

Regular Flash Patterns:

- CometFlash®
- SingleFlash 375
- SingleFlash 150
- SingleFlash 75
- ActionFlash™
- ActionScan™

Traffic Advisor Patterns:

- Seq. On (Solid)
- Seq. On - Seq. Off
- 1-Lamp TripleFlash™
- 2-Lamp TripleFlash™

FUNCTION	SWITCHES			
	SW1	SW2	SW3	SW4
Left Sweep	ON	ON	OFF	OFF
Right Sweep	ON	OFF	ON	OFF
Split Sweep	ON	ON	ON	OFF
TA Flasher	ON	OFF	OFF	OFF
Low Power	X	X	X	ON

X = Switch position doesn't affect operation.

IMPORTANT WARNING!


CAUTION! DO NOT LOOK DIRECTLY AT THESE LED'S WHILE THEY ARE ON. MOMENTARY BLINDNESS AND/OR EYE DAMAGE COULD RESULT!

IMPORTANT! It is the responsibility of the installation technician to make sure that the installation and operation of this product will not interfere with or compromise the operation or efficiency of any vehicle equipment!

Installation: Child Restraint Bracket

- On the rear deck, locate the 3 outboard caps covering the child restraint strap holders. Remove the plastic covers to access the tether strap holders (Fig. 1).
- Install the mounting bracket as shown in Fig 2. **Be sure to tighten the mounting hardware firmly.**
- Secure the Traffic Advisor to the mounting bracket as shown using the provided hardware. Confirm that the Traffic Advisor is level and clears the 3rd brake light.
- Extend the Traffic Advisor wires to your power source. It is left to the installation technician's discretion to select a path for the wires that will not damage them or interfere with the operation of any vehicle components or equipment.
- Refer to the Traffic Advisor manual for wiring and fusing.

IMPORTANT! Before returning the vehicle to active service, visually confirm the proper operation of this product, as well as all vehicle components/equipment.

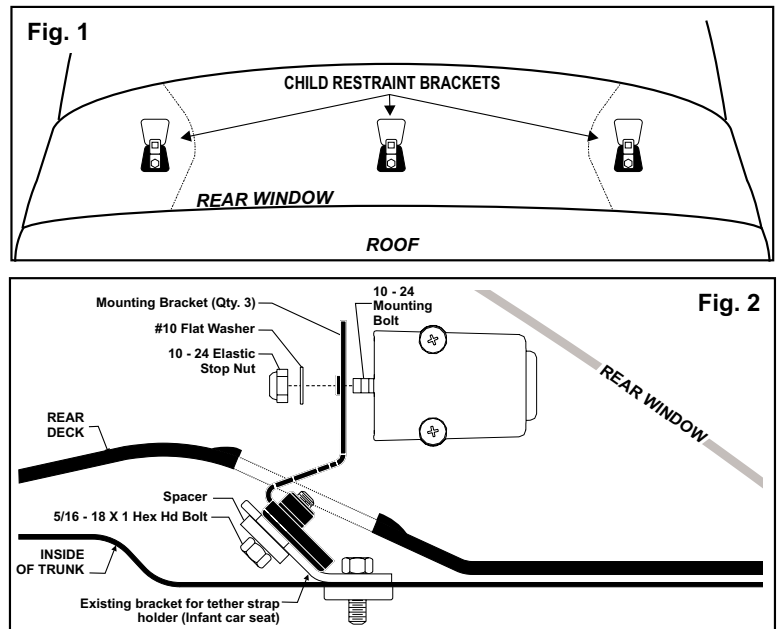

Low Power / Orange Wire: This feature steps the lightbar down to low power for nighttime use. Applying +12 volts to the ORANGE wire holds the Traffic Advisor in low power mode until voltage is removed. (a toggle switch is recommended).

Scan-Lock™ / White Wire:

Operation: With the lightbar switched on, activate whichever function you wish to change the flash pattern of and follow the instructions below.

TO CYCLE THROUGH ALL PATTERNS: To cycle forward, apply +12 volts to the WHITE wire for less than 1 second and release. To cycle backward, apply +12 volts to the WHITE wire for more than 1 second and release.


TO SET A PATTERN AS DEFAULT: Allow the pattern to run for more than 5 seconds. The lighthead will now display this pattern when active.

TO RESET TO THE FACTORY DEFAULT PATTERN: Turn off power and apply +12 volts to the WHITE wire while turning power on.

You may want to connect the Scan-Lock™ wire to a switch. An SPST momentary switch is recommended.

Ford Police Interceptor

QTY	ITEM	PART NUMBER	DESCRIPTION
*		01-0686679-10	Dominator Traffic Advisor™ - 10 LT HEAD AMB
1	1	11-263726-000	ENDCAP, (3)TIR EXTR. MT. no HOLE
11	2	38-0463725-00	DIVIDER, EXTRUSION MOUNT
10	3	02-036B494612	LTHEAD ASSY, 3TIR LED - AMB/STDY
1	4	01-026B584-00	ELECT T/A 5 LIGHT DUAL CONTRL DOMINATOR
1	5	46-0743389-00	CABLE ASSY, W/ CONN. & ENDCAP
1	6	11-443031-036	EXTRUSION, MACH'D - 36.75 3TIR TA
4	7	14-062219-06D	SCREW, #6-32 X 3/8 PPHMS ROLOK ZN
6	8	14-104066-100	CARRIAGE BOLT, #10-24 X 5/8 LG SS
6	9	16-1002220-50	WASHER, #10 FLAT .631 DIA. X .060
6	10	13-104120-062	NUT, #10-24 ELASTIC STOP
1	11	21-11121602-0	GROMMET, 1/2"
1	12	10-0523644-10	LABEL, DOMAINATOR 10 LT TA
3	13	07-286642-023	BRACKET, REAR DECK T/A LINZ6 TAURUS
3	14	14-148436-160	BOLT, 5/16-18 X 1 HEX HEAD SS
3	15	20-0023627-00	SPACER, 5/16 ID 1.5 OD .125 THK BLACK

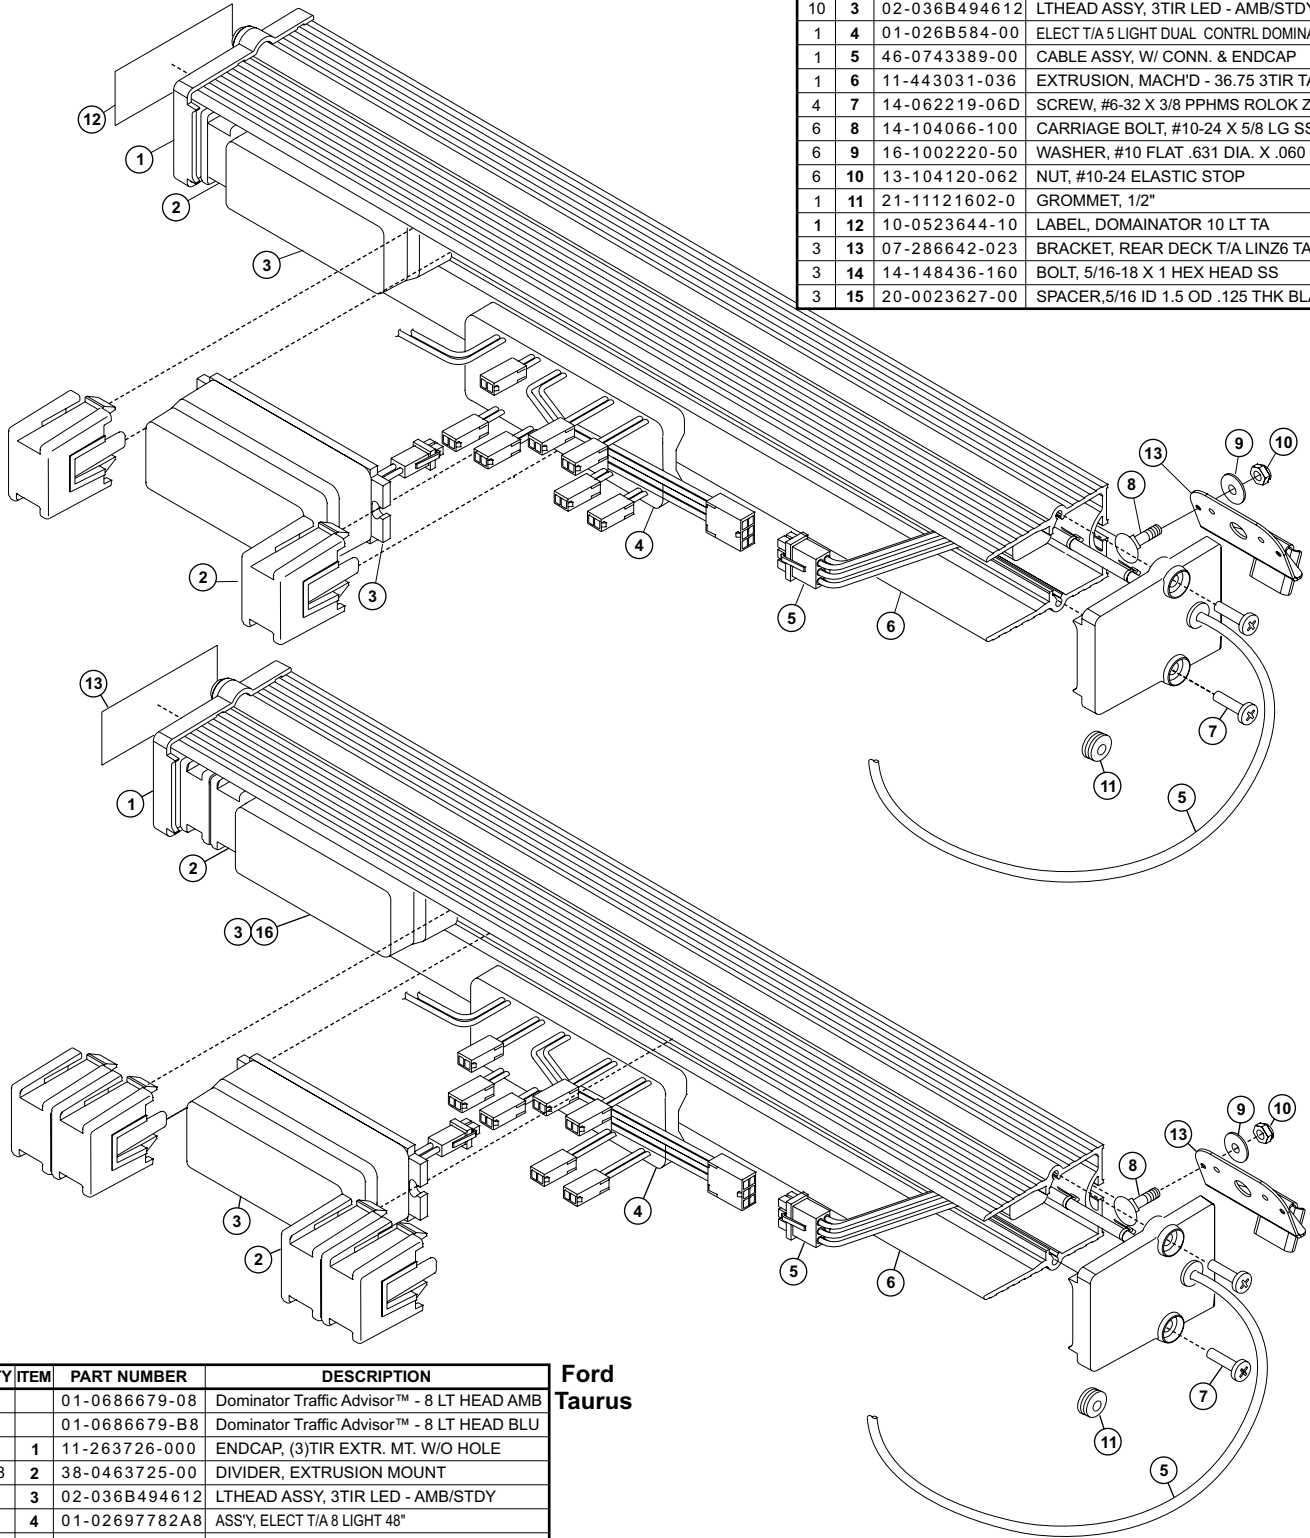

Ford Taurus

QTY	QTY	ITEM	PART NUMBER	DESCRIPTION
*			01-0686679-08	Dominator Traffic Advisor™ - 8 LT HEAD AMB
*			01-0686679-B8	Dominator Traffic Advisor™ - 8 LT HEAD BLU
1	1	1	11-263726-000	ENDCAP, (3)TIR EXTR. MT. W/O HOLE
18	18	2	38-0463725-00	DIVIDER, EXTRUSION MOUNT
-	8	3	02-036B494612	LTHEAD ASSY, 3TIR LED - AMB/STDY
1	1	4	01-02697782A8	ASSY, ELECT T/A 8 LIGHT 48"
1	1	5	46-0743389-00	CABLE ASSY, W/ CONN. & ENDCAP
1	1	6	11-443031-036	EXTRUSION, MACH'D - 36.75 3TIR TA
4	4	7	14-062219-06D	SCREW, #6-32 X 3/8 PPHMS ROLOK ZN
6	6	8	14-104066-100	CARRIAGE BOLT, #10-24 X 5/8 LG SS
6	6	9	16-1002220-50	WASHER, #10 FLAT .631 DIA. X .060
6	6	10	13-104120-062	NUT, #10-24 ELASTIC STOP
1	1	11	21-11121602-0	GROMMET, 1/2"
1	1	12	10-0523644-___	LABEL, DOMAINATOR 8 LT TA
3	3	13	07-286642-023	BRACKET, REAR DECK T/A LINZ6 TAURUS
3	3	14	14-148436-160	BOLT, 5/16-18 X 1 HEX HEAD SS
3	3	15	20-0023627-00	SPACER, 5/16 ID 1.5 OD .125 THK BLACK
8	-	16	02-036B494622	LTHEAD ASSY, 3TIR LED - BLU/STDY