

WHELEN[®]

ENGINEERING COMPANY INC.

51 Winthrop Road
Chester, Connecticut 06412-0684
Phone: (860) 526-9504
Fax: (860) 526-4078
Internet: www.whelen.com
Sales e-mail: autosale@whelen.com
Canadian Sales e-mail: canadiansales@whelen.com
Customer Service e-mail: custserv@whelen.com

Installation Guide: Inner Edge[®] Traffic Advisor[™] Series Lo-Profile Rear Deck Interior Lightbar 2011 Ford Taurus

Safety First

This document provides all the necessary information to allow your Whelen product to be properly and safely installed. Before beginning the installation and/or operation of your new product, the installation technician and operator must read this manual completely. Important information is contained herein that could prevent serious injury or damage.



- **Proper installation of this product requires the installer to have a good understanding of automotive electronics, systems and procedures.**
- **Failure to use specified installation parts and/or hardware will void the product warranty!**
- **If mounting this product requires drilling holes, the installer MUST be sure that no vehicle components or other vital parts could be damaged by the drilling process. Check both sides of the mounting surface before drilling begins. Also de-burr any holes and remove any metal shards or remnants. Install grommets into all wire passage holes.**
- **If this manual states that this product may be mounted with suction cups, magnets, tape or Velcro[®], clean the mounting surface with a 50/50 mix of isopropyl alcohol and water and dry thoroughly.**
- **Do not install this product or route any wires in the deployment area of your air bag. Equipment mounted or located in the air bag deployment area will damage or reduce the effectiveness of the air bag, or become a projectile that could cause serious personal injury or death. Refer to your vehicle owner's manual for the air bag deployment area. The User/Installer assumes full responsibility to determine proper mounting location, based on providing ultimate safety to all passengers inside the vehicle.**
- **For this product to operate at optimum efficiency, a good electrical connection to chassis ground must be made. The recommended procedure requires the product ground wire to be connected directly to the NEGATIVE (-) battery post.**
- **If this product uses a remote device to activate or control this product, make sure that this control is located in an area that allows both the vehicle and the control to be operated safely in any driving condition.**
- **Do not attempt to activate or control this device in a hazardous driving situation.**
- **This product contains either strobe light(s), halogen light(s), high-intensity LEDs or a combination of these lights. Do not stare directly into these lights. Momentary blindness and/or eye damage could result.**
- **Use only soap and water to clean the outer lens. Use of other chemicals could result in premature lens cracking (crazing) and discoloration. Lens in this condition have significantly reduced effectiveness and should be replaced immediately. Inspect and operate this product regularly to confirm its proper operation and mounting condition. Do not use a pressure washer to clean this product.**
- **It is recommended that these instructions be stored in a safe place and referred to when performing maintenance and/or reinstallation of this product.**
- **FAILURE TO FOLLOW THESE SAFETY PRECAUTIONS AND INSTRUCTIONS COULD RESULT IN DAMAGE TO THE PRODUCT OR VEHICLE AND/OR SERIOUS INJURY TO YOU AND YOUR PASSENGERS!**

For warranty information regarding this product, visit www.whelen.com/warranty

Installation:

IMPORTANT! The lightbar should be located a minimum of 16" from any radio antennas!

1. On the rear deck (passenger side) locate the cap covering the child restraint strap holder. Snap the cover open to access the bolt, then remove the bolt and lift off the cap.
2. Locate the passenger side adjustable buck mount bracket and a deck mount bracket included with the mounting kit. Secure the deck mount bracket onto the strap holder using the 1/4 - 20 X 3/4 inch Hex Head Machine Screw, 1/4 inch External Tooth Lock Washer and 1/4 inch Flat Washer provided. and tighten hardware firmly.
3. Next, loosely secure the adjustable buck mount bracket to the deck mount bracket using the supplied 1/4 - 20 X 5/8 inch Phillips Pan Head Machine Screws, 1/4 inch External Tooth Lock Washers and 1/4 inch Flat Washer.
4. Repeat steps 1 - 3 for the Driver-side mounting bracket.

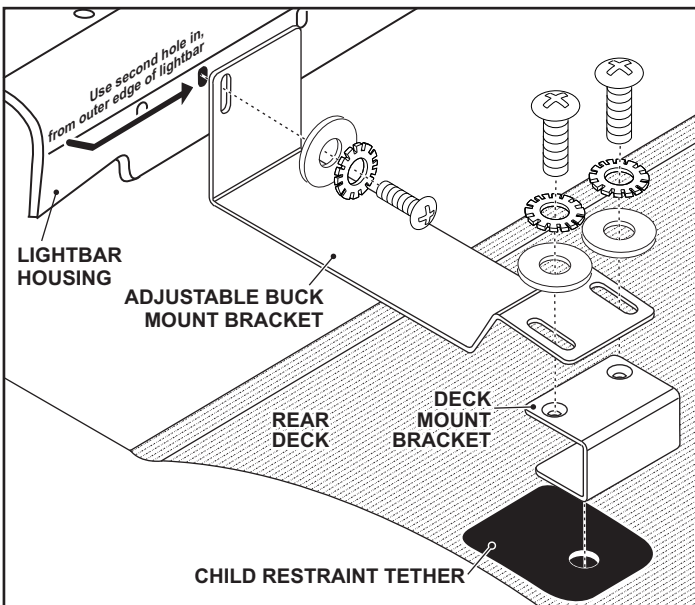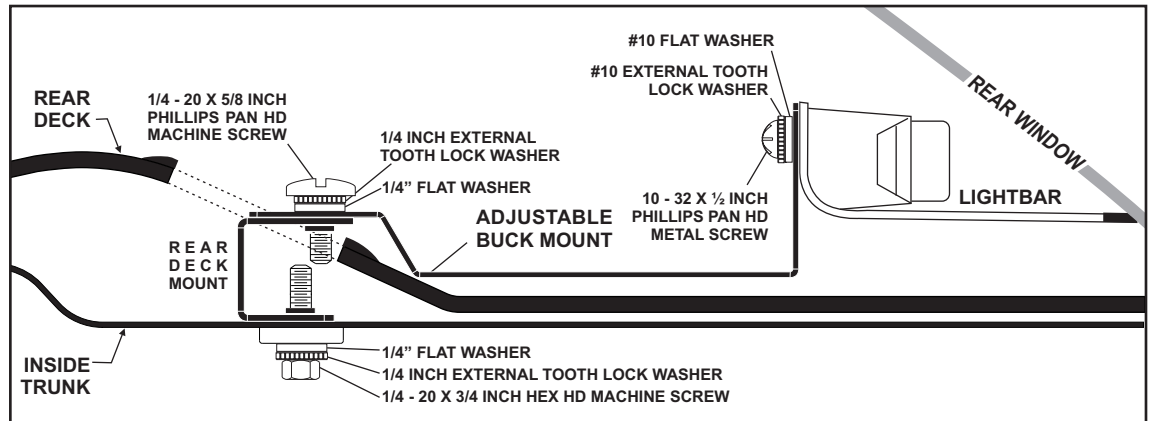

5. Position the lightbar onto the rear deck and secure the lightbar to the two buck mount brackets using the hardware shown.
6. Hold the lightbar housing firmly against the glass as you tighten the hardware securing the buck mount brackets to the deck mount brackets. Make sure that the rubber window seal on the lightbar housing fully engages the rear window. The lightbar should maintain the seal against the windshield when the pressure is released.
7. Route the input cable to your control head (refer to the installation manual included with your control head for wiring information).

IMPORTANT! When routing the lightbar cable, it is left to the installation technician's discretion to select a path for these cables that will both protect the cables from possible damage and not interfere with the operation of any other vehicle components or equipment. Refer to the instructions included with your switches for switch wiring information.

Wiring and Operation:

WARNING! All customer supplied wires that connect to the positive terminal of the battery must be sized to supply at least 125% of the maximum operating current and **FUSED** at the battery to carry that load. **DO NOT USE CIRCUIT BREAKERS WITH THIS PRODUCT!**

BLACK - Ground

Extend and connect the BLK wire to the ground terminal of the vehicle battery.

RED - Main Power

Route the RED wire to an unused, ignition-controlled circuit fused @ 10 Amps. Do not connect to this circuit yet.

When this product is wired as outlined here, the lightbar will not function until the ignition switch is in the ON, RUN or ACC position.

WHT-ORG - Scan-Lock™ Flash patterns

When the TA feature is active, this wire will select TA patterns; when the end flasher feature is active, this wire will select the end flasher patterns. Do not use Scan-Lock™ while both features are simultaneously active.

TO CYCLE THROUGH ALL PATTERNS: Apply +12 volts to the WHT/ORG wire for less than 1 second and release. To cycle backward apply +12 volts for more than 1 second and release.

TO SET A PATTERN AS DEFAULT: When the desired pattern is displayed, allow it to run for more than 5 seconds. The lightbar will now display this pattern when active.

TO RESET TO THE FACTORY DEFAULT PATTERN: Turn off power, apply +12 volts to the WHT/ORG wire, then turn power on.

A Normally Open Momentary Switch is best for this circuit. Fuse @1A.

Traffic Advisor Patterns:

1. Seq. to Solid 2. Seq. On/Seq. Off 3. 1-Lamp TripleFlash™ 4. 2-Lamp TripleFlash

Scan-Lock End Flasher Patterns:

1. SignalAlert™ 3. SingleFlash 375 5. ActionFlash™
2. CometFlash® 4. SingleFlash 75 6. ActionScan™

WHT/GRN - Low Power Operation

For low power operation apply +12VDC to the WHT/GRN wire. The unit will continue to operate in Low Power mode until this voltage is removed. A SP/ST switch is best suited for this circuit. Fuse this wire @1A.

BROWN - End Flashers

Applying +12VDC to this wire activates the end flashers. A SP/ST switch is best suited for this circuit. Fuse this wire @1A.

BLUE - TA Flash

When +12VDC is applied to this wire, the Traffic Advisor™ lightbar function becomes active. A SP/ST switch is best suited for this circuit. Fuse this wire @1A.

ORANGE - Left


When +12VDC is applied to this wire, the lights sweep from right to left. An SP/ST switch is best suited for this circuit. Fuse this wire @1A.

WHT/BLK - Right

When +12VDC is applied to this wire, the lights sweep from left to right. An SP/ST switch is best suited for this circuit. Fuse this wire @1A.

NOTE: If you apply power to both the WHT/BLK and ORG wires simultaneously, you will get a split pattern. Both sides will start at the center and sweep outward.

IMPORTANT! Before returning the vehicle to active service, visually confirm the proper operation of this product, as well as all vehicle components/equipment.

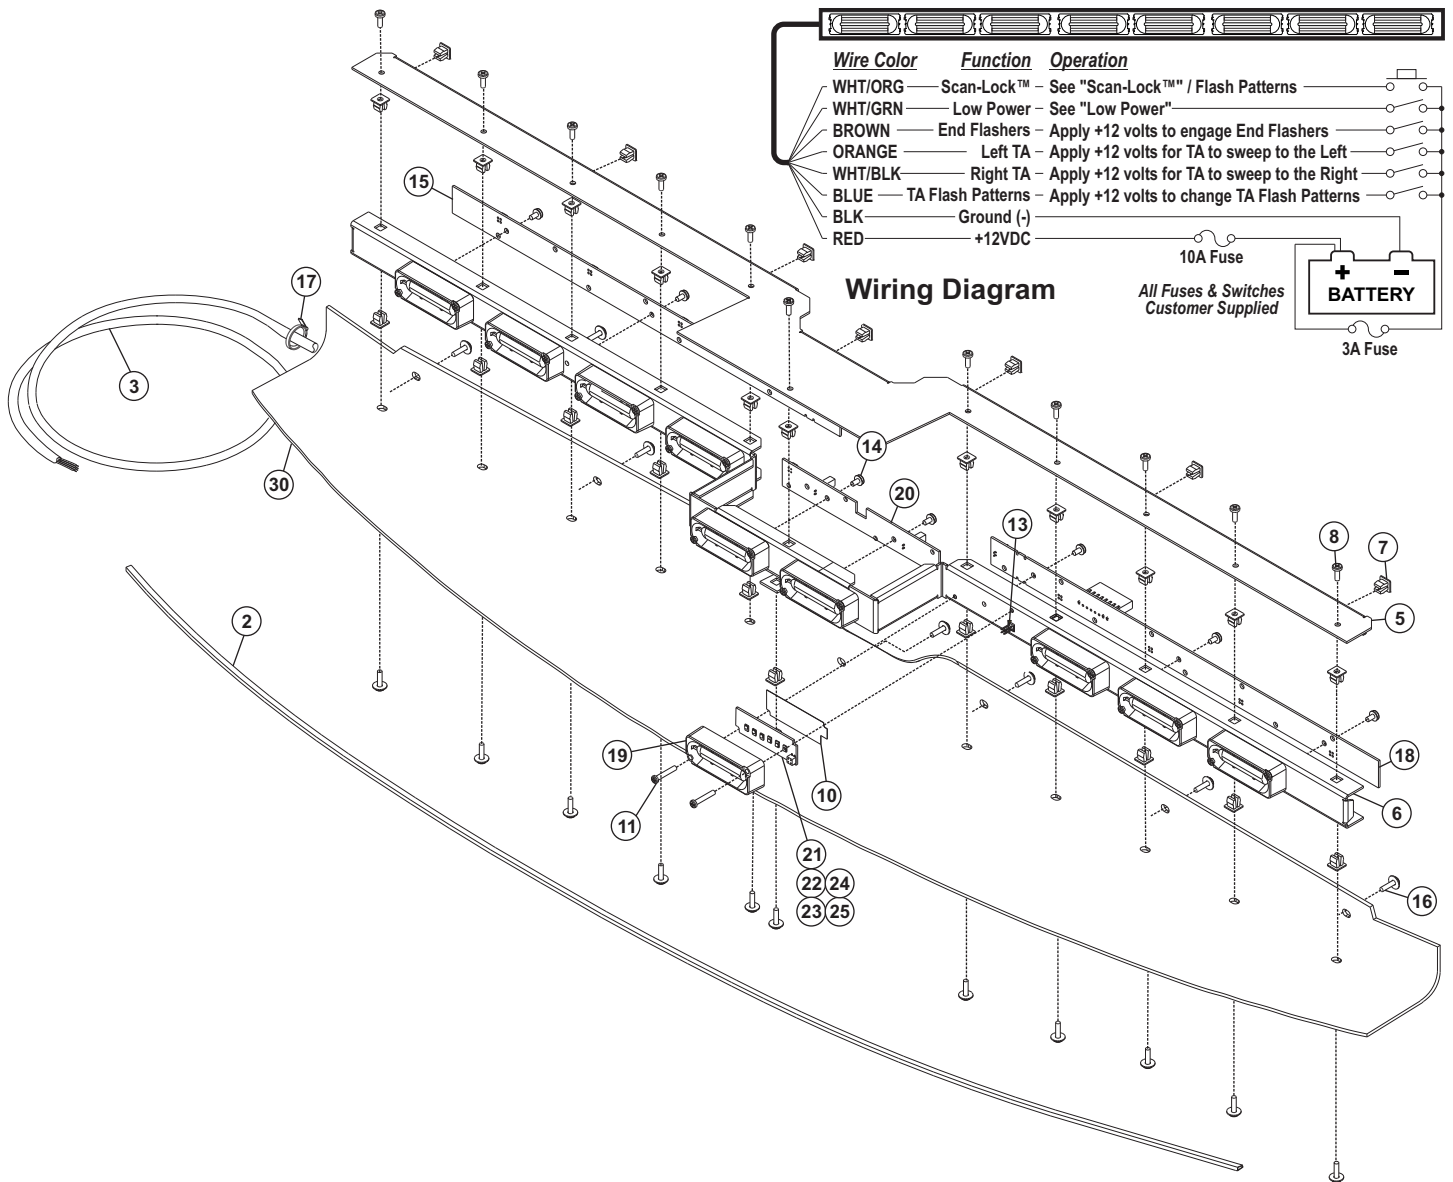

QTY	QTY	QTY	QTY	QTY	ITEM	PART NUMBER	DESCRIPTION
				*		01-0687063-20	FULL LO-PRO INNER-EDGE-8 LT.
			*			01-0687063-21	FULL LO-PRO INNER-EDGE-6 LT 2 END FLASHERS
		*				01-0687063-22	FULL LO-PRO INNER-EDGE-10 LT
		*				01-0687063-23	FULL LO-PRO INNER-EDGE-6 LT 4 END FLASHERS
*						01-0687063-24	FULL LO-PRO INNER-EDGE-8 LT 2 END FLASHERS
1	1	1	1	1	2	38-0543284-45	SEAL, EXTRUDED
1	1	1	1	1	3	46-0743403-00	CABLE ASSY, 9/C 18 GA. TPR 20'
1	1	1	1	1	4	46-076B820-01	HARNESS, INTERCONNECT
1	1	1	1	1	5	07-787053-023	PLATE, MOUNTING
1	1	1	1	1	6	07-287059-023	BRACKET LIGHTHEAD MOUNT
29	29	29	29	29	7	13-062C40-16J	SCREW GROMMET, #6/8
11	11	11	11	11	8	15-06521B-060	SCREW, 6 X 3/8 PPH PLASTI-LOK
1	1	1	1	1	9	10-0523745-**	LABEL
10	10	10	8	8	10	56-023577-000	CO-THERM INSULATOR
20	20	20	16	16	11	14-040216-120	SCREW, 4-40 X 3/4 PPHMS SS
10	10	10	8	8	13	40-0620400-03	HEADER, .1" X 2 POS DOUBLE

8	8	8	8	8	14	14-062216-041	SCREW, 6-32 X 1/4 PPHMS W/ LOCKWASHER
1	1	1	1	1	15	02-016D638-00	ASSY, PCB DRIVER BD REAR DECK
18	18	18	18	18	16	15-M23B1C-120	SCREW, M4.2 X 12mm PHIL WSHRHD BLACK
1	1	1	1	1	17	26-0215001-06	TY WRAP, 6"
1	1	1	1	1	18	02-016D636-00	ASSY, PCB DRIVER/LOGIC REAR DECK
10	10	10	8	8	19	02-0323547-00	LINEAR ASSY
1	1	1	1	1	20	02-016D640-00	ASSY, PCB CTR DRIVER REAR DECK
A/R	A/R	A/R	A/R	A/R	21	02-016B753-A0	ASSY, PCB 6 LED ARRAY - AMBER
A/R	A/R	A/R	A/R	A/R	22	02-016C296-20	ASSY, PCB 6 LED ARRAY - BLUE
A/R	A/R	A/R	A/R	A/R	23	02-016C296-30	ASSY, PCB 6 LED ARRAY - WHITE
A/R	A/R	A/R	A/R	A/R	24	02-016C296-40	ASSY, PCB 6 LED ARRAY - GREEN
A/R	A/R	A/R	A/R	A/R	25	02-016C296-50	ASSY, PCB 6 LED ARRAY - RED
1	1	1	1	1	28	46-076D665-00	HARNESS, T/D INTERCONNECT
1	1	1	1	1	29	39-1M17672-08	HOUSING, PLUG 8 POS 18 AWG
A/R	A/R	A/R	A/R	A/R	30	11-487091-000	HOUSING, REAR, FULL 2011 TAURUS
A/R	A/R	A/R	A/R	A/R	31	01-0487063-02	KIT, MTG 10 LT REAR DECK 2011 TAURUS