

## WHELEN<sup>®</sup> ENGINEERING COMPANY INC.

51 Winthrop Road,  
Chester, Connecticut 06412-0684  
Phone: (860) 526-9504  
Fax: (860) 526-4078

### Installation Guide: Vertex™ Installation Disc Field Service Kit


Internet: [www.whelen.com](http://www.whelen.com)  
Sales e-mail: [autosale@whelen.com](mailto:autosale@whelen.com)  
Canadian Sales e-mail: [canadiansales@whelen.com](mailto:canadiansales@whelen.com)  
Customer Service e-mail: [custserv@whelen.com](mailto:custserv@whelen.com)

1. Remove and discard the existing #4 x 3/8 sheet metal screws securing the Vertex to the housing. Do not discard the #4 flat washers.
2. Place the Installation Disc (item 3) into position behind the Vertex as shown.
3. Install the #4 flat washer (Item 4) onto the #4 x 5/8 (Item 5) sheet metal screws included with this kit and secure the Vertex to the housing.

**WARNING! Over-tightening these screws could damage the Vertex™ and/or housing assembly. Do not continue to tighten once the Vertex is secured against the housing.**

#### Contents:

Qty.	Description
1	Installation Disc (Item 3)
2	#4 x 5/8 Phillips Pan Head Sheet Metal Screw (Item 5)

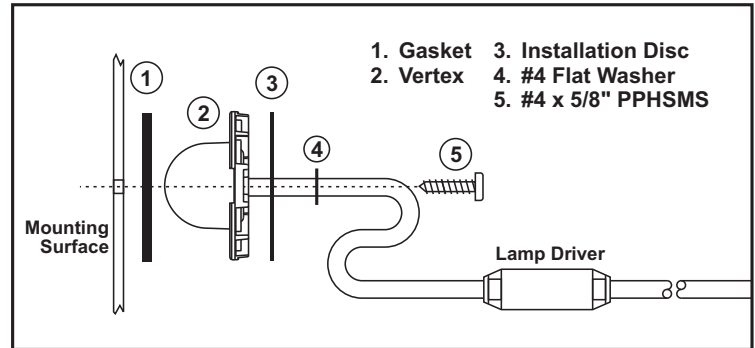

©2013 Whelen Engineering Company Inc.  
Form No. 14672 (021413)

For warranty information regarding this product, visit [www.whelen.com/warranty](http://www.whelen.com/warranty)

## WHELEN<sup>®</sup> ENGINEERING COMPANY INC.

51 Winthrop Road,  
Chester, Connecticut 06412-0684  
Phone: (860) 526-9504  
Fax: (860) 526-4078

### Installation Guide: Vertex™ Installation Disc Field Service Kit


Internet: [www.whelen.com](http://www.whelen.com)  
Sales e-mail: [autosale@whelen.com](mailto:autosale@whelen.com)  
Canadian Sales e-mail: [canadiansales@whelen.com](mailto:canadiansales@whelen.com)  
Customer Service e-mail: [custserv@whelen.com](mailto:custserv@whelen.com)

1. Remove and discard the existing #4 x 3/8 sheet metal screws securing the Vertex to the housing. Do not discard the #4 flat washers.
2. Place the Installation Disc (item 3) into position behind the Vertex as shown.
3. Install the #4 flat washer (Item 4) onto the #4 x 5/8 (Item 5) sheet metal screws included with this kit and secure the Vertex to the housing.

**WARNING! Over-tightening these screws could damage the Vertex™ and/or housing assembly. Do not continue to tighten once the Vertex is secured against the housing.**

#### Contents:

Qty.	Description
1	Installation Disc (Item 3)
2	#4 x 5/8 Phillips Pan Head Sheet Metal Screw (Item 5)

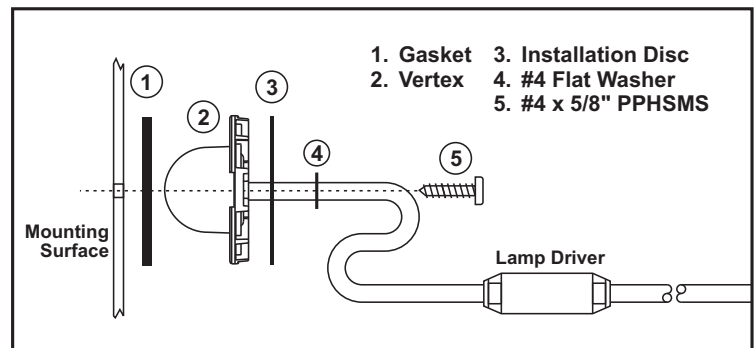

©2013 Whelen Engineering Company Inc.  
Form No. 14672 (021413)

For warranty information regarding this product, visit [www.whelen.com/warranty](http://www.whelen.com/warranty)