

# WHELEN<sup>®</sup>

ENGINEERING COMPANY INC.


51 Winthrop Road,  
Chester, Connecticut 06412-0684  
Phone: (860) 526-9504  
Fax: (860) 526-4078

## Installation: Sapphire Control Head Keypad Identification Label

Internet: [www.whelen.com](http://www.whelen.com)  
Sales e-mail: [autosale@whelen.com](mailto:autosale@whelen.com)  
Canadian Sales e-mail: [canadiansales@whelen.com](mailto:canadiansales@whelen.com)  
Customer Service e-mail: [custserv@whelen.com](mailto:custserv@whelen.com)

### Installation

1. Remove the appropriate key cover from the sprue.
2. Remove the label that best describes the function of the designated button from the label sheet.
3. Position the label onto the key so that it is centered and oriented properly.
4. Press the key cover onto the key until the retaining fingers lock into place. **NOTE! The key cover must be square to the control head during installation. Do not force the cover onto the key!**

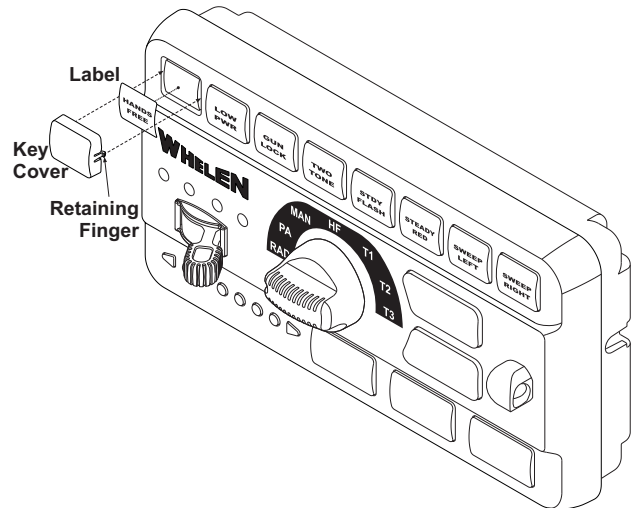

### Removal

To remove the key cover, gently release the retaining fingers using a small, flat-blade screwdriver or similar tool. Be sure to follow the same removal angle as during installation.

©2013 Whelen Engineering Company Inc.  
Form No.14701 (061213)

For warranty information regarding this product, visit [www.whelen.com/warranty](http://www.whelen.com/warranty)

# WHELEN<sup>®</sup>

ENGINEERING COMPANY INC.


51 Winthrop Road,  
Chester, Connecticut 06412-0684  
Phone: (860) 526-9504  
Fax: (860) 526-4078

## Installation: Sapphire Control Head Keypad Identification Label

Internet: [www.whelen.com](http://www.whelen.com)  
Sales e-mail: [autosale@whelen.com](mailto:autosale@whelen.com)  
Canadian Sales e-mail: [canadiansales@whelen.com](mailto:canadiansales@whelen.com)  
Customer Service e-mail: [custserv@whelen.com](mailto:custserv@whelen.com)

### Installation

1. Remove the appropriate key cover from the sprue.
2. Remove the label that best describes the function of the designated button from the label sheet.
3. Position the label onto the key so that it is centered and oriented properly.
4. Press the key cover onto the key until the retaining fingers lock into place. **NOTE! The key cover must be square to the control head during installation. Do not force the cover onto the key!**

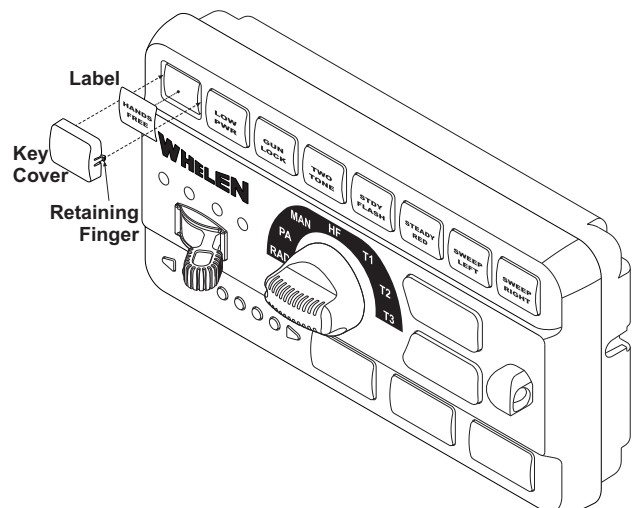

### Removal

To remove the key cover, gently release the retaining fingers using a small, flat-blade screwdriver or similar tool. Be sure to follow the same removal angle as during installation.

©2013 Whelen Engineering Company Inc.  
Form No.14701 (061213)

For warranty information regarding this product, visit [www.whelen.com/warranty](http://www.whelen.com/warranty)