

WHELEN[®]


ENGINEERING COMPANY INC.

51 Winthrop Road,
Chester, Connecticut 06412-0684
Phone: (860) 526-9504
Fax: (860) 526-4078

Replaceable Bulb Guide: 35 Watt

Internet: www.whelen.com
Sales e-mail: autosale@whelen.com
Canadian Sales e-mail: autocan@whelen.com
Customer Service e-mail: custserv@whelen.com

Fig. 1

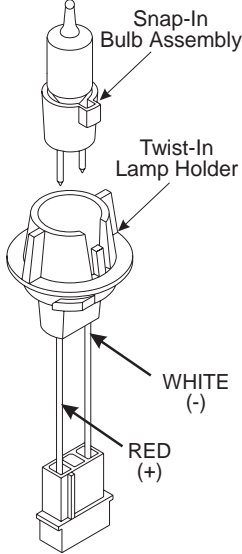

©1996 Whelen Engineering Company Inc.
Form No.13116B (110496)

CAUTION! Replacing any halogen bulb requires the use of safety glasses to prevent injury.
CAUTION! Do not handle the bulb with bare hands. Use gloves to prevent possible injury.

Your New Twist-In Lamp Holder...

This new lamp holder is installed in the same manner as your previous lamp holder. The new lamp wires connect exactly as before. Bulb replacement, however, is performed differently and this procedure is explained below. Please note that the size of some reflectors prevent bulb replacement unless the lamp holder is removed. If the bulb cannot be accessed by a screwdriver, as shown in Fig. 2, remove the lamp holder from the reflector before proceeding with bulb replacement.


To replace a Snap-In bulb...

1. Be sure the power to the lamp is turned off.
2. Insert a small, flat-blade screwdriver into the space between the twist-in lamp holder and the lamp assembly.
3. Gently rotate the screwdriver as shown in Fig. 2. Repeat this action until the bulb is loose.
4. Pull the bulb in an upward direction until it is free.
5. Insert the alignment tab of the new bulb into the bulb holder and press downwards to lock the new bulb into place.

Twist-In Lamp Holder (no bulb)
Snap-In Bulb (35 Watt)
Snap-In Bulb Assembly (Horizontal Filament 35 Watt)
Snap-In Bulb Assembly (35 Watt / 24-volt)



Fig. 2

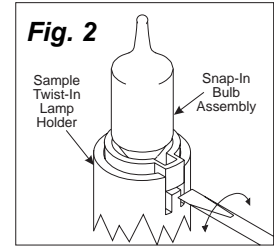

P/N - SNADAPT
P/N - H35SN12
P/N - H35HSN12
P/N - H35SN24

WHELEN[®]


ENGINEERING COMPANY INC.

51 Winthrop Road,
Chester, Connecticut 06412-0684
Phone: (860) 526-9504
Fax: (860) 526-4078

Replaceable Bulb Guide: 35 Watt

Internet: www.whelen.com
Sales e-mail: autosale@whelen.com
Canadian Sales e-mail: autocan@whelen.com
Customer Service e-mail: custserv@whelen.com

Fig. 1

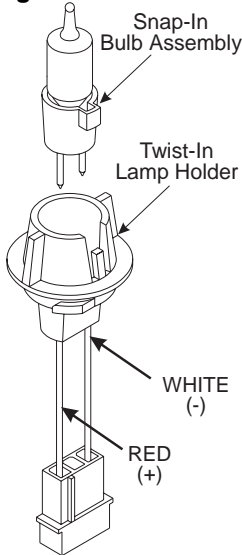

©1996 Whelen Engineering Company Inc.
Form No.13116B (110496)

CAUTION! Replacing any halogen bulb requires the use of safety glasses to prevent injury.
CAUTION! Do not handle the bulb with bare hands. Use gloves to prevent possible injury.

Your New Twist-In Lamp Holder...

This new lamp holder is installed in the same manner as your previous lamp holder. The new lamp wires connect exactly as before. Bulb replacement, however, is performed differently and this procedure is explained below. Please note that the size of some reflectors prevent bulb replacement unless the lamp holder is removed. If the bulb cannot be accessed by a screwdriver, as shown in Fig. 2, remove the lamp holder from the reflector before proceeding with bulb replacement.

To replace a Snap-In bulb...

1. Be sure the power to the lamp is turned off.
2. Insert a small, flat-blade screwdriver into the space between the twist-in lamp holder and the lamp assembly.
3. Gently rotate the screwdriver as shown in Fig. 2. Repeat this action until the bulb is loose.
4. Pull the bulb in an upward direction until it is free.
5. Insert the alignment tab of the new bulb into the bulb holder and press downwards to lock the new bulb into place.

Twist-In Lamp Holder (no bulb)
Snap-In Bulb (35 Watt)
Snap-In Bulb Assembly (Horizontal Filament 35 Watt)
Snap-In Bulb Assembly (35 Watt / 24-volt)


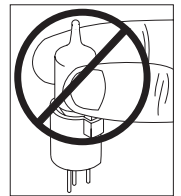


Fig. 2

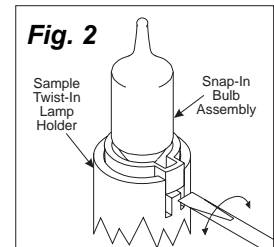

P/N - SNADAPT
P/N - H35SN12
P/N - H35HSN12
P/N - H35SN24