

WHELEN[®]

ENGINEERING COMPANY INC.

Route 145, Winthrop Road,
Chester, Connecticut 06412
Phone: (860) 526-9504
Fax: (860) 526-2009
Internet: www.whelen.com
Sales/Service e-mail: aviation@whelen.com

Installation Guide: Aviation model 7112000 P/N 01-0771120-00 Flasher/Current Source Ass'y



**TSO-C30c
TYPES I, II & III/
TSO-C96a
CLASS II
APPROVED**



The conditions and tests required for TSO approval of this article are minimum performance standards. It is the responsibility of those installing this article either on or within a specific type or class of aircraft to determine that the aircraft installation conditions are within the TSO standards. TSO articles must have separate approval for installation in aircraft. The article may be installed only if performed under 14 CFR part 43 or the applicable airworthiness requirements.

SPECIFICATIONS:

Nominal Operational Voltage:	28 VDC
Current Source Input Current:	
LED Forward Position Light	0.25 AMPS
LED Tail Position Light	0.25 AMPS
LED Anti-Collision Light (Peak@.25 Sec.)	4.5 AMPS
LED Anti-Collision Light (Avg.)	0.85 AMPS
Flashrate:	45 ±5 Per. Min.
Total Weight	0.95 lbs.

EQUIPMENT LIMITATIONS:

An approved Anti-Collision / Position Light System consists of at least 2 flasher/current source units, each connected to a LED anti-collision and position light lighthouse model 90325(), one Red and one Green.


CONTINUED AIRWORTHINESS:

The forward position light is designed with 6 LED's. The rear position light is designed with 3 LED's. The Anti-Collision light is designed with 36 LED's. If any bank of LEDs fail, the lighthouse module should be checked. If the module checks good, replace the flasher.

Note: The anti-collision light will automatically shut-off after 9-10 flashes if a failure is detected.

INSTALLATION PROCEDURES:

1. Consider areas or locations designated by the aircraft manufacturer. Check that breakers are properly rated.
2. Attach the flasher using the (4) 0.188 dia. mounting holes.
3. Connect the anti-collision inputs and the position light inputs according to the chart shown. Connect the cable from 90325() to the flasher position light. Connections to be in accordance with FAA approved methods.
4. Check all avionic systems for interference from the installation
5. A flight check should be performed by a certified pilot
6. Update aircraft records, complete form 337 and obtain FAA field approval for installation, as necessary

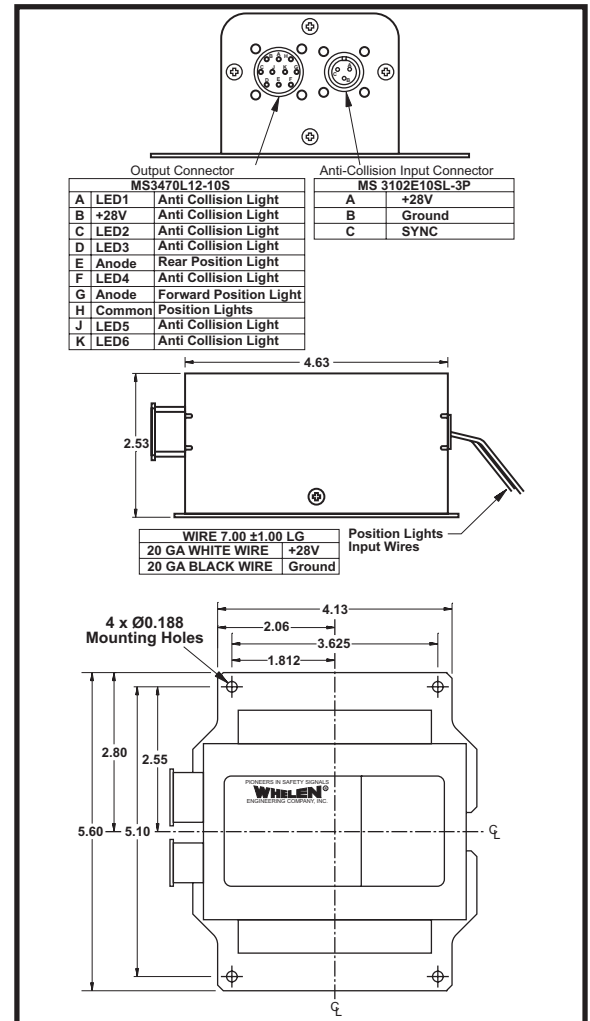

For warranty information regarding this product, visit www.whelen.com/warranty