

51 Winthrop Road
Chester, Connecticut 06412-0684
Phone: (860) 526-9504
Fax: (860) 526-4078
Sales Email: autosale@whelen.com
Canadian Sales: canadiansales@whelen.com
Customer Service: custserv@whelen.com

Safety First: This document provides all the necessary information to allow your Whelen product to be properly and safely installed. Before beginning the installation and/or operation of your new product, the installation technician and operator must read this manual completely. Important information is contained herein that could prevent serious injury or damage.

- Proper installation of this product requires the installer to have a good understanding of automotive electronics, systems and procedures.
- Whelen Engineering requires the use of waterproof butt splices and/or connectors if that connector could be exposed to moisture.
- Any holes, either created or utilized by this product, should be made both air and watertight using a sealant recommended by your vehicle manufacturer.
- Failure to use specified installation parts and/or hardware will void the product warranty!
- If mounting this product requires drilling holes, the installer **MUST** be sure that no vehicle components or other vital parts could be damaged by the drilling process. Check both sides of the mounting surface before drilling begins. Also de-burr any holes and remove any metal shards or remnants. Install grommets into all wire passage holes.
- Do not install this product or route any wires in the deployment area of your air bag. Equipment mounted or located in the air bag deployment area will damage or reduce the effectiveness of the air bag, or become a projectile that could cause serious personal injury or death. Refer to your vehicle owner's manual for the air bag deployment area. The User/Installer assumes full responsibility to determine proper mounting location, based on providing ultimate safety to all passengers inside the vehicle.
- For this product to operate at optimum efficiency, a good electrical connection to chassis ground must be made. The recommended procedure requires the product ground wire to be connected directly to the **NEGATIVE (-)** battery post.
- If this product uses a remote device to activate or control this product, make sure that this control is located in an area that allows both the vehicle and the control to be operated safely in any driving condition.
- Do not attempt to activate or control this device in a hazardous driving situation.
- This product contains either strobe light(s), halogen light(s), high-intensity LEDs or a combination of these lights. Do not stare directly into these lights. Momentary blindness and/or eye damage could result.
- Use only soap and water to clean the outer lens. Use of other chemicals could result in premature lens cracking (crazing) and discoloration. Lenses in this condition have significantly reduced effectiveness and should be replaced immediately. Inspect and operate this product regularly to confirm its proper operation and mounting condition. Do not use a pressure washer to clean this product.
- **WARNING!** All customer supplied wires that connect to the positive (+) terminal of the battery must be sized to supply at least 125% of the maximum operating current and **FUSED "at the battery"** to carry that load. **DO NOT USE CIRCUIT BREAKERS WITH THIS PRODUCT!**
- **FAILURE TO FOLLOW THESE PRECAUTIONS AND INSTRUCTIONS COULD RESULT IN DAMAGE TO THE PRODUCT OR VEHICLE AND/OR SERIOUS INJURY TO YOU AND YOUR PASSENGERS!**

IMPORTANT NOTES!

- It is the responsibility of the installer to make sure that the high beam and low beam filaments of a dual filament bulb never come on together. The excessive heat generated by this condition will melt the headlight assembly. The brown disable wire may have to be connected to the parking lights or the low beams to override the flasher and prevent both filaments from coming on simultaneously. The use of a flashing headlight system may be regulated by state, county, or municipal authorities. It is the responsibility of the end user to comply with these regulations.
- This product may be wired in one of the two ways shown above. Contact the vehicle manufacturer to determine the proper wiring style for your vehicle.
- Before attempting the installation of this headlight flasher, thoroughly read and understand instructions and steps shown below!
- Disconnect the battery from the electrical system before attempting any part of this installation!
- All customer supplied wires that connect to the positive terminal of the battery must be sized to supply at least 125% of the maximum operating current and **FUSED** at the battery to carry the load. **DO NOT USE CIRCUIT BREAKERS WITH THIS PRODUCT!**

Installation

The flasher should be mounted in the engine compartment within reach of the vehicle headlight circuit. Do not mount the unit directly on the engine or close to the exhaust system.

After the proper wiring style has been determined (see note above), wire the flasher accordingly using the appropriate wiring diagram and corresponding information.

Wiring:


Note - The instrument panel high beam indicator will flash when the flasher is active. This could interfere with the vehicle's electrical system.

BRN - Connect this wire to the parking light or low beam circuit to disable the flasher when headlights are on. This is to prevent both filament in a dual filament bulb from being on simultaneously (or if required in your jurisdiction).

BLK - Connect to chassis ground.

BLU - Connect to the end of the cut wire from the Driver-side high beam headlight. This wire may be extended using 14 AWG wire.

YEL - Connect to end of the cut wire from the Passenger-side high beam headlight. This YELLOW wire may be extended using 14 AWG wire.

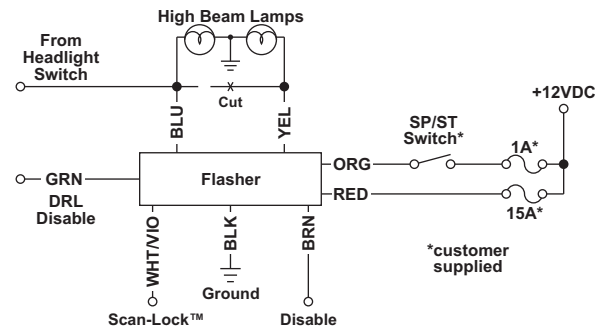

WHT/VIO - This is the Scan-Lock™ control wire. Connect this to a +12VDC powered, normally open momentary switch (200 mA min./customer supplied) fused @ 1 Amp.

ORG - This is the flasher Control wire. Connect to a +12VDC powered SP/ST switch (200 mA MIN./customer supplied) fused @ 1 Amp.

RED - Connect to the POS (+) battery terminal and fuse @ 15Amps.

GRN - This wire provides Ground when the flasher is active.

IMPORTANT! Before returning the vehicle to active service, visually confirm the proper operation of this product, as well as all vehicle components/equipment.

Scan-Lock™ Flashrate Selection

This flasher has 6 flash patterns. These patterns are selected by momentarily applying +12VDC to the WHT/VIO wire. Cap any uninsulated wire when not in use. Flash pattern control is as follows:

TO CYCLE THROUGH ALL FLASH PATTERNS: Apply +12VDC for less than 1 second and release to cycle forward to the next pattern. Apply +12VDC for more than 1 second and release to cycle back to the previous pattern.

TO SET A FLASH PATTERN AS A DEFAULT: When the desired flash pattern is displayed, allow it to run for at least 5 seconds. That pattern will now be displayed when the flasher is activated.

Flash Patterns:

1. SingleFlash 75 - Alt. / SingleFlash 75 - Sim. (default)
2. SingleFlash 75 - Alt.
3. SingleFlash 75 - Sim.
4. SingleFlash 280 - Alt.
5. DoubleFlash 140 / SingleFlash 140 - Sim.
6. DoubleFlash 140 / SingleFlash 280 - Sim.